

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KYOCERA](#) /

› [KYOCERA TK-5217K Black Toner Cartridge User Manual for TASKalfa 406ci](#)

KYOCERA TK-5217

KYOCERA TK-5217K Black Toner Cartridge User Manual

For KYOCERA TASKalfa 406ci Printers

INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your KYOCERA Genuine TK-5217K Black Toner Cartridge. Please read these instructions carefully before use to ensure optimal performance and longevity of your printer and cartridge.

The KYOCERA TK-5217K toner cartridge is designed specifically for use with KYOCERA TASKalfa 406ci multifunction printers.

PRODUCT OVERVIEW

The KYOCERA TK-5217K is a genuine black toner cartridge engineered to deliver consistent print quality and reliable performance. It is a standard yield cartridge, providing an estimated page yield of up to 20,000 pages.

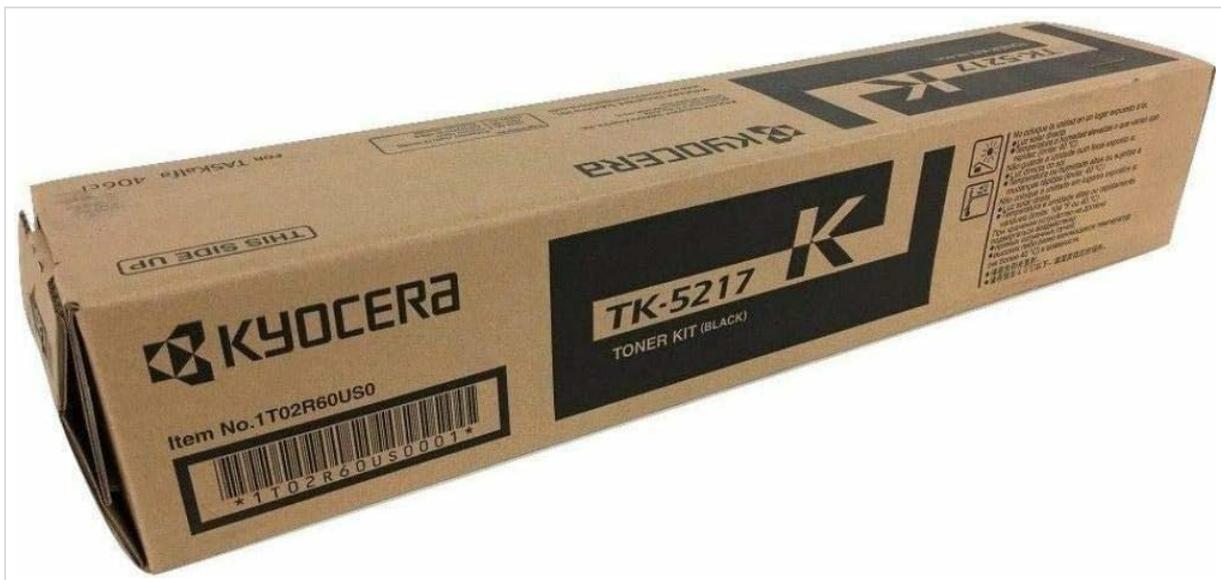


Image: KYOCERA TK-5217K Black Toner Cartridge. This image displays the toner cartridge in its retail packaging, highlighting the product's appearance and branding.

This cartridge contains solvent-free toner, designed for efficient fusing at lower temperatures, contributing to both print quality and environmental considerations.

SETUP AND INSTALLATION

Follow these general steps to install the KYOCERA TK-5217K Black Toner Cartridge. Always refer to your KYOCERA TASKalfa 406ci printer's specific user manual for detailed, model-specific instructions.

1. **Unpack the Cartridge:** Carefully remove the new toner cartridge from its packaging. Avoid touching the drum or electrical contacts.
2. **Gently Shake the Cartridge:** Before installation, gently rock the toner cartridge horizontally several times to distribute the toner evenly inside.
3. **Open the Printer's Front Cover:** Locate and open the front cover or toner access door on your KYOCERA TASKalfa 406ci printer.
4. **Remove the Old Cartridge:** Grasp the handle of the used toner cartridge and pull it straight out of the printer. Place the old cartridge in a protective bag for recycling.
5. **Insert the New Cartridge:** Align the new TK-5217K toner cartridge with the guides in the printer and push it firmly until it clicks into place. Ensure it is securely seated.
6. **Close the Printer's Front Cover:** Close the front cover or toner access door. The printer may perform a brief initialization cycle.
7. **Print a Test Page:** After installation, print a test page or a small document to confirm proper installation and print quality.

Important: Do not force the cartridge into place. If it does not slide in easily, recheck its alignment. Keep toner cartridges out of reach of children.

OPERATING INSTRUCTIONS

Once the KYOCERA TK-5217K toner cartridge is correctly installed, the printer will automatically detect it and prepare for printing. No specific user operation is required for the toner cartridge itself beyond proper installation.

- **Monitor Toner Levels:** Your KYOCERA TASKalfa 406ci printer will display toner level warnings when the cartridge is nearing empty. Replace the cartridge when prompted or when print quality degrades significantly.
- **Print Quality:** If print quality issues arise, ensure the cartridge is properly seated and refer to the troubleshooting section of this manual or your printer's user guide.

MAINTENANCE

The KYOCERA TK-5217K Black Toner Cartridge is a sealed unit and requires no user maintenance. Do not attempt to refill or disassemble the cartridge, as this can damage the unit and void any warranty.

- **Storage:** Store unused toner cartridges in their original, sealed packaging in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Disposal:** Dispose of empty toner cartridges responsibly. KYOCERA offers recycling programs for their genuine toner cartridges. Visit the official KYOCERA website for recycling information.

TROUBLESHOOTING

If you encounter issues after installing your KYOCERA TK-5217K toner cartridge, consider the following common solutions:

- **"Toner Low" or "Replace Toner" Message:**

- Ensure the new cartridge is correctly installed and fully seated.
 - If the message persists after installing a new cartridge, restart the printer.
- **Poor Print Quality (Faded, Streaky, or Inconsistent Prints):**
 - Gently remove the cartridge and rock it horizontally a few times to redistribute toner, then reinsert it.
 - Check if the cartridge is a genuine KYOCERA product. Non-genuine cartridges may cause compatibility or quality issues.
 - Perform a printer cleaning cycle or calibration from your printer's control panel or software. Refer to your printer's manual for instructions.
 - **Cartridge Not Recognized:**
 - Remove the cartridge and check for any protective seals or tabs that may not have been removed.
 - Ensure the cartridge is inserted correctly and fully seated.
 - Clean the electrical contacts on the cartridge and inside the printer with a lint-free cloth.
 - Restart the printer.

If these steps do not resolve the issue, consult your KYOCERA TASKalfa 406ci printer's user manual or contact KYOCERA customer support.

SPECIFICATIONS

Attribute	Detail
Model Name	TK-5217K
Part Number	1T02R60US0
Color	Black
Page Yield	Up to 20,000 pages
Compatible Devices	KYOCERA TASKalfa 406ci Copier, Printer
Item Weight	1.94 Pounds (approx. 0.88 kg)
Item Dimensions (D x W x H)	4"D x 18"W x 4"H (approx. 10.16cm D x 45.72cm W x 10.16cm H)
Included Components	Toner Cartridge

WARRANTY AND SUPPORT

The KYOCERA TK-5217K Black Toner Cartridge is covered by a manufacturer's warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the documentation included with your product or visit the official KYOCERA website.

For technical assistance, troubleshooting beyond the scope of this manual, or warranty claims, please contact KYOCERA customer support directly. You can find contact information on the official KYOCERA website or in your printer's documentation.

Official KYOCERA Website: www.kyoceradocumentsolutions.com

