

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [S.M.S.L](#) /

> [S.M.S.L Audio Remote Control User Manual for AD18, SA300, M400, M500, M200, Q5 PRO, DA-8, SH-8, DP3, SK10th, SU-8](#)

S.M.S.L Universal Remote Control for S.M.S.L Audio Devices

S.M.S.L Audio Remote Control User Manual

For AD18, SA300, M400, M500, M200, Q5 PRO, DA-8, SH-8, DP3, SK10th, SU-8

1. INTRODUCTION

Welcome to the user manual for your S.M.S.L Audio Remote Control. This remote is designed to provide convenient control over various S.M.S.L audio devices.

This remote control is compatible with a range of S.M.S.L models, including AD18, SA300, M400, M500, M200, Q5 PRO, DA-8, SH-8, DP3, SK10th, and SU-8. It utilizes infrared (IR) technology to communicate with your audio components.

2. SETUP

2.1 Battery Installation

Your remote control requires two (2) AAA batteries for operation. Please follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover by sliding or pressing the latch.
3. Insert two AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.



Image: S.M.S.L Audio Remote Control. The back of the remote shows the battery compartment, which requires two AAA

batteries.

2.2 Device Selection

This remote control features A, B, and C buttons, typically located at the top, to select the specific S.M.S.L device you wish to control. This allows the remote to send the correct commands for different models.

To ensure proper functionality, press the corresponding button (A, B, or C) for your device before attempting to use other functions. If the remote does not respond, verify that the correct device mode is selected.

3. OPERATING INSTRUCTIONS

3.1 General Use

Point the remote control directly at the infrared (IR) receiver of your S.M.S.L audio device. Ensure there are no physical obstructions between the remote and the device that could block the signal.

For optimal performance, maintain a clear line of sight. Please note that this remote may be highly directional, requiring precise aiming towards the device's IR sensor.

3.2 Button Functions (General)

The remote control provides various buttons for common functions. While specific button layouts and functions may vary slightly depending on the S.M.S.L device being controlled, typical functions include:

- **Power Button:** Turns the connected S.M.S.L device on or off.
- **Volume Up/Down:** Adjusts the audio output level of the device.
- **Input/Source Selection:** Cycles through available audio inputs (e.g., USB, Optical, Coaxial, Bluetooth).
- **Mute Button:** Silences the audio output.
- **Navigation Buttons (Up, Down, Left, Right, OK/Enter):** Used for menu navigation and selection on compatible devices with display screens.
- **Menu/Setup Button:** Accesses the device's settings menu for configuration.

For detailed information on specific button functionality, please refer to the user manual provided with your particular S.M.S.L audio device.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes inconsistent, weak, or stops working entirely. Always replace both AAA batteries simultaneously with new, fresh batteries. Do not mix old and new batteries or different battery types.

4.2 Cleaning

Wipe the remote control with a soft, dry cloth to remove dust and fingerprints. Do not use liquid cleaners, solvents, or abrasive materials, as they may damage the remote's surface, buttons, or internal components.

5. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are correctly inserted and have sufficient charge. Replace both batteries if necessary.
 - Ensure a clear line of sight between the remote's IR emitter and the S.M.S.L device's IR receiver. Remove any obstructions.
 - Verify that the correct device mode (A, B, or C button) is selected for the S.M.S.L audio component you intend to control.
- **Poor responsiveness or highly directional operation:**
 - This remote may require precise aiming. Ensure you are pointing it directly at the device's IR sensor.
 - Strong ambient light sources (e.g., direct sunlight, bright fluorescent lights) can sometimes interfere with the IR signal. Try reducing such interference.
 - **Buttons not performing expected functions:**
 - Confirm the remote is in the correct device mode (A, B, or C) for your specific S.M.S.L unit.
 - Consult the user manual for your specific S.M.S.L audio device to understand its remote control functions and compatibility.

6. SPECIFICATIONS

- **Product Dimensions:** 5.91 x 1.38 x 0.43 inches (15 x 3.5 x 1.1 cm)
- **Item Weight:** 1.44 ounces (40.8 grams)
- **Batteries:** 2 AAA batteries (required)
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** S.M.S.L AD18, SA300, M400, M500, M200, Q5 PRO, DA-8, SH-8, DP3, SK10th, SU-8, and other compatible S.M.S.L audio components.
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 3 (via A/B/C selection buttons)

7. WARRANTY AND SUPPORT

For warranty information or technical support regarding your S.M.S.L Audio Remote Control, please refer to the documentation provided with your S.M.S.L audio device or contact S.M.S.L customer service directly.

You can often find the most up-to-date support information and contact details on the official S.M.S.L website.