

[Manuals.plus](#) /

› [Indesit](#) /

› Indesit BTWD61053 6 Kg Top Load Washing Machine User Manual

Indesit BTW D61053 (EU)

Indesit BTWD61053 Top Load Washing Machine User Manual

Model: BTW D61053 (EU)

PRODUCT OVERVIEW

The Indesit BTWD61053 is a 6 kg top load washing machine designed for efficient and convenient laundry care. It features a 1000 RPM spin speed, 14 washing programs, and smart fault detection for reliable operation. Its compact dimensions make it suitable for various living spaces.



Figure 1: Front view of the Indesit BTWD61053 Top Load Washing Machine. This image shows the appliance's overall design, including the top-loading lid, control panel, and the circular access point at the bottom front.

SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your washing machine. Please follow these general guidelines. For detailed instructions, refer to the full installation guide provided with your appliance.

Unpacking

- Carefully remove all packaging materials, including the polystyrene base and any protective film.
- Inspect the machine for any transit damage. If damage is found, do not install or operate the appliance and contact

customer support.

- Remove all transit bolts from the rear of the machine. Keep these bolts for future transport if needed.

Location and Leveling

- Place the washing machine on a firm, level floor. Avoid placing it on carpets or soft flooring that could obstruct ventilation.
- Ensure there is adequate space around the machine for air circulation and maintenance.
- Adjust the leveling feet at the bottom of the machine to ensure it is perfectly stable and level. This prevents excessive vibration and noise during operation.

Water and Electrical Connections

- Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the connection is tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.
- Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of the appliance. Do not use extension cords or adapters.

OPERATING INSTRUCTIONS

Your Indesit washing machine is equipped with a digital display and intuitive controls for easy operation.

Control Panel Overview

The control panel features a digital display showing program information, temperature, spin speed, and remaining time. It also includes a program selector knob and various function buttons.

Loading Laundry

- Open the top lid and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely.
- Add appropriate detergent and fabric softener to the dispenser compartments.
- Close the lid securely.

Selecting a Program

The machine offers 14 washing programs to suit various fabric types and soil levels.

1. Turn the program selector knob to choose your desired washing program. The digital display will show the default temperature and spin speed for that program.
2. **Pre-Wash:** For heavily soiled items, select a program that includes a pre-wash cycle.
3. **Extra Rinse:** For baby clothes or individuals sensitive to detergents, activate the Extra Rinse function to ensure thorough removal of detergent residues.
4. Adjust temperature and spin speed settings using the corresponding buttons if desired.

Starting a Wash Cycle

- Press the Start/Pause button to begin the selected wash cycle.
- The machine features an **Auto Balance System** to ensure stable operation by redistributing the load during the spin cycle.
- The **Smart Fault Detection System** continuously monitors the machine's performance and will display error codes if an issue is detected.

MAINTENANCE AND CARE

Regular maintenance helps ensure the longevity and optimal performance of your washing machine.

Cleaning the Detergent Dispenser

- Periodically remove the detergent dispenser drawer and rinse it under warm water to remove any detergent or softener residue.
- Clean the housing of the dispenser with a brush.

Cleaning the Drum

- Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent or washing machine cleaner) once a month to prevent odor and limescale buildup.
- Wipe the inside of the drum and the rubber seal around the lid with a damp cloth after each wash to prevent mold growth.

Cleaning the Filter (if applicable)

- Locate the drain pump filter, usually at the bottom front of the machine (refer to Figure 1 for general location).
- Place a shallow container beneath the filter to catch any residual water.
- Carefully unscrew and remove the filter. Clean any lint, debris, or foreign objects.
- Rinse the filter under running water and reinsert it securely.

Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

The Smart Fault Detection System helps identify common issues. If an error code appears on the digital display, consult the full user manual for specific solutions. Below are some general troubleshooting tips for common problems.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; lid not closed properly; program not selected.	Check power connection; ensure lid is fully closed; select a program and press Start.
Water not filling	Water tap closed; inlet hose kinked or blocked.	Open water tap; straighten hose; check for blockages.
Water not draining	Drain hose kinked or blocked; drain pump filter clogged.	Straighten hose; clean drain pump filter.
Excessive vibration/noise	Machine not level; transit bolts not removed; uneven load.	Adjust leveling feet; ensure all transit bolts are removed; redistribute laundry evenly.
Detergent residue on clothes	Too much detergent; dispenser clogged; insufficient rinse.	Reduce detergent amount; clean dispenser; select Extra Rinse option.

If the problem persists after attempting these solutions, please contact Indesit customer support.

SPECIFICATIONS

Feature	Detail
Brand	Indesit
Model Number	BTW D61053 (EU)
Type	Top Load Washing Machine
Capacity	6 kg / 42 Liters
Maximum Spin Speed	1000 RPM
Dimensions (H x W x D)	90 cm x 40 cm x 60 cm (approx. 35.43 x 15.75 x 23.62 inches)
Item Weight	54 kg (approx. 123.5 pounds)
Number of Programs	14
Control Console	Push Button
Special Features	Smart Connectivity, Temperature Control, Auto Balance System, Smart Fault Detection System
Energy Efficiency	Energy Efficient

WARRANTY AND SUPPORT

Product Warranty

This Indesit washing machine comes with a **12-month warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use conditions. It does not cover damage caused by misuse, improper installation, or unauthorized repairs.

Customer Support

Indesit is committed to providing quality customer care and assistance for its domestic appliances.

- **Book an Engineer:** If you require assistance or a repair, you can book an appointment with one of our qualified engineers. Visit the official Indesit website for scheduling.
- **Troubleshooting and Manuals:** Browse through comprehensive troubleshooting guides and additional appliance manuals on the Indesit support portal for self-help solutions.
- **Spare Parts:** For genuine replacement parts, visit our online spare parts shop.

For further assistance, please visit the official Indesit support website or contact their customer service hotline.

