

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Baby Alive](#) /

› Baby Alive Potty Dance Baby Doll Instruction Manual (Model E0609)

Baby Alive E0609

Baby Alive Potty Dance Baby Doll Instruction Manual

Model: E0609

[Introduction](#) [What's in the](#)

[Box](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

The Baby Alive Potty Dance Baby doll is designed to provide an interactive play experience, simulating potty training. This doll features over 50 phrases and songs, responds to feeding, and "pees" on her potty. It includes accessories to enhance the play experience, such as a bottle, potty, rewards chart, and pretend soap dispenser.

WHAT'S IN THE BOX

- Baby Alive Potty Dance Baby Doll
- Removable Outfit
- Potty
- Bottle
- Pretend Soap Dispenser
- Comb
- Rewards Chart
- Stickers
- Undies
- 4 AAA Batteries (included)

AGES
3+



OVER 50 SOUNDS AND SONGS

Image: The Baby Alive Potty Dance Baby doll in its packaging, showcasing the doll and included accessories like the potty, bottle, and rewards chart.

SETUP

1. **Unboxing:** Carefully remove the doll and all accessories from the packaging.
2. **Battery Installation:** The doll requires 4 AAA batteries, which are included. Locate the battery compartment on the doll's back, usually under a fabric flap or secured with a small screw. Use a Phillips head screwdriver to open the compartment. Insert the batteries, ensuring correct polarity (+/-). Securely close the compartment.
3. **Language Mode Selection:** The doll features a switch to select between Mommy and Daddy modes, and also English or Spanish language. Locate this switch on the doll's back and set it to your preferred mode and language.

OPERATING INSTRUCTIONS

1. Talking and Dancing

- The doll can say over 50 phrases and sing songs.

- To activate phrases and songs, interact with the doll by pressing her tummy or holding her left hand.
- Holding her left hand will also make her dance.



**HOLD HER
LEFT HAND AND
SHE'LL DANCE!**

Image: A child holding the doll's left hand, demonstrating how to activate the dancing feature.

2. Feeding and Potty Use

- Fill the included bottle with water.
- Feed the doll water from her bottle. She will say phrases like "Uh oh! I gotta go!"
- Place the doll on her potty. She is designed to "pee" on the potty after drinking.



Image: The Baby Alive Potty Dance Baby doll sitting on her green potty, ready to "tinkle" after being fed from her bottle.

3. Rewards Chart and Hygiene

- After the doll successfully uses the potty, use the included stickers to mark her progress on the rewards chart.
- Use the pretend soap dispenser to simulate cleaning the doll's hands after potty use.
- Brush her soft hair with the included comb.



Image: A child celebrating the doll's potty success by placing a sticker on the rewards chart, with the doll sitting on her potty nearby.

4. Official Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the features of the Baby Alive Potty Dance Baby doll, including talking, drinking, and using the potty.

MAINTENANCE

- **Cleaning the Doll:** Wipe the doll's surface with a damp cloth. Do not submerge the doll in water, as this can damage electronic components.
- **Cleaning the Potty:** The potty can be washed with mild soap and water. Ensure it is completely dry before storing.
- **Battery Care:** When the doll's sounds or movements become weak, replace all 4 AAA batteries with new ones. Do not mix old and new batteries, or different types of batteries. Remove batteries if the doll will not be used for an extended period.
- **Hair Care:** Use the included comb to gently brush the doll's hair. Avoid using heat styling tools or harsh chemicals on the doll's hair.

TROUBLESHOOTING

Problem	Solution
Doll not making sounds or moving.	Check battery compartment. Ensure batteries are correctly installed and not depleted. Replace with fresh AAA batteries if necessary. Verify the language/mode switch is in an active position.
Doll not "peeing" on the potty.	Ensure the doll has been fed sufficient water from her bottle. Place the doll firmly on the potty. The doll is designed to activate the "peeing" function when correctly seated on the potty.
Doll's movements are sluggish.	This usually indicates low battery power. Replace all batteries with new ones.

SPECIFICATIONS

- **Model Number:** E0609
- **Product Dimensions:** 4.75 x 15 x 16 inches
- **Item Weight:** 3 pounds
- **Recommended Age:** 3 years and up
- **Batteries:** 4 AAA batteries (included)
- **Language:** English, Spanish
- **Manufacturer:** Hasbro

WARRANTY & SUPPORT

For warranty information or product support, please refer to the manufacturer's official website or contact their customer service directly. Details are typically provided in the product packaging or on the manufacturer's website.