

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Tefal](#) /
- › [T-Fal Actifry Electric Fryer Instruction Manual](#)

Tefal FZ710851

T-Fal ActiFry Electric Fryer Instruction Manual

Model: FZ710851 | Brand: Tefal

PRODUCT OVERVIEW

The T-Fal ActiFry features a patented hot air system and a unique stirring paddle, designed to ensure excellent and even cooking results. This innovative design eliminates the need for constant shaking or stirring, providing a hands-free cooking experience. The appliance includes a steam-free lid and a transparent viewing window, allowing you to monitor your food's progress without interruption. For convenience, the lid, cooking bowl, and stirring paddle are all removable and dishwasher safe, simplifying cleanup.



Figure 1: T-Fal ActiFry Electric Fryer, Black

Key Features

- Cooks up to 2.2 lb of food with a tablespoon or less of oil.
- Simple on/off switch and digital countdown timer with buzzer for easy monitoring.
- Secure lid for safe, splatter-free cooking.
- Compact dimensions: 17.1 inches L x 12.5 inches W x 8.3 inches H.

SETUP

Before first use, ensure all removable parts (lid, cooking bowl, stirring paddle) are thoroughly cleaned with warm, soapy water and dried. Place the ActiFry on a stable, heat-resistant surface, ensuring adequate ventilation around the unit. Connect the power cord to a suitable electrical outlet.



Figure 2: Internal view of the ActiFry with the lid open, showing the cooking bowl and stirring paddle.

OPERATING INSTRUCTIONS

1. **Prepare Food:** Place your desired food items into the cooking bowl. For best results, ensure food is cut into uniform pieces.
2. **Add Oil:** Measure a tablespoon or less of cooking oil using the provided spoon (if applicable) and drizzle it over the

food. The ActiFry is designed for minimal oil use.

1 Tablespoon of Oil or Less



Figure 3: Adding a small amount of oil to food in the ActiFry.

3. **Close Lid:** Securely close the transparent lid.
4. **Set Time:** Use the digital countdown timer to set the desired cooking duration. Refer to the cooking guide in your recipe book or the appliance's surface for recommended times for various foods.

Digital Countdown Timer



Figure 4: Digital countdown timer and control buttons.

5. **Start Cooking:** Press the On/Off button to begin the cooking process. The stirring paddle will automatically rotate to ensure even cooking.
6. **Monitor Progress:** The transparent lid allows you to visually monitor the cooking progress.
7. **Pause/Stop:** To pause cooking and open the lid, press the grey button on the side of the unit. The stirring paddle will stop. Close the lid and press the On/Off button to resume.
8. **Serve:** Once cooking is complete and the buzzer sounds, carefully open the lid and remove the cooked food.

MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your T-Fal ActiFry. The cooking bowl, stirring paddle, and lid are designed for easy removal and are dishwasher safe. For the main unit, wipe it down with a damp cloth. Do not immerse the main unit in water. Ensure all parts are completely dry before reassembly and storage.

TROUBLESHOOTING

- **Unit Not Turning On:** Ensure the power cord is securely plugged into both the appliance and a working electrical outlet. Check if the lid is properly closed and latched.
- **Food Not Cooking Evenly:** Ensure the stirring paddle is correctly installed and rotating freely. Do not overload the cooking bowl; adhere to the maximum capacity of 2.2 lb.
- **Timer Not Stopping Fryer:** The digital timer is primarily for notification. Always monitor food visually, especially towards the end of the cooking cycle. Manually press the On/Off button to stop cooking if needed.
- **Lid Not Closing Completely:** Check for any food debris or obstructions around the lid's hinge or sealing area. Ensure the cooking bowl and stirring paddle are correctly seated.

SPECIFICATIONS

- **Model Name:** Actifry
- **Model Number:** FZ710851
- **Color:** Black
- **Capacity:** 1 Liters (approx. 2.2 lb food)
- **Material:** Plastic
- **Item Weight:** 3.1 Pounds
- **Product Dimensions:** 11.7 x 19.1 x 15.6 inches
- **Control Method:** Touch
- **Nonstick Coating:** Yes
- **Dishwasher Safe Parts:** Yes (Lid, Bowl, Paddle)
- **UPC:** 010942223542
- **Manufacturer:** T-Fal
- **First Available:** October 25, 2017

WARRANTY & SUPPORT

For detailed warranty information and customer support, please refer to the documentation included with your T-Fal ActiFry Electric Fryer or visit the official Tefal website. You can also visit the [T-Fal Store on Amazon](#) for additional product information and resources.