

[Manuals.plus](#) /

› [Flexson](#) /

› Flexson Wall Mount for SONOS One (Pair, White) Instruction Manual

Flexson FLXS1WM2011

Flexson Wall Mount for SONOS One (Pair, White) Instruction Manual

Model: FLXS1WM2011

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Flexson Wall Mount for SONOS One speakers. Please read these instructions carefully before installation to ensure proper setup and safe use.



Image: Flexson Wall Mounts with Sonos One speakers.

SETUP AND INSTALLATION

Before beginning installation, ensure you have all necessary components and tools. The package includes fixing hardware suitable for brick/masonry or wood/studwork.

Package Contents:

- Flexson Wall Mounts (Pair, White)
- Fixing hardware (screws, wall plugs)
- Instruction manual (this document)

Recommended Tools (Not Included):

- Power drill
- Spirit level
- Pencil
- Screwdriver

Installation Steps:

1. **Choose Location:** Select a suitable wall location for your SONOS One speaker. Consider optimal sound projection and accessibility. Ensure the wall material can support the weight of the mount and speaker.
2. **Mark Drilling Points:** Hold the wall mount bracket against the wall at the desired height and use a spirit level to ensure it is straight. Mark the drilling points through the screw holes with a pencil.



Image: Wall mount bracket with screw holes.

3. **Drill Holes:** Using an appropriate drill bit for your wall type (brick/masonry or wood/studwork), drill holes at the marked points.
4. **Insert Wall Plugs (if applicable):** For brick/masonry walls, insert the provided wall plugs into the drilled holes.
5. **Attach Wall Bracket:** Align the wall mount bracket with the drilled holes and secure it to the wall using the provided screws. Ensure the bracket is firmly attached and stable.



Image: Side view of the wall mount attached to a wall.

6. **Attach Speaker to Mount:** Carefully slide your SONOS One speaker onto the mount. The mount is designed to seamlessly fit the speaker base, holding it securely.



Image: Sonos One speaker mounted.

7. **Cable Management:** Route the speaker's power cable through the integrated cable management system on the mount for a tidy appearance.
8. **Inverting the Speaker (Optional):** The mount allows the SONOS One to be inverted (mounted upside down). This is useful if mounting higher on the wall, as it keeps the gesture controls and microphone easily accessible.



Image: Sonos One speaker mounted upside down.

OPERATION AND ADJUSTMENT

The Flexson Wall Mount offers flexibility in positioning your SONOS One speaker for optimal sound direction.

- **Tilting:** The mount features a unique tilting mechanism, allowing you to angle the speaker downwards by up to 15 degrees.
- **Swiveling:** You can swivel the speaker up to 80 degrees (40 degrees left, 40 degrees right) to direct sound precisely where needed.

Adjust the tilt and swivel by gently moving the speaker to the desired position. The mount is designed to hold the speaker securely once positioned.

MAINTENANCE

To ensure the longevity and appearance of your Flexson Wall Mount, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the mount with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the finish.
- **Periodic Checks:** Periodically check that all screws are tight and the mount remains securely fastened to the wall. Do not overtighten.
- **Weight Limit:** Do not exceed the maximum weight capacity of 0.72 pounds. This mount is specifically designed for the SONOS One speaker.

TROUBLESHOOTING

If you encounter any issues with your Flexson Wall Mount, consider the following:

Problem	Possible Cause	Solution
Mount feels loose on the wall.	Screws are not fully tightened or wall plugs are not secure.	Ensure all mounting screws are tightened. If using wall plugs, verify they are correctly installed and suitable for your wall material.
Speaker does not stay in desired tilt/swivel position.	Adjustment mechanism may need slight tightening or is worn.	Check for any visible adjustment screws on the mount and gently tighten if present. If the issue persists, contact support.
Speaker does not fit the mount.	Incorrect speaker model or mount model.	Verify that you have the Flexson Wall Mount for SONOS One and a compatible SONOS One or Play:1 speaker.

SPECIFICATIONS

Feature	Detail
Brand	Flexson
Model Name	Flexson Wall Mount for SONOS ONE
Model Number	FLXS1WM2011
Color	White
Compatible Devices	Sonos One, Play:1
Mounting Type	Wall Mount
Additional Features	Tilt Head (down 15°), Swivel (80° total, 40° left/right)
Weight Capacity Maximum	0.72 Pounds
Item Dimensions (LxWxH)	4.53 x 7.01 x 6.54 inches
Item Weight	11.47 ounces

Feature	Detail
Enclosure Material	Alloy Steel
Included Hardware	Fixing hardware for Brick/Masonry or Wood/Studwork
UPC	652508362342

WARRANTY INFORMATION

This Flexson product comes with a **1-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper installation.

SUPPORT AND CONTACT

For further assistance, technical support, or warranty inquiries, please visit the official Flexson website or contact their customer service department. Refer to the packaging or the Flexson website for the most current contact information.

Manufacturer: Flexson

Website: www.flexson.com (Example link, please verify official website)