

Snakebyte SB912382

Instruction Manual: Game:Pad 4S (black)

Brand: Snakebyte | Model: SB912382

1. PRODUCT OVERVIEW

The Snakebyte Game:Pad 4S (black) is a high-performance wired controller designed for the Sony PlayStation 4, offering a responsive and immersive gaming experience. It features advanced motion-sensing technology and dual vibration feedback to bring your games to life.



Image 1.1: Front view of the Snakebyte Game:Pad 4S (black) controller, showcasing its ergonomic design, dual analog sticks, directional pad, action buttons (Triangle, Circle, Cross, Square), SHARE and OPTIONS buttons, and the central PS button.

Key Features:

- **Enhanced Gaming Experience:** Provides a lag-free, low-latency connection for optimal performance.
- **Immersive Gameplay:** Dual vibration feature with pressure sensors for realistic feedback.
- **Absolute Control and Precision:** Improved dual analog sticks and trigger buttons for accurate movements.
- **Comfortable Design:** Ergonomic and lightweight structure for extended gaming sessions.
- **Responsive Motion Sensors:** Built-in accelerometer and gyroscope for intuitive motion control.
- **Convenience:** Includes a 3.5mm headphone jack and an LED status home button.

2. SETUP

Follow these steps to connect your Snakebyte Game:Pad 4S (black) controller to your PlayStation 4 console:

1. Ensure your PlayStation 4 console is powered on.
2. Locate an available USB port on your PlayStation 4 console.
3. Connect the USB cable from the Snakebyte Game:Pad 4S controller into the USB port on your PS4.
4. The controller should automatically be recognized by the console. The LED status home button will illuminate to indicate a successful connection.
5. Press the PS button (home button) on the controller to assign it to a user profile on your PlayStation 4.
6. Your controller is now ready for use.

3. OPERATING INSTRUCTIONS

The Game:Pad 4S offers intuitive controls for an optimal gaming experience:

- **Analog Sticks:** Use the left and right analog sticks for precise character movement and camera control.
- **Directional Pad (D-Pad):** For menu navigation and specific in-game actions.
- **Action Buttons (Triangle, Circle, Cross, Square):** Perform various in-game actions as defined by the game.
- **SHARE Button:** Access sharing options, such as taking screenshots or recording gameplay clips.
- **OPTIONS Button:** Pause games, access in-game menus, or view options.
- **PS Button (Home Button):** Return to the PlayStation 4 home screen, switch users, or power off the console.
- **Trigger Buttons (L1, L2, R1, R2):** Used for various actions like shooting, aiming, or accelerating, depending on the game.
- **3.5mm Headphone Jack:** Connect a compatible headset for in-game audio and voice chat.
- **Motion Sensors:** The built-in accelerometer and gyroscope allow for motion-controlled gameplay in

supported titles.

4. MAINTENANCE

To ensure the longevity and optimal performance of your Snakebyte Game:Pad 4S controller, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the controller regularly. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight, extreme temperatures, and humidity when not in use.
- **Cable Care:** Avoid sharply bending or twisting the USB cable. Always grasp the plug, not the cable, when disconnecting it from the console.
- **Avoid Drops:** Protect the controller from drops and impacts, which can damage internal components.
- **No Disassembly:** Do not attempt to disassemble the controller. This will void any warranty and may cause irreparable damage.

5. TROUBLESHOOTING

If you encounter issues with your Game:Pad 4S, try the following solutions:

- **Controller Not Responding:**
 - Ensure the USB cable is securely connected to both the controller and the PS4 console.
 - Try connecting the controller to a different USB port on the PS4.
 - Restart your PlayStation 4 console.
- **Buttons or Analog Sticks Unresponsive/Sticky:**
 - Clean around the affected buttons or sticks with a soft, slightly damp cloth to remove any debris.
 - Ensure no physical obstructions are preventing full movement.
- **Vibration Not Working:**
 - Check in-game settings to ensure vibration feedback is enabled.
 - Verify that the game itself supports vibration.
- **Audio Issues with Headset:**
 - Ensure your headset is fully plugged into the 3.5mm jack.
 - Check audio output settings on your PlayStation 4.
 - Test the headset with another device to confirm it is functioning correctly.

If problems persist after attempting these solutions, please contact Snakebyte customer support.

6. SPECIFICATIONS

Feature	Detail
Model Number	SB912382
Compatibility	PlayStation 4
Connectivity	Wired (USB)
Dimensions (L x W x H)	5.91 x 2.76 x 4.33 inches
Weight	8.8 ounces
Vibration	Dual Vibration Feedback
Motion Sensors	Accelerometer, Gyroscope
Audio Port	3.5mm Headphone Jack
Release Date	April 18, 2019



7. WARRANTY & SUPPORT



For information regarding the product warranty, please refer to the warranty card included with your purchase or visit the official Snakebyte website. Keep your proof of purchase for warranty claims.

If you require technical assistance or have questions not covered in this manual, please contact Snakebyte customer support through their official channels. Details can typically be found on the product packaging or the Snakebyte website.

© 2024 Snakebyte. All rights reserved.

Related Documents - SB912382

	<p>Snakebyte GAMES: TOWER 5 for PS5 - Assembly and Safety Guide</p> <p>Comprehensive guide for assembling and safely using the Snakebyte GAMES: TOWER 5 storage and accessory solution for PlayStation 5. Includes product information, content list, assembly instructions, and safety precautions in multiple languages.</p>
	<p>snakebyte KEY:BOARD PRO™ Gaming Keyboard: Instruction Manual & Features</p> <p>Download the official instruction manual for the snakebyte KEY:BOARD PRO™ gaming keyboard. Learn about installation, media controls, RGB lighting effects, conflict-free gaming keys, safety guidelines, and technical support.</p>

	<p>Pebble Gear 7" Kids Tablet Quick Start Guide</p> <p>Quick start guide for the Pebble Gear 7" Kids Tablet, covering setup, home screen overview, accessories, and support information.</p>
	<p>SNAKEBYTE PG915420 Pebble Game Controller Quick Start Guide</p> <p>User manual and quick start guide for the SNAKEBYTE PG915420 Pebble game controller, detailing setup and usage instructions for optimal gaming.</p>