

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image TV Wireless Headphones User Manual

Sharper Image 206077

Sharper Image TV Wireless Headphones User Manual

INTRODUCTION

Thank you for choosing the Sharper Image TV Wireless Headphones. These headphones are designed to provide a high-quality, unobstructed audio experience for your television viewing. With reliable UHF stereo technology, you can enjoy clear sound without the need for Wi-Fi or Bluetooth, offering a generous 160-foot wireless range.

Key Features:

- Compatible with virtually all TVs, including Smart TVs.
- Reliable UHF stereo technology, no Wi-Fi or Bluetooth required.
- Extended 160-foot wireless range for freedom of movement.
- Comfortable design with adjustable volume control directly on the headphones.
- Up to 20 hours of playtime on a single charge.

PACKAGE CONTENTS

Please ensure all items are present in your package:

- Sharper Image TV Wireless Headphones (1 pair)
- Wireless Transmitter/Charging Dock (1 unit)
- AC Power Adapter (1 unit)
- Audio Connection Cables (e.g., 3.5mm audio cable, RCA adapter cable)
- User Manual (this document)

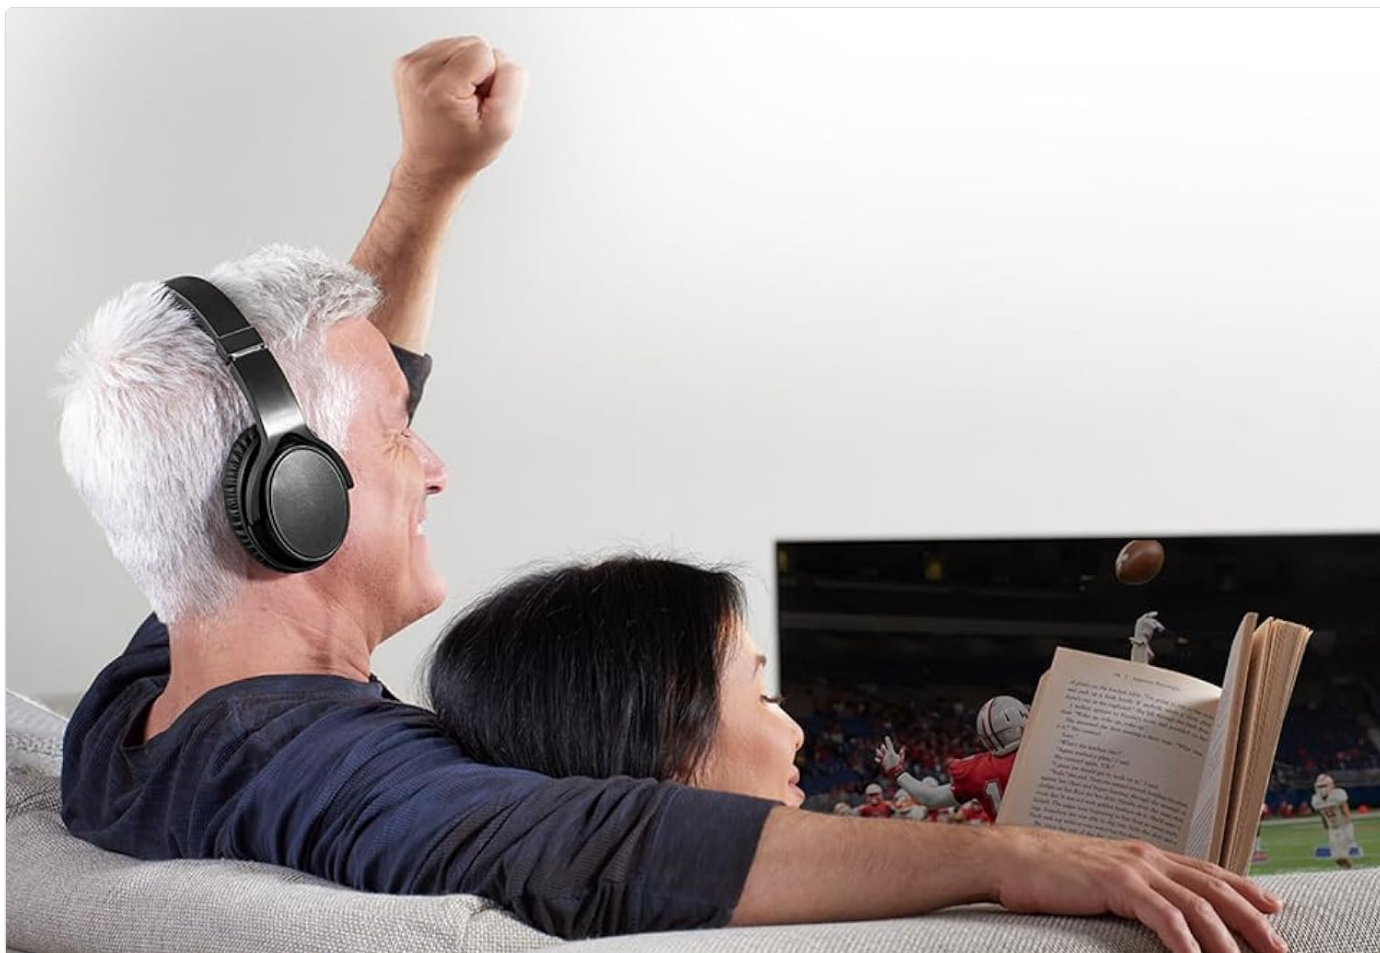


Image: The Sharper Image TV Wireless Headphones and their accompanying transmitter/charging dock.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Sharper Image TV Wireless Headphones system.

Headphones:

- **Earcups:** Padded for comfort, housing the audio drivers.
- **Headband:** Adjustable for a secure and comfortable fit.
- **Power Button:** Located on one earcup, used to turn the headphones on/off.
- **Volume Controls:** Buttons for increasing (Vol+) and decreasing (Vol-) audio volume.
- **Scan Button:** Used to automatically tune to the transmitter's signal.
- **Charging Contacts:** Located on the underside of the headband, for charging when placed on the dock.



Image: A close-up view of the headphone earcup, highlighting the volume, scan, and power controls.

Wireless Transmitter/Charging Dock:

- **Charging Cradle:** Where the headphones rest for charging and storage.
- **Power Indicator LED:** Illuminates when the transmitter is powered on.
- **Signal Indicator LED:** Shows when a signal is being transmitted.
- **Audio Input Ports:** Located on the rear, typically 3.5mm and/or RCA inputs for connecting to your TV.
- **DC Input:** For connecting the AC power adapter.

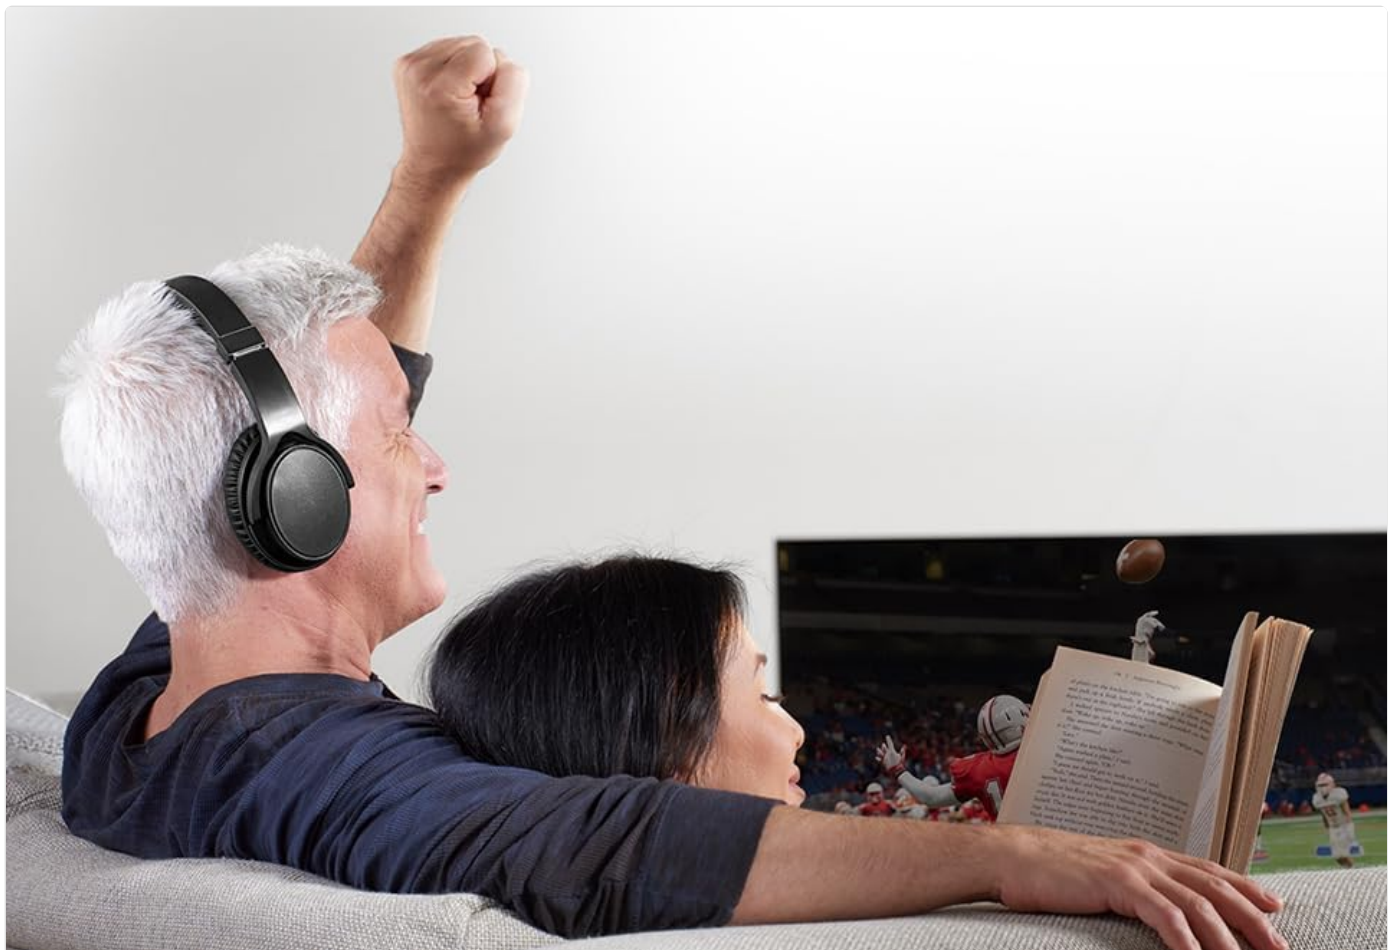


Image: The silver Sharper Image TV Wireless Headphones resting on their dedicated charging and transmitting dock.

SETUP GUIDE

Follow these steps to set up your Sharper Image TV Wireless Headphones:

1. **Connect the Transmitter to Power:** Plug the AC power adapter into the DC input port on the back of the wireless transmitter. Plug the other end of the adapter into a standard wall outlet. The Power Indicator LED on the transmitter should illuminate.
2. **Connect the Transmitter to Your TV:**
 - *Using 3.5mm Audio Out:* If your TV has a 3.5mm headphone jack, connect one end of the provided 3.5mm audio cable to the TV's headphone jack and the other end to the 3.5mm audio input on the transmitter.
 - *Using RCA Audio Out:* If your TV has red and white RCA audio output ports, connect the provided RCA adapter cable to these ports (red to red, white to white) and the 3.5mm end of the adapter to the 3.5mm audio input on the transmitter.
 - *Note:* Ensure your TV's audio output is enabled and set to a suitable volume level. Some TVs may require adjusting audio settings to output sound through external devices.
3. **Charge the Headphones:** Place the headphones onto the charging cradle of the transmitter. Ensure the charging contacts on the headphones align with the pins on the dock. The headphones should begin charging. For first use, charge for at least 3-4 hours.
4. **Power On Headphones:** Once charged, press and hold the Power button on the headphones until the indicator light illuminates.
5. **Tune to Signal:** Press the 'Scan' button on the headphones. The headphones will automatically search for and connect to the transmitter's signal. The Signal Indicator LED on the transmitter should be solid when a connection is established.
6. **Adjust Volume:** Use the Vol+ and Vol- buttons on the headphones to adjust the listening volume to your preference.

OPERATING INSTRUCTIONS

Using your Sharper Image TV Wireless Headphones is straightforward:

- **Power On/Off:** Press and hold the Power button on the headphones for approximately 3 seconds to turn them on or off.
- **Volume Control:** Use the 'Vol+' button to increase the volume and the 'Vol-' button to decrease it. Adjust to a comfortable listening level.
- **Signal Re-scan:** If you lose the audio signal or experience interference, press the 'Scan' button on the headphones to re-establish the connection with the transmitter.
- **Range:** The headphones offer a wireless range of up to 160 feet from the transmitter. Performance may vary based on environmental factors and obstacles.
- **Automatic Shut-off:** To conserve battery, the headphones may automatically power off after a period of inactivity or if no signal is detected.



Image: A user enjoying television audio privately with the Sharper Image TV Wireless Headphones.

MAINTENANCE

Proper care will extend the life of your headphones:

- **Cleaning:** Wipe the headphones and transmitter with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones on the charging dock to keep them charged and ready. Store in a cool, dry place away from direct sunlight.
- **Battery Care:** For optimal battery life, avoid fully discharging the headphones frequently. Recharge them regularly. If storing for an extended period, charge them fully every few months.
- **Avoid Moisture:** Do not expose the headphones or transmitter to water or excessive moisture.

TROUBLESHOOTING

If you encounter issues, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
No sound from headphones	Headphones not powered on Low battery No signal from transmitter TV audio output issue Incorrect audio connection	Ensure headphones are on Charge headphones fully Press 'Scan' button on headphones Check TV audio settings and volume Verify audio cables are securely connected to TV and transmitter
Sound is distorted or intermittent	Interference Out of range Low battery	Move closer to transmitter; avoid obstacles Ensure you are within 160ft range Charge headphones fully

Problem	Possible Cause	Solution
Headphones not charging	Improper placement on dock Transmitter not powered on Faulty power adapter	Ensure headphones are correctly seated on charging pins Verify transmitter power LED is on Try a different power outlet or adapter (if available)
Headphones do not work with my TV	TV lacks compatible audio output TV audio settings not configured	Confirm your TV has a 3.5mm audio out or RCA audio out ports. Digital audio (Optical/HDMI ARC) requires a separate converter (not included). Consult your TV's manual to enable analog audio output.

SPECIFICATIONS

Feature	Detail
Model Number	206077
Wireless Technology	RF (Radio Frequency)
Frequency Response	2.4 GHz
Wireless Range	Up to 160 feet
Battery Life	Up to 20 hours
Connectivity	3.5 mm Jack (for audio input to transmitter)
Earpiece Shape	Over-ear
Item Weight	1.8 Pounds
UPC	858195007539

WARRANTY AND SUPPORT

Sharper Image products are engineered for quality and performance. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Sharper Image website.

If you require further assistance or have questions not covered in this manual, please contact Sharper Image Customer Support. Contact details can typically be found on the product packaging or the official brand website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B076VNYGPJ>

More documents and user manuals: **<https://manuals.plus/>**