

Omega 324.30.38.50.55.001

Omega Speedmaster Chronograph Automatic Watch 324.30.38.50.55.001 User Manual

Model: 324.30.38.50.55.001

1. INTRODUCTION

This manual provides essential information for the proper use, care, and maintenance of your Omega Speedmaster Chronograph Automatic Unisex Watch, model 324.30.38.50.55.001. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.

The Omega Speedmaster is a renowned chronograph, known for its precision and robust design. This particular model features an automatic movement, a chronograph function, and a durable stainless steel construction.

2. SETUP

2.1 Unboxing and Initial Inspection

Upon receiving your Omega Speedmaster, carefully remove it from its packaging. Inspect the watch for any visible damage. The watch should include a warranty card, a manual, and original packaging.

2.2 Winding the Watch

This watch features an automatic movement, meaning it is powered by the motion of your wrist. However, for initial setup or if the watch has stopped, manual winding is recommended.

1. Unscrew the crown (if applicable) and pull it out to the first position.
2. Turn the crown clockwise approximately 30-40 times. This will build up a power reserve.
3. Push the crown back in and screw it down to ensure water resistance.

2.3 Setting the Time

1. Unscrew the crown (if applicable) and pull it out to the second position.
2. Turn the crown to move the hands clockwise until the desired time is set.

3. Push the crown back in and screw it down to ensure water resistance.

2.4 Adjusting the Bracelet

The stainless steel bracelet can be adjusted for a comfortable fit. It is recommended to have this adjustment performed by a qualified watchmaker or an authorized Omega service center to prevent damage.

3. OPERATING THE WATCH

3.1 Timekeeping

Your Omega Speedmaster is designed for accurate timekeeping. The main hands indicate hours, minutes, and seconds. The automatic movement ensures continuous operation when worn regularly.

3.2 Chronograph Function

The chronograph allows for precise measurement of elapsed time. It features three sub-dials and two pushers on the side of the case.

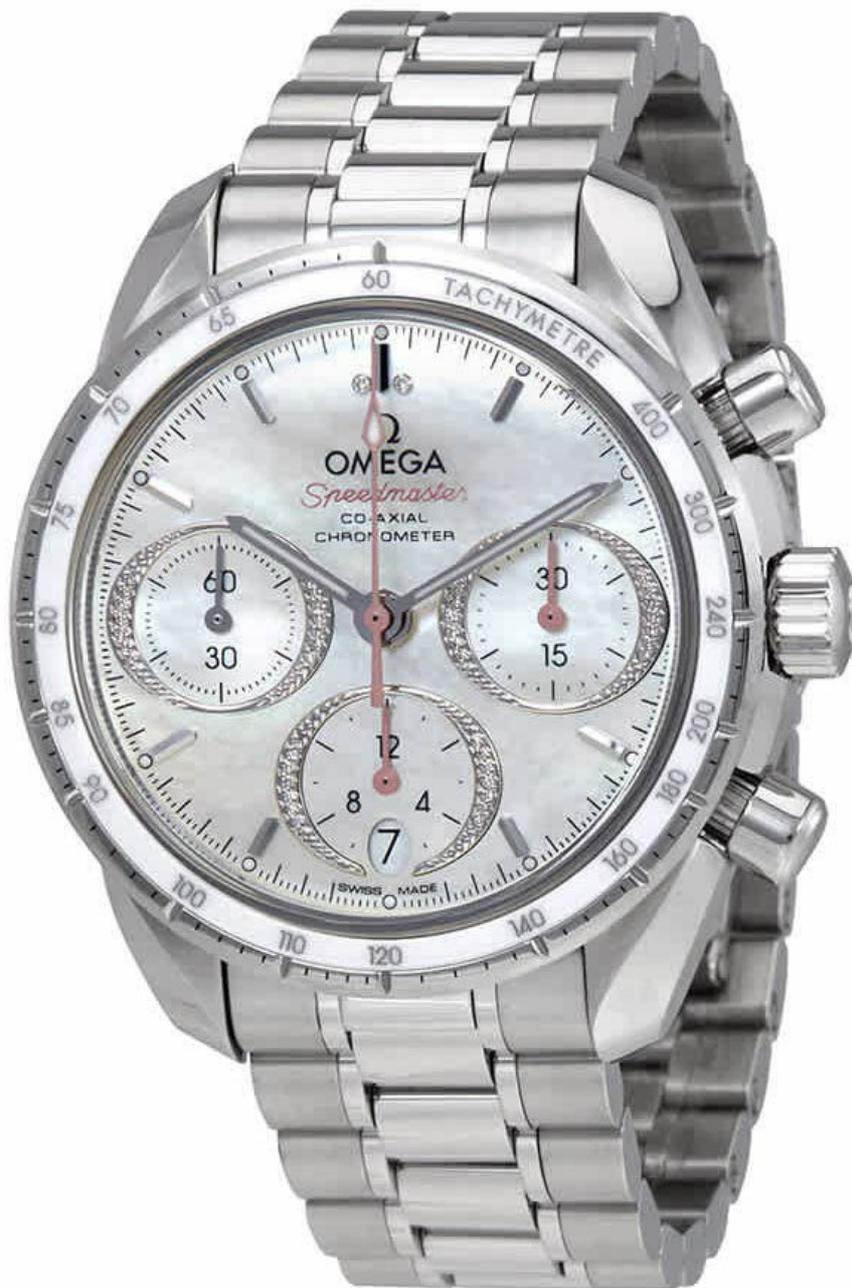


Image: Front view of the Omega Speedmaster Chronograph Automatic Watch 324.30.38.50.55.001, featuring a black dial with three silver sub-dials, luminous hands and markers, and a stainless steel bracelet. The tachymeter bezel is visible around the dial.

1. **Starting the Chronograph:** Press the upper pusher to start the chronograph. The central chronograph seconds hand will begin to move.
2. **Stopping the Chronograph:** Press the upper pusher again to stop the chronograph. The elapsed time can be read from the central chronograph seconds hand and the sub-dials (typically for minutes and hours).
3. **Resetting the Chronograph:** After stopping, press the lower pusher to reset all chronograph hands to their zero positions. The chronograph must be stopped before it can be reset.

3.3 Water Resistance

This watch has a water resistance depth of 100 meters (330 feet). This makes it suitable for swimming and snorkeling, but not for diving. Ensure the crown is fully screwed down before any contact with water to maintain water resistance.

4. MAINTENANCE

4.1 Cleaning

To clean your watch, use a soft, damp cloth. For the stainless steel case and bracelet, a mild soap solution can be used, followed by rinsing with fresh water and drying thoroughly. Avoid using harsh chemicals or abrasive materials.

4.2 Regular Servicing

As an automatic mechanical watch, regular servicing is crucial to maintain its precision and functionality. Omega recommends servicing your watch every 5-8 years. This should be performed by an authorized Omega service center.

4.3 Storage

When not wearing your watch, store it in a cool, dry place, away from direct sunlight and strong magnetic fields. If storing for an extended period, ensure it is fully wound or consider a watch winder to keep the movement running.

5. TROUBLESHOOTING

- **Watch not running or losing time:** Ensure the watch is sufficiently wound. If it's an automatic watch, wear it regularly or manually wind it. If the issue persists, it may require servicing.
- **Chronograph hands not resetting to zero:** This may indicate a need for adjustment or servicing of the chronograph mechanism. Do not force the pushers.
- **Condensation under the crystal:** This indicates a loss of water resistance. Immediately take the watch to an authorized service center to prevent further damage to the movement.

6. SPECIFICATIONS

Model Number	324.30.38.50.55.001
Brand Name	Omega
Movement Type	Automatic
Case Material	Stainless Steel
Band Material	Stainless Steel
Dial Color	White Mother of Pearl (as per description) / Black (as per main image)
Case Diameter	38 Millimeters

Case Thickness	15.00 Millimeters
Water Resistance Depth	100 Meters (330 Feet)
Crystal Type	Sapphire Crystal
Clasp Type	Deployment Clasp

7. WARRANTY

Your Omega Speedmaster watch comes with a limited warranty. Please refer to the included warranty card for specific terms, conditions, and duration of coverage. Keep your warranty card and proof of purchase in a safe place.

8. SUPPORT

For technical assistance, servicing, or any questions regarding your Omega Speedmaster watch, please contact an authorized Omega boutique or service center. You can find contact information on the official Omega website or through your retailer.