

[Manuals.plus](#) /

> [Hurricane](#) /

> Hurricane Supreme 16-inch Oscillating Pedestal Stand Fan with Remote Control User Manual

## Hurricane HGC736545

# Hurricane Supreme 16-inch Oscillating Pedestal Stand Fan

Model: HGC736545

### IMPORTANT SAFETY INSTRUCTIONS

#### READ AND SAVE THESE INSTRUCTIONS.

- Always unplug the fan before cleaning or servicing.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as it may cause an electric shock or fire, or damage the fan.
- Do not block air openings or operate with any openings blocked. Keep openings free of lint, hair, and the like.
- Do not use outdoors.
- This fan is not intended for use in wet or damp locations.
- Always place the fan on a stable, flat surface to prevent tipping.
- Close supervision is necessary when any appliance is used by or near children.

### PACKAGE CONTENTS

Please check to ensure all items are present:

- Fan Head Assembly (Motor, Blades, Grills)
- Adjustable Stand Pole
- Round Base
- Remote Control

- Mounting Hardware (screws, washers)
- User Manual (this document)



Image: The product box for the Hurricane Supreme 16-inch Oscillating Pedestal Stand Fan, showing the fan's features and specifications.

## ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your Hurricane Pedestal Stand Fan:

1. **Attach the Stand Pole to the Base:** Secure the adjustable stand pole to the round base using the provided screws and washers. Ensure it is stable.
2. **Mount the Fan Head:** Carefully attach the fan head assembly (motor, blades, grills) to the top of the adjustable stand pole. Tighten any securing screws firmly.
3. **Secure the Grills:** Ensure both the front and rear grills are properly aligned and securely fastened to prevent accidental contact with the blades.
4. **Connect Power Cord:** Plug the fan's power cord into a standard 120-volt electrical outlet.

Your browser does not support the video tag.

*Video: Official product video demonstrating the assembly and features of the Hurricane Supreme Oscillating Stand Pedestal Fan.*

## OPERATING INSTRUCTIONS

Your Hurricane Pedestal Stand Fan offers multiple settings for optimal comfort.

### Control Panel & Remote Control

The fan can be operated using the control panel on the unit or the included remote control.





*Image: Detail of the fan's control panel and the remote control, showing buttons for power, speed, and timer.*

- **Power (ON/OFF):** Press the power button to turn the fan on or off.
- **Speed Settings:** Select from three speed settings (Low, Medium, High) to adjust airflow intensity.
- **Oscillation:** Activate the oscillation feature for wider air distribution. The fan head will sweep from side to side. To stop oscillation at a desired angle, press the oscillation button again.
- **Adjustable Height:** Loosen the height adjustment knob on the stand pole, raise or lower the fan to your desired height (41" to 55"), and then tighten the knob securely.

QUALITY.  
PERFORMANCE.  
RELIABILITY.

FOR ANYWHERE  
YOU NEED IT.

*Image: The Hurricane Supreme 16-inch Pedestal Stand Fan showcasing its adjustable features, including quick fan direction, remote control, and 90-degree oscillation.*

## MAINTENANCE

### Cleaning

- Always unplug the fan before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan.
- To clean the fan blades, carefully remove the front grill (refer to assembly instructions for reverse steps). Wipe the blades with a soft cloth. Ensure all parts are dry before reassembling.
- Do not use abrasive cleaners or solvents as they may damage the fan's finish.

### Storage

- When not in use, store the fan in a cool, dry place.
- It is recommended to store the fan in its original packaging to protect it from dust and damage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply.	Check if the power cord is securely plugged into a working outlet. Ensure the outlet is active.
Weak airflow.	Fan speed is too low; grills are obstructed.	Increase the fan speed setting. Clean any dust or debris from the fan grills and blades.
Fan is noisy.	Loose parts; fan not on a stable surface.	Ensure all screws and parts are tightened. Place the fan on a flat, stable surface.

Problem	Possible Cause	Solution
Oscillation not working.	Oscillation feature is turned off.	Press the oscillation button to activate the feature.

## SPECIFICATIONS

Feature	Detail
Brand	Hurricane
Model Name	Supreme 16" Oscillating Stand Fan with Remote
Model Number	HGC736545
Fan Size	16 inches
Number of Speeds	3
Air Flow Capacity	1201 Cubic Feet Per Minute (CFM)
Speed	1350 RPM
Adjustable Height	41" to 55"
Oscillation	90 degrees
Power Source	Corded Electric
Voltage	120 Volts
Wattage	35 watts
Item Weight	11.3 Pounds
Product Dimensions (D x W x H)	4.9"D x 18.5"W x 23"H
Material	Alloy Steel (frame), Plastic (blades)
Included Components	Cord, Remote Control
Safety Certification	UL Listed

## WARRANTY AND SUPPORT

This Hurricane Supreme 16-inch Oscillating Pedestal Stand Fan comes with a **1-year manufacturer's warranty**. For warranty claims, technical support, or any inquiries, please contact Hurricane customer service through their official website or the retailer where the product was purchased.

Visit the [Hurricane Store on Amazon](#) for more information and product registration.

