

[manuals.plus](#) /

› [Sekonda](#) /

› [Sekonda 1520E.05 Digital Quartz Watch Instruction Manual](#)

Sekonda 1520E.05

Sekonda 1520E.05 Digital Quartz Watch Instruction Manual

Model: 1520E.05



1. INTRODUCTION

Welcome to your new Sekonda Digital Quartz Watch, model 1520E.05. This manual provides detailed instructions for setting up, operating, and maintaining your watch. Please read this guide thoroughly to ensure proper use and to maximize the lifespan of your timepiece.



Front view of the Sekonda 1520E.05 digital watch, displaying the time, date, and various function indicators. The watch features a black case with blue accents around the bezel and buttons.

2. SETUP

2.1 Initial Power On


Your watch is designed for immediate use. If the display is blank, press any button to activate the backlight and check battery status. If the display remains blank, the battery may require replacement.

2.2 Setting Time and Date

The watch features a 12-hour/24-hour display option. Follow these steps to set the time and date:

1. Press the **MODE** button repeatedly until the time setting mode is activated (usually indicated by flashing digits).
2. Use the **RESET** button to select the digit you wish to adjust (hours, minutes, seconds).
3. Use the **START** button to increase the selected digit. Hold the button to advance rapidly.
4. Continue this process to set the current time, including AM/PM for 12-hour format.
5. After setting the time, use the **RESET** button to navigate to the date setting (month, day, year).
6. Use the **START** button to adjust the date values.
7. Once all settings are correct, press the **MODE** button to exit the setting mode and return to normal time display.



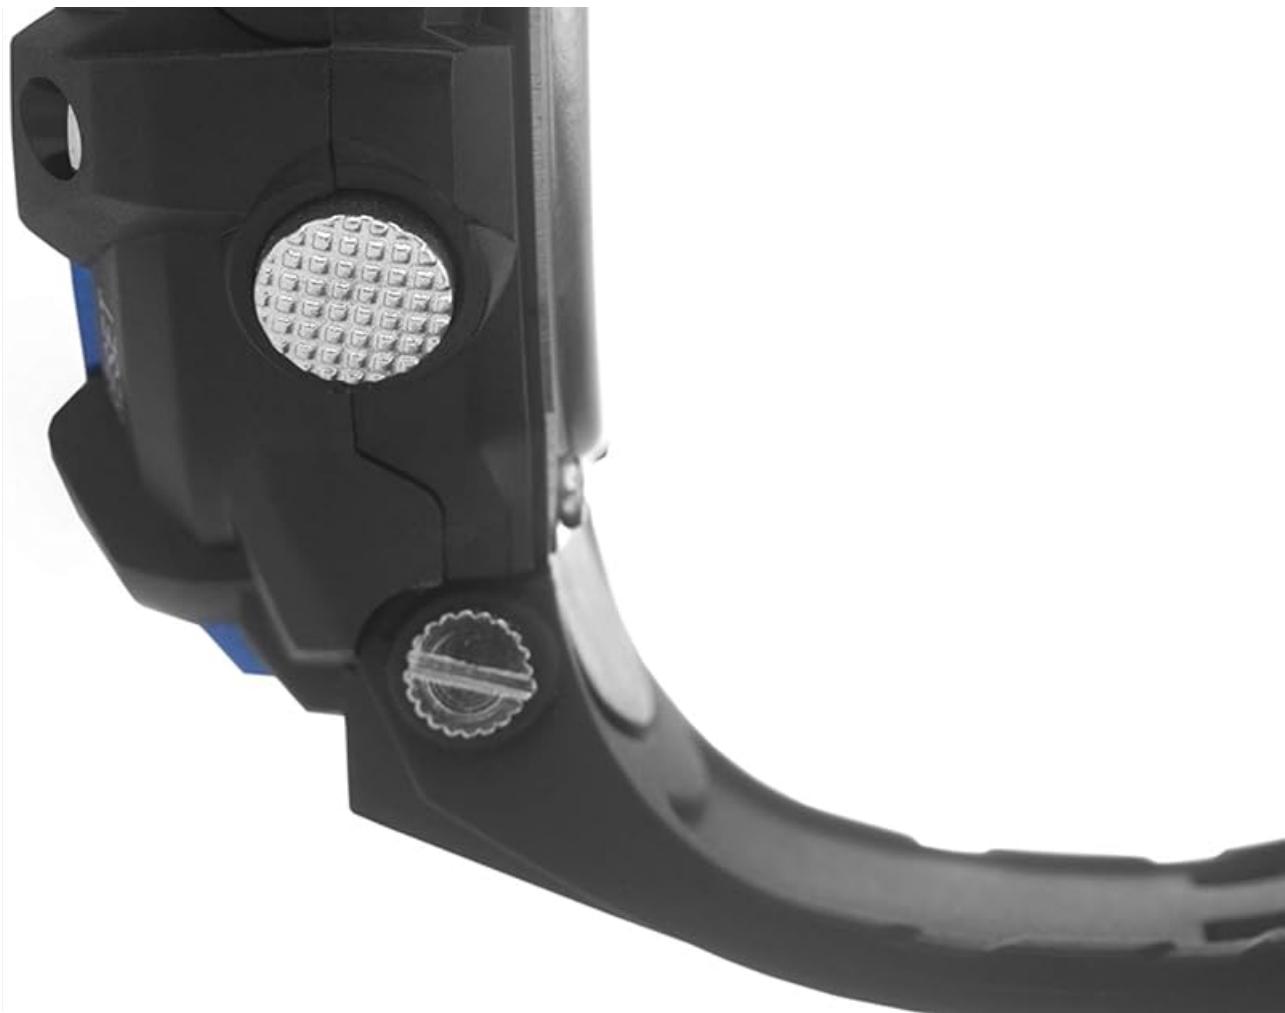

Side view of the Sekonda 1520E.05 watch, showing the textured control buttons on the left and right sides of the watch case. These buttons are used for adjusting settings and accessing functions.

3. OPERATING INSTRUCTIONS

3.1 Mode Selection

Press the **MODE** button to cycle through the watch's various functions: Time Display, Alarm, Chronograph (Stopwatch), and Dual Time.

3.2 Light Function

Press the **LIGHT** button to illuminate the display for a few seconds, enhancing visibility in low-light conditions.

3.3 Alarm Function

To set the alarm:

1. Press the **MODE** button until you reach the alarm setting mode.
2. Use the **RESET** button to select the hour or minute digits.
3. Use the **START** button to adjust the alarm time.
4. Press **MODE** to confirm and exit.
5. To activate or deactivate the alarm, press the **START** button while in alarm mode. An alarm icon will appear or disappear on the display.

3.4 12HR/24HR Display

While in normal time display mode, press the **RESET** button to toggle between 12-hour and 24-hour time formats. In 12-hour format, 'AM' or 'PM' indicators will be visible.

3.5 Chronograph (Stopwatch)

To use the stopwatch function:

1. Press the **MODE** button until you reach the chronograph mode. The display will show '00:00:00'.
2. Press the **START** button to begin timing.
3. Press **START** again to pause the timing.
4. Press the **RESET** button to reset the stopwatch to zero.

3.6 Water Resistance

This watch is water resistant to 50 meters (5 ATM). This means it is suitable for everyday use, showering, and swimming in shallow water. It is not suitable for diving, snorkeling, or prolonged submersion. **Do not operate any buttons while the watch is wet or submerged**, as this can compromise the water resistance seal.

4. MAINTENANCE

4.1 Cleaning

Clean the watch case and strap regularly with a soft, slightly damp cloth. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and materials.

4.2 Battery Replacement

When the display becomes dim or functions become erratic, the battery may need replacement. Battery replacement should be performed by a qualified watch technician to ensure the watch's water resistance is maintained after the case back is opened.

4.3 Storage

Store your watch in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. When not in use for extended periods, consider storing it in its original packaging or a watch box.



Rear view of the Sekonda 1520E.05 watch, highlighting the stainless steel case back with 'SEKONDA' engraving and the black

plastic strap with a metal buckle.

5. TROUBLESHOOTING

- Blank Display:** If the display is blank, the battery may be depleted. Replace the battery as described in the Maintenance section.
- Incorrect Time:** If the time is incorrect, refer to the "Setting Time and Date" section to reset the time. Ensure the correct 12-hour or 24-hour format is selected.
- Condensation Inside Watch:** If condensation appears inside the watch, it may indicate a breach in water resistance. Seek professional service immediately to prevent further damage.
- Buttons Not Responding:** Ensure the watch is not wet. If the issue persists, the watch may require professional inspection.

6. SPECIFICATIONS

- Model Number:** 1520E.05
- Case Diameter:** 50mm
- Case Material:** Plastic (Black and Blue)
- Strap Material:** Plastic (Black)
- Display Type:** Digital
- Movement:** Quartz
- Water Resistance:** 50 meters (5 ATM)
- Functions:** Time, Date, Day, Alarm, Chronograph (Stopwatch), Backlight, 12HR/24HR Display
- Clasp Type:** Buckle
- Dial Window Material:** Mineral
- Package Dimensions:** 3.94 x 3.86 x 3.11 inches
- Item Weight:** 2.05 ounces
- Manufacturer:** SEKONDA
- Date First Available:** February 8, 2018

7. WARRANTY INFORMATION

This Sekonda watch comes with a 2-year guarantee from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover normal wear and tear, battery, crystal, strap, or damage caused by improper use, accidents, unauthorized repairs, or failure to follow the instructions in this manual.

8. CUSTOMER SUPPORT

For further assistance, service inquiries, or to locate an authorized service center, please visit the official Sekonda website or contact your authorized retailer. Please have your watch model number (1520E.05) and proof of purchase available when contacting support.



