Chefman RJ48-BLACK-4-US

Chefman Iceman Mini Portable Fridge User Manual

Model: RJ48-BLACK-4-US | Brand: Chefman

1. Introduction

The Chefman Iceman Mini Portable Fridge is a versatile and compact appliance designed for cooling and warming various items. Its lightweight and portable design makes it ideal for personal spaces, travel, offices, dorms, and more. This manual provides essential information for safe and efficient operation, maintenance, and troubleshooting.

Key Features:

- Perfect Portability: Compact and lightweight design for easy transport.
- Cooling and Warming Functions: Cools to 44°F (6.6°C) and warms up to 140°F (60°C).
- Compact Capacity: 4-liter capacity, holds six 12-oz cans.
- Removable Shelf: For flexible storage of beverages, snacks, and skincare products.
- Dual Power Options: Plugs into standard home outlets (120V) and 12-volt car chargers.
- Eco-Friendly: 100% freon-free.

2. SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the fridge in water or other liquids.
- Ensure proper ventilation around the unit; do not block air vents.
- Unplug the unit before switching between cooling and warming modes.
- For warming function, food must be warm/hot before placing in the fridge.
- This product is designed for household use only.
- · Keep out of reach of children.
- · Avoid placing hot items directly on the unit's exterior.
- Do not use if the power cord or plug is damaged.
- This product is cETL approved with advanced safety technology.

3. SETUP

- 1. **Unboxing:** Carefully remove the Chefman Iceman Mini Portable Fridge from its packaging. Retain packaging for future storage or transport.
- 2. **Placement:** Place the fridge on a flat, stable surface. Ensure there is adequate space around the unit for proper ventilation, especially around the rear fan.

3. Power Connection:

- For home use: Connect the provided AC power cord to the fridge's AC input and then plug it into a standard 120V home outlet.
- For car use: Connect the provided 12V DC car charger cord to the fridge's DC input and then plug it into your vehicle's 12-volt car charger socket.

Convenient

Includes plugs for both standard home outlets and 12V car chargers.

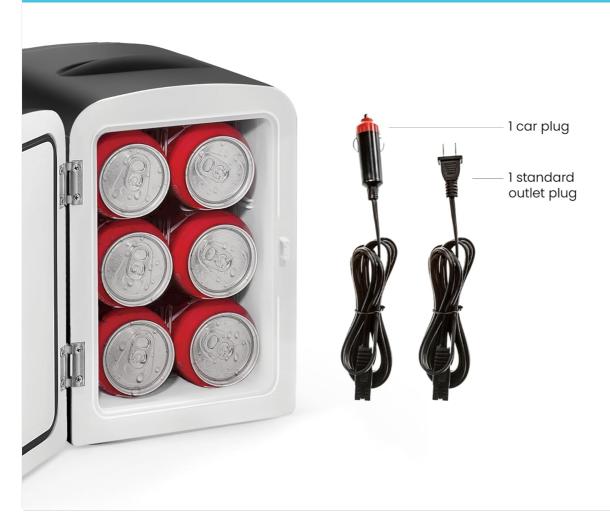


Image: The Chefman Iceman Mini Portable Fridge showing its two power cords: one for standard home outlets and one for 12V car chargers.

4. Initial Cleaning: Before first use, wipe the interior and exterior of the fridge with a damp cloth.

4. OPERATING INSTRUCTIONS

4.1 Cooling Function

- 1. Ensure the fridge is unplugged before changing modes.
- 2. Locate the switch on the back of the unit. Slide the switch to the "COLD" position.
- 3. Plug the unit into the appropriate power source (AC or DC). The green indicator light will illuminate.
- 4. For best results, place pre-chilled items into the fridge. The unit is designed to maintain temperature, not rapidly cool warm items. It cools to approximately 44°F (6.6°C).
- 5. The 4-liter capacity can comfortably chill six 12-oz cans. The removable shelf allows for flexible storage of various items like skincare products, snacks, or baby bottles.

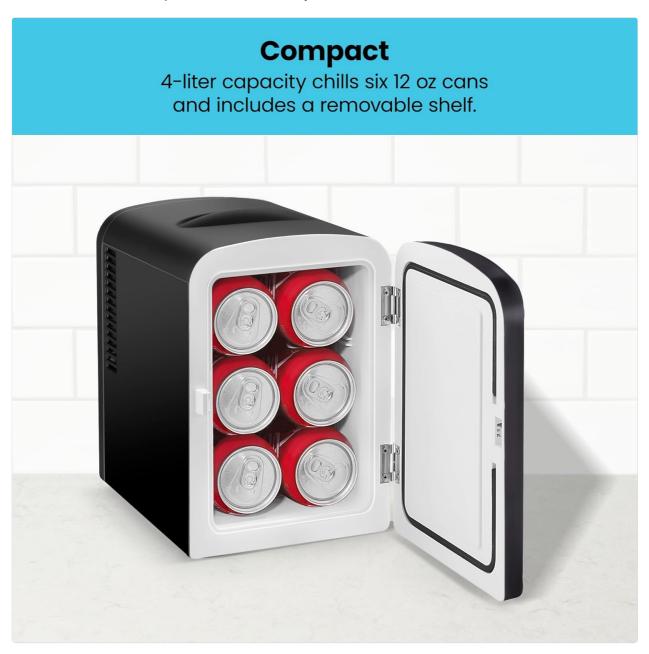


Image: The Chefman Iceman Mini Portable Fridge with its door open, showing six 12-oz beverage cans neatly stored inside.

4.2 Warming Function

- 1. Ensure the fridge is unplugged before changing modes.
- 2. Slide the switch on the back of the unit to the "HOT" position.
- 3. Plug the unit into the appropriate power source (AC or DC). The red indicator light will illuminate.
- 4. For best results, place pre-warmed items into the fridge. The unit is designed to maintain warmth, not rapidly heat cold items. It warms up to approximately 140°F (60°C).

Versatile

Goes from cooling to heating with the flip of a switch.





Keep Cold

Stay Warm

Image: A split image showing the Chefman Iceman Mini Portable Fridge in two states: one side with cold food items, and the other with a hot coffee cup, illustrating its dual cooling and warming functions.

4.3 Portability

The integrated handle on top of the unit allows for easy portability, making it convenient to move between locations or take on the go.

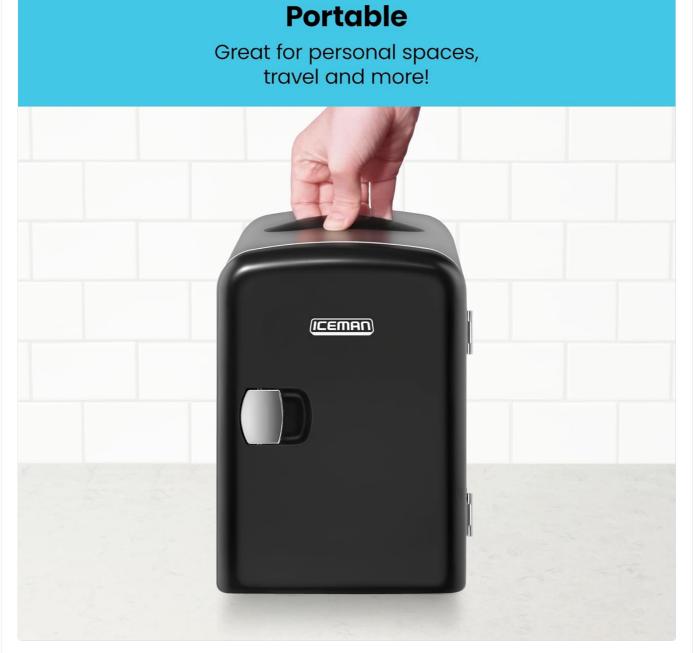


Image: A hand holding the Chefman Iceman Mini Portable Fridge by its integrated top handle, emphasizing its lightweight and portable design.

5. MAINTENANCE

5.1 Cleaning

- Always unplug the unit before cleaning.
- Wipe the interior and exterior surfaces with a soft, damp cloth and mild detergent.
- Do not use abrasive cleaners or harsh chemicals.
- Ensure the unit is completely dry before plugging it back in.

5.2 Ventilation

• Regularly check that the rear fan and vents are free from dust and debris to ensure optimal performance.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit not turning on.	No power supply; loose connection.	Check power cord connection; try a different outlet.
Not cooling/warming effectively.	Blocked vents; ambient temperature too high/low; items not pre-chilled/warmed.	Ensure vents are clear; place unit in a suitable environment; pre-chill/warm items before placing them inside.
Excessive noise.	Fan obstruction or malfunction.	Check for obstructions around the fan; contact customer support if noise persists.

7. SPECIFICATIONS

Feature	Detail
Brand	Chefman
Model Number	RJ48-BLACK-4-US
Capacity	4 Liters
Item Weight	4.4 pounds (2 Kilograms)
Product Dimensions	7 x 9.13 x 10 inches (17.78 x 23.19 x 25.4 cm)
Cooling Temperature	Cools to 44°F (6.6°C)
Warming Temperature	Warms up to 140°F (60°C)
Voltage	120 Volts (AC), 12 Volts (DC)
Wattage	45 watts
Installation Type	Countertop, Free Standing
Material Type	Plastic
Included Components	Plugs for Home Outlet & 12V Car Charger
Certification	cETL approved

8. WARRANTY & SUPPORT

Chefman provides a 1-year assurance for this product, ensuring long-lasting durability and peace of mind with your purchase.

Additional Protection Plans:

- 2-Year Protection Plan: Available for purchase.
- 3-Year Protection Plan: Available for purchase.

Customer Support:

For further information, assistance, or warranty claims, please visit the official Chefman website or refer to the DF User Guide.