

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SereneLife](#) /

› [SereneLife PUCRC26B Robot Automatic Vacuum Cleaner Instruction Manual](#)

SereneLife PUCRC26B

SereneLife PUCRC26B Robot Automatic Vacuum Cleaner Instruction Manual

Model: PUCRC26B | Brand: SereneLife

1. INTRODUCTION

Thank you for purchasing the SereneLife PUCRC26B Robot Automatic Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your device. Please read it thoroughly before use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of injury or damage, read these safety instructions carefully and keep them handy when setting up, using, and maintaining your robot vacuum.

- Ensure the power adapter voltage is compatible with your local power supply.
- Do not operate the vacuum in wet environments or near liquids.
- Keep hair, loose clothing, fingers, and all body parts away from openings and moving parts.
- Do not pick up large objects, sharp objects, or burning/smoking materials.
- Regularly check the dustbin and filter for blockages.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PACKAGE CONTENTS

Verify that all items are included in your package:

- SereneLife PUCRC26B Robot Automatic Vacuum Cleaner
- Charging Cable
- Side Sweeper Brushes (2)
- Filter
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your robot vacuum.



Image 1: Top view of the SereneLife PUCRC26B Robot Automatic Vacuum Cleaner, showing the "Pure Clean" logo and power button.



Image 2: Bottom view of the SereneLife PUCRC26B Robot Automatic Vacuum Cleaner, highlighting the twin rotating sweeper brushes and wheels.

5. SETUP

- Charge the Battery:** Before first use, fully charge the robot vacuum using the provided charging cable. The indicator light will show charging status.
- Install Side Brushes:** Attach the two side sweeper brushes to the designated posts on the bottom of the vacuum. Ensure they click into place securely.
- Prepare Cleaning Area:** Remove any large obstacles, loose cables, or small items that could entangle the vacuum or obstruct its path.

Your browser does not support the video tag.

Video 1: This video demonstrates the installation of the twin rotating sweeper brushes on the underside of the Pure Clean robot vacuum. It shows how these brushes help reach debris from corners and edges, enhancing the cleaning coverage.

6. OPERATION

6.1 Starting and Stopping

- **To Start:** Press the power button on the top of the unit. The vacuum will begin cleaning automatically.
- **To Stop:** Press the power button again. The vacuum will pause its operation.

6.2 Cleaning Features

- **Automatic Cleaning:** The robot vacuum is designed to clean tile, hardwood flooring, and short carpet with easy one-touch activation.
- **Low Mini Profile:** Its 2.9-inch low profile allows it to travel through rooms and fit under furniture like couches and beds.
- **Cliff Detection:** Equipped with anti-fall cliff sensors, the robot automatically detects gaps and prevents it from falling down stairs.
- **Allergy and Pet Friendly:** The air filter traps fine dust particles within the removable dustbin. The no-brush design prevents clogging from pet hair, unlike units with rotating underbrushes.
- **Dual Rotating Brushes:** Two side sweeper brushes extend the vacuum's reach, rotating to collect dirt and debris along open floors, walls, and edges.

Versatile & Convenient

Floor Clean Ability



Image 3: The SereneLife PUCRC26B Robot Automatic Vacuum Cleaner cleaning under a wooden cabinet, demonstrating its low-profile design and ability to reach tight spaces.

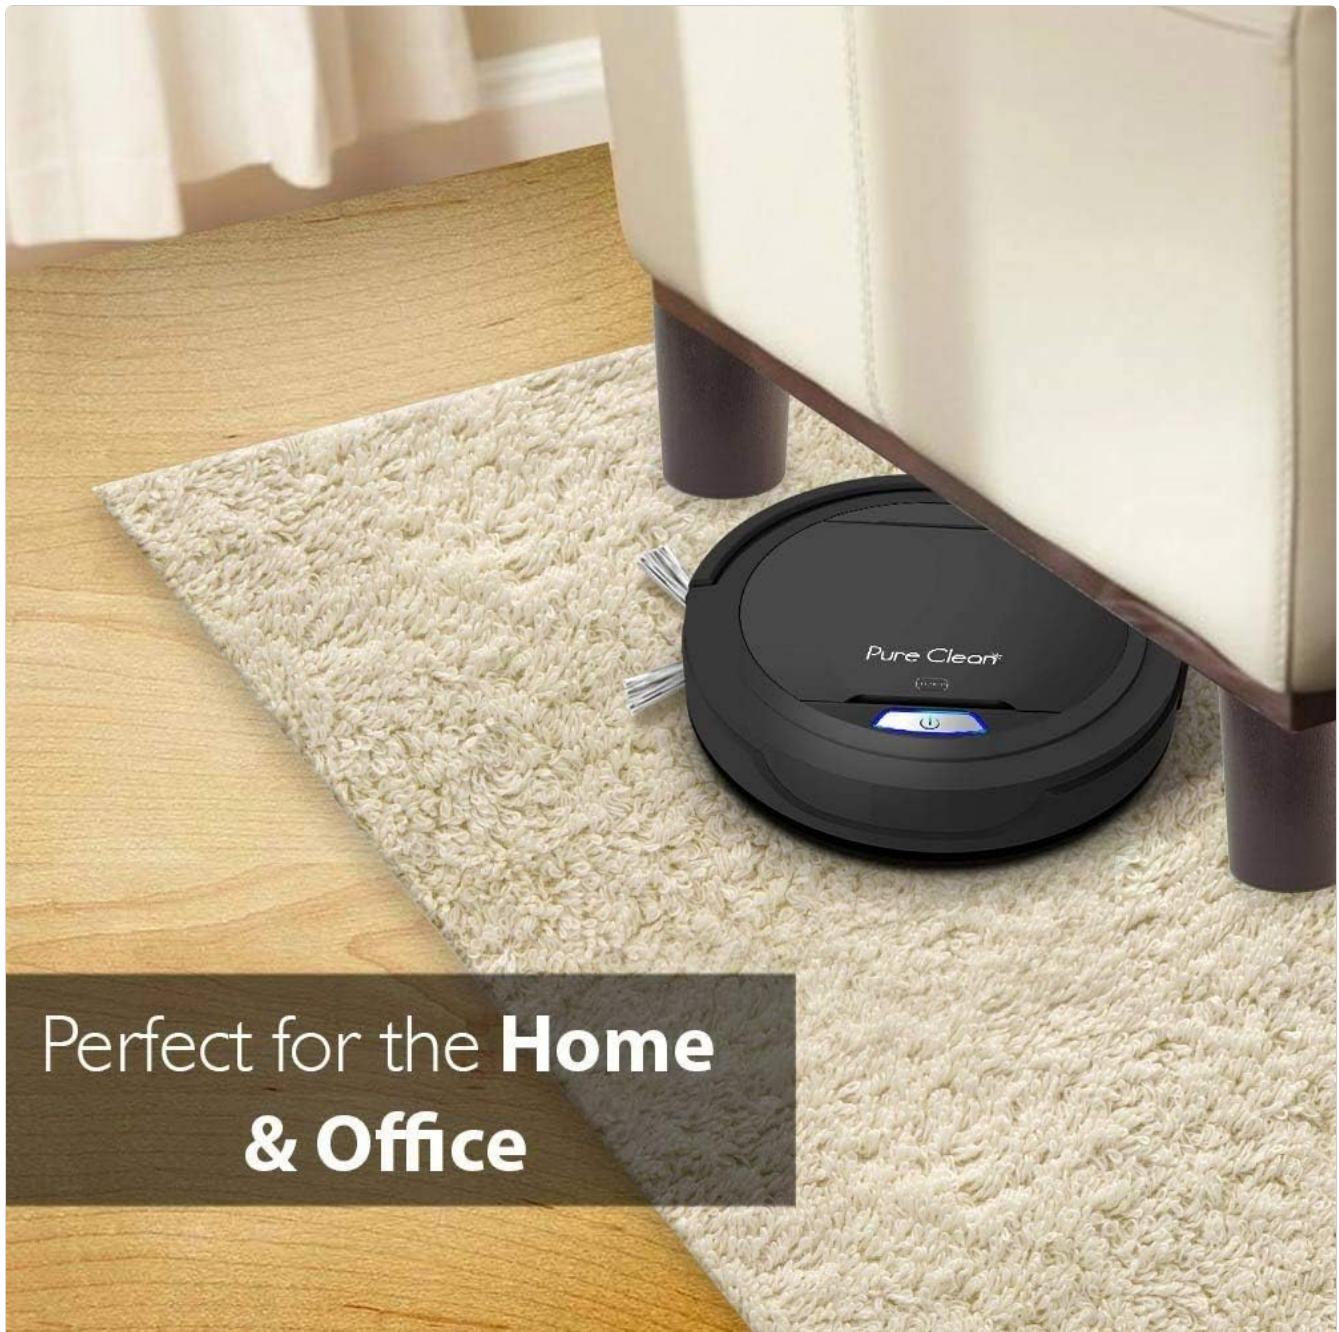


Image 4: The SereneLife PUCRC26B Robot Automatic Vacuum Cleaner cleaning on a light-colored rug under a chair, illustrating its versatility on different floor types and ability to navigate around furniture.

7. MAINTENANCE

Regular maintenance ensures optimal performance of your robot vacuum.

7.1 Emptying the Dustbin

1. Turn off the robot vacuum.
2. Locate the "OPEN" tab on the top cover and lift it to access the dustbin.
3. Carefully remove the dustbin.
4. Empty the contents into a trash receptacle.
5. Reinsert the dustbin and close the top cover securely.

Your browser does not support the video tag.

Video 2: This video demonstrates how to open the Pure Clean robot vacuum, remove the dustbin, and empty accumulated debris, including pet hair and dust. It highlights the ease of maintenance for pet owners.

7.2 Cleaning the Filter

- After emptying the dustbin, remove the filter.
- Tap the filter gently over a trash can to remove dust and debris.
- Do not wash the filter with water.
- Replace the filter and dustbin.

7.3 Cleaning Side Brushes

- Periodically check the side brushes for tangled hair or debris.
- Carefully remove any obstructions. If brushes are damaged, replace them.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Low battery; Power switch off.	Charge the vacuum; Ensure power switch is on.
Poor cleaning performance.	Full dustbin; Clogged filter; Worn brushes.	Empty dustbin; Clean/replace filter; Clean/replace brushes.
Vacuum gets stuck frequently.	Obstacles (cables, rugs); Uneven surfaces.	Clear obstacles; Ensure suitable cleaning environment.
Vacuum falls down stairs.	Cliff sensors dirty or obstructed.	Clean cliff sensors.

9. SPECIFICATIONS

- **Brand:** SereneLife
- **Model Name:** SereneLife Robot Automatic Vacuum Cleaner
- **Model Number:** PUCRC26B
- **Special Feature:** Low-Profile - Slides Under Furniture
- **Color:** Black
- **Product Dimensions:** 11" L x 11" W x 2.9" H
- **Included Components:** Charging Cable, Smart Vacuum
- **Filter Type:** Cartridge
- **Battery Life:** 90 minutes
- **Voltage:** 220 Volts
- **Capacity:** 0.2 Liters

- **Power Source:** Battery Powered
- **Batteries Included:** Yes (1 Lithium Ion battery)
- **Control Method:** Touch
- **Lithium Battery Voltage:** 11.1 Volts
- **Form Factor:** Robotic
- **Item Weight:** 3.5 pounds
- **Surface Recommendation:** Hardwood, Tile, Carpet

10. WARRANTY & SUPPORT

This product comes with a **1-year warranty**. For support, troubleshooting, or warranty claims, please refer to the contact information provided with your purchase or visit the official SereneLife website. You can also visit the [SereneLife Store on Amazon](#) for more information.