

Electrolux MI41S

Electrolux 31L MI41S Microwave Oven User Manual

Model: MI41S

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Electrolux 31L MI41S Microwave Oven. Please read all instructions carefully before using the appliance and retain this manual for future reference.

1.1 Safety Information

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.

2. PRODUCT OVERVIEW

The Electrolux MI41S is a 31-liter microwave oven designed for modern kitchens, featuring an integrated mirrored panel and various convenient functions.

2.1 Key Features

- **Integrated Panel:** Mirrored panel with a modern design.
- **31-Liter Capacity:** Spacious interior for various cooking needs.
- **Display Functionality:** When the door is closed, only frequently used buttons are visible. The display can be turned off using the "Desliga Display" function for energy saving.

- **Keep Warm Function:** Maintains food at an optimal serving temperature.
- **Online Menu Technology:** Access programmed recipes via QR code on the microwave.
- **Odor Removal Function:** Circulates air inside the oven to reduce lingering food odors.
- **Mute Function:** Allows for silent operation.
- **My Dish Key:** Customizable setting for your favorite dish.

2.2 Control Panel

The control panel features an intuitive layout for easy operation. The display shows the time and cooking settings.



Image: Close-up view of the Electrolux MI41S microwave oven control panel, showing the digital display and various function buttons.

3. SETUP

3.1 Unpacking

- Remove all packaging materials from inside and outside the microwave oven.
- Check the oven for any damage, such as dents or a misaligned door. Do not operate if damaged.
- Ensure the glass turntable and turntable ring are present.

3.2 Placement

This microwave oven is designed for countertop installation.

- Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it.
- Allow at least 10 cm (4 inches) of space on the back and sides, and 30 cm (12 inches) above the oven for proper ventilation. Do not block air vents.
- Keep the oven away from heat sources and strong magnetic fields.

3.3 Electrical Connection

Ensure your electrical outlet matches the voltage requirements of the appliance.

- **Voltage:** 110 Volts
- **Power:** 1000 Watts
- Plug the oven into a dedicated, properly grounded electrical outlet. Do not use extension cords or adapters.

3.4 Dimensions



Image: Diagram showing the dimensions of the Electrolux MI41S microwave oven: 52 cm width, 32.5 cm height, and 42.2 cm depth.

- **Product Dimensions:** 42.5 x 52 x 32.5 cm (Depth x Width x Height)
- **Weight:** 15 kg

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Set the desired cooking time and power level using the control panel.
4. Press the "Início +30s" (Start +30s) button to begin cooking.

4.2 Specific Functions

- **Keep Warm (Manter Aquecido):** Press this button to activate the function that keeps your food warm until serving time.
- **Odor Removal (Tira Odor):** Use this function to circulate air inside the oven and reduce any lingering food odors after cooking.
- **Display Off (Desliga Display):** To save energy, you can activate this function to turn off the display when the oven door is closed. The display will reactivate when the door is opened or a button is pressed.
- **Online Menu (Menu Online):** Scan the QR code located inside the oven door or on the appliance to access a variety of programmed recipes with step-by-step instructions.
- **Automatic Defrost (Descongelamento Automático):** This feature allows for efficient defrosting of various food types. Refer to the internal guide or online menu for specific weight settings.
- **My Dish Key (Tecla Meu Prato):** Program your preferred cooking settings for a frequently prepared dish for quick access.
- **Mute Function (Função Mudo):** Activate this function to silence all button presses and end-of-cycle alerts.



Image: The Electrolux MI41S microwave oven with its door open, showing a plate of lasagna on the glass turntable inside.

5. MAINTENANCE AND CLEANING

5.1 General Cleaning

- Always unplug the microwave oven before cleaning.
- Clean the interior and exterior surfaces with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads.
- Remove the glass turntable and turntable ring for separate cleaning in warm, soapy water. Ensure they are dry before placing them back in the oven.
- Wipe the door seals and sealing surfaces regularly to prevent food residue buildup.

5.2 Odor Removal Function

If strong food odors persist, use the "Tira Odor" function. This function helps to ventilate the oven cavity and reduce unpleasant smells. Refer to the operating instructions for how to activate it.



Image: A hand pressing the 'Tira Odor' (Odor Removal) button on the control panel of the Electrolux MI41S microwave oven.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Plug in power cord; Close door securely; Check fuse or reset circuit breaker.
Food not heating	Incorrect cooking time/power level; Microwave-safe dish not used.	Adjust time/power; Use appropriate cookware.
Excessive noise during operation	Turntable not correctly placed; Foreign object in oven cavity.	Ensure turntable is seated properly; Remove any obstructions.
Display is off	"Desliga Display" function is active.	Open the door or press any button to reactivate the display.

7. SPECIFICATIONS

Technical details for the Electrolux 31L MI41S Microwave Oven:

Specification	Value
---------------	-------

Specification	Value
Brand	Electrolux
Model Information	MI41S
Product Dimensions (DxWxH)	42.5 x 52 x 32.5 cm
Weight	15 Kilograms
Capacity	31 Liters
Installation Type	On countertop
Color	Silver
Voltage	110 Volts
Wattage	1000 Watts
Defrost Type	Automatic Defrost
Material	Aluminum
Included Components	Turntable
Energy Efficiency	A

7.1 Energy Efficiency Label

<h1>Energia (Elétrica)</h1> <p>Fabricante</p> <p>Marca</p> <p>Modelo/Tensão</p>	<p>FORNO DE MICRO-ONDAS</p> <p>Electrolux do Brasil S.A</p>  <p>MI41S/127V</p>
<p>Mais eficiente</p>  <p>Menos eficiente</p>	
<p>Eficiência energética (%)</p>	<p>54,0</p>
<p>Modo Espera (Stand by) (kWh/dia)</p>	<p>0,03</p>
<p>Volume Total (litros)</p>	<p>31</p>
<p>Volume Útil (litros)</p>	<p>19</p>
<p>Requisitos de Avaliação da Conformidade para Forno de Micro-ondas. Instruções de instalação e recomendações de uso, leia o manual do aparelho.</p> <div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div data-bbox="252 1545 726 1724">  <p>PROCEL</p> <p>A05803901/A G0011401/002 A11302527/A G0015122/002</p> </div> <div data-bbox="821 1489 1005 1668">  <p>PROGRAMA BRASILEIRO DE ETIQUETAGEM</p> </div> <div data-bbox="1181 1332 1348 1657">  <p>INMETRO</p> <p>Segurança</p>  </div> </div> <p style="text-align: center;">Registro Inmetro nº 004469/2016</p>	

Image: Energy efficiency label for the Electrolux MI41S microwave oven, indicating an 'A' rating and 54.0% energy efficiency.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your Electrolux MI41S Microwave Oven is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, service, or to inquire about replacement parts, please contact Electrolux customer support. Contact details can typically be found on the official Electrolux website or on your product's packaging.