

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for Magnadyne RC5080, RV5070, RV5080, RV5090

Redi-Remote RTRC5080

Redi-Remote Replacement Remote Control Instruction Manual

Brand: Redi-Remote | **Model:** RTRC5080

INTRODUCTION

This document provides comprehensive instructions for the Redi-Remote replacement remote control, designed for seamless compatibility with specific Magnadyne entertainment units. This remote is a custom-built replacement and is not an original Magnadyne product. It is engineered to perform all functions of the original remote for the designated units.

Compatible Magnadyne Models: RC5080, RV5070, RV5080, RV5090

PRODUCT OVERVIEW

The Redi-Remote replacement remote control offers a straightforward solution for operating your compatible Magnadyne unit. It is pre-programmed and does not require any additional setup or programming to control auxiliary devices.

- **Dedicated Functionality:** This remote is specifically designed to control all functions of the compatible Magnadyne unit it replaces. It cannot be programmed to operate other auxiliary devices.
- **Compact Design:** The remote measures approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness.
- **Standard Operation:** This remote operates using infrared technology and does not feature laser pointers or LED lights.
- **Sliding Cover:** A protective cover is integrated over the lower half of the remote. This cover slides down to reveal additional control buttons.

SETUP

Battery Installation

The remote control requires four (4) AAA batteries for operation. These batteries are included with your purchase.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or lift the cover to open the compartment.
3. Insert four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

After battery installation, the remote is ready for use with your compatible Magnadyne unit.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your Redi-Remote replacement remote control. Refer to the image below for visual identification of the buttons.





Image 1: Front view of the Redi-Remote replacement remote control. The top section features power, volume, channel, and navigation buttons. The lower section, initially covered by a sliding panel, contains additional playback, setup, and numeric input controls. The remote is dark gray with blue and black buttons, and white text labels.

Top Panel Buttons

- **PWR (Power):** Turns the Magnadyne unit on or off.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input modes.
- **DISP (Display):** Toggles on-screen display information.
- **VOL + / VOL - (Volume):** Increases or decreases the audio volume.
- **MUTE:** Mutes or unmutes the audio output.
- **CH+ / CH- (Channel):** Changes the channel up or down.
- **MENU:** Accesses the main menu of the unit.
- **RECALL:** Recalls the previously selected channel or input.

Numeric Keypad

- **0-9, 100:** Used for direct channel selection or numeric input.
- **ENT (Enter):** Confirms numeric input or selections.

Sliding Panel Buttons (Lower Half)

Slide the lower cover down to access these additional functions.

- **MODE:** Cycles through different operational modes.
- **EJECT:** Ejects media from the unit (if applicable).
- **VOL TONE:** Adjusts volume tone settings.
- **SETUP:** Accesses system setup menus.
- **PLAY/PAUSE:** Starts or pauses media playback.
- **MUTE (Lower):** An additional mute button, typically for specific audio functions.
- **STOP:** Stops media playback.
- **Rewind (<<) / Fast Forward (>>):** Controls media playback speed or skips tracks.
- **AS/PS ELAPSE:** Function related to auto-scan/program scan or elapsed time display.
- **BAND:** Selects different radio bands (e.g., AM/FM).
- **Navigation Arrows (Up, Down, Left, Right):** Used for menu navigation.
- **ENTER (Center):** Confirms selections within menus.

- **REPEAT:** Repeats current track or playlist.
- **RANDOM:** Plays tracks in a random order.
- **ZOOM:** Zooms in or out on video or images.
- **SLOW:** Activates slow-motion playback.
- **EQ (Equalizer):** Adjusts audio equalizer settings.
- **Previous Track (|<) / Next Track (>|):** Skips to the previous or next track.
- **AUDIO:** Cycles through audio tracks or languages.
- **SUB.TT (Subtitle):** Toggles or selects subtitle options.
- **10/0:** Numeric input for specific functions (e.g., 10-key input).
- **10+:** Numeric input for specific functions (e.g., 10+ key input).

MAINTENANCE

Cleaning

To maintain the remote control's appearance and functionality:

- Wipe the remote with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

Battery Care

- Replace batteries when the remote's performance diminishes.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with new ones.
- **Line of Sight:** Ensure there is a clear line of sight between the remote control and the infrared sensor on your Magnadyne unit. Obstructions can block the signal.
- **Remote Sensor:** Verify that the infrared sensor on the Magnadyne unit is not obstructed or dirty.
- **Compatibility:** Confirm that your Magnadyne unit model is listed as compatible (RC5080, RV5070, RV5080, RV5090).

Buttons Not Functioning Correctly

- **Clean Buttons:** Ensure no dirt or debris is lodged around the buttons. Gently clean the remote surface.
- **Battery Check:** Weak batteries can sometimes cause intermittent button response. Replace batteries if necessary.

SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote

Model Number	RTRC5080
Compatible Devices	Magnadyne RC5080, RV5070, RV5080, RV5090 (DVD/Blu-ray Player functionality)
Connectivity Technology	Infrared
Power Source	4 x AAA Batteries (included)
Product Dimensions	Approximately 7.5 x 2.25 x 0.75 inches
Item Weight	5 ounces
ASIN	B076ZTBFC3

SUPPORT

For any concerns or questions regarding your Redi-Remote replacement remote control, please contact the seller directly through your purchase platform. They can provide assistance with product functionality and troubleshooting.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B076ZTBFC3>

More documents and user manuals: <https://manuals.plus/>