

[Manuals.plus](#) /

> [MY ARCADE](#) /

> MY ARCADE Super Gamepad DGUN-2960 Wireless Controller Instruction Manual

## MY ARCADE DGUN-2960

# MY ARCADE Super Gamepad DGUN-2960 Wireless Controller Instruction Manual

Model: DGUN-2960

## PRODUCT OVERVIEW

The MY ARCADE Super Gamepad is a wireless gaming controller designed to replace wired controllers for various Nintendo consoles. It offers wireless freedom and enhanced gaming features.

### Key Features:

- **Wireless Connectivity:** Enjoy gaming up to 25 feet away from your console without lag.
- **Extended Playtime:** Over 27 hours of gameplay on two AAA batteries (not included).
- **Ergonomic Design:** Provides comfortable grip and precise control for extended gaming sessions.
- **Home Button:** Quickly access the main game selection menu directly from the controller.
- **Turbo Button:** Assign turbo functionality to any action button for rapid input.

## PACKAGE CONTENTS

Ensure all items are present before proceeding with setup:

- MY ARCADE Super Gamepad (DGUN-2960)
- Wireless Adapter
- Instruction Manual (this document)



Image: Front view of the MY ARCADE Super Gamepad packaging, showing the controller and branding.



Image: Back view of the MY ARCADE Super Gamepad packaging, detailing features and contents in multiple languages.

## SETUP GUIDE

### 1. Install Batteries

The Super Gamepad requires two AAA batteries (not included). Open the battery compartment on the back of the controller and insert the batteries, ensuring correct polarity (+/-).

## 2. Connect Wireless Adapter

Plug the included wireless adapter into an available controller port on your compatible console (Nintendo SNES Classic, NES Classic, Super Famicom, Wii, or Wii U).

**Wireless connectivity up to 25 feet**  
**Powered by 2 AAA batteries (not included)**  
**27+ hours of playtime**



*Image: The MY ARCADE Super Gamepad shown alongside its compact wireless adapter, illustrating the wireless connection capability.*

## 3. Power On and Pair

Turn on your console. Press the power button on the Super Gamepad. The controller should automatically pair with the wireless adapter. An indicator light on the controller will confirm a successful connection.

## OPERATING INSTRUCTIONS

Familiarize yourself with the controller's buttons for optimal gameplay.

## Ergonomic design

**Home Button** to Game Selection Menu

**Turbo Button** assign to any action button



*Image: The MY ARCADE Super Gamepad, highlighting the Home button (house icon) and Turbo button for special functions.*

### Home Button:

Press the **Home button** (typically marked with a house icon) to return to the main game selection menu of your console. This eliminates the need to manually reset the console to change games.

### Turbo Button:

The **Turbo button** allows you to assign rapid-fire functionality to any action button. To activate:

1. Press and hold the **Turbo button**.
2. While holding Turbo, press the desired action button (e.g., A, B, X, Y) to which you want to assign rapid-fire.
3. Release both buttons. The assigned action button will now have turbo functionality.

To deactivate turbo for a button, repeat the process: hold Turbo, press the assigned action button, then release both.

## MAINTENANCE

Proper care will extend the life of your Super Gamepad.

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid abrasive cleaners or solvents.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** When the controller's performance degrades or it fails to power on, replace both AAA batteries with fresh ones.

## TROUBLESHOOTING

If you encounter issues, try these common solutions:

- **Controller Not Responding:**
  - Ensure batteries are correctly installed and not depleted. Replace if necessary.
  - Verify the wireless adapter is securely plugged into the console.
  - Confirm the controller is powered on.
  - Move closer to the console to ensure you are within the 25-foot wireless range.
- **Lag or Disconnections:**
  - Check for potential interference from other wireless devices.
  - Ensure the controller and adapter have a clear line of sight.
  - Replace batteries if they are low.
- **Buttons Not Functioning:**
  - Clean around the buttons to remove any debris.
  - Ensure the controller is properly paired.

## SPECIFICATIONS

Feature	Detail
Model Number	DGUN-2960
Brand	MY ARCADE
Connectivity	Wireless (Bluetooth)
Wireless Range	Up to 25 feet (7.6 meters)
Compatible Consoles	Nintendo SNES Classic, NES Classic, Super Famicom, Wii, Wii U
Power Source	2 x AAA Batteries (not included)
Battery Life	Over 27 hours of playtime
Product Dimensions	3.81 x 10.16 x 8.26 cm (1.5 x 4 x 3.25 inches)
Item Weight	136.08 g (4.8 oz)
Button Quantity	16
Color	Super NES Colors

## WARRANTY AND SUPPORT

---

### Warranty Information:

The MY ARCADE Super Gamepad comes with a **120-day warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

### Customer Support:

For technical assistance, troubleshooting, or warranty inquiries, please contact the manufacturer:

**Manufacturer:** DreamGEAR

**Contact Information:** TORRANCE, CA, 90501 US

You may also visit the official MY ARCADE website for additional resources and support.