

## Axess SPBT1074

# AXESS SPBT1074 Portable Bluetooth Speaker

## USER MANUAL

### Introduction

Thank you for purchasing the AXESS SPBT1074 Portable Bluetooth Speaker. This device is designed to provide high-quality audio playback from various sources, including Bluetooth-enabled devices, USB drives, Micro SD cards, and FM radio. It features a built-in rechargeable battery for portability and a subwoofer for enhanced bass. Please read this manual carefully to ensure proper use and to maximize your listening experience.

### Product Features

- Bluetooth enabled speaker for wireless streaming of music from other Bluetooth enabled devices, with a 30-foot range.
- Built-in FM radio, USB support, and Micro SD card support.
- Horn size: 1.4-inch, Horn output: 2 watts x 1.
- Subwoofer: 3-inch, Subwoofer output: 8 watts.
- Built-in 1500 mAh lithium rechargeable battery for 4-6 hours of play time.
- Built-in strap for easy portability.



Image: The AXESS SPBT1074 speaker, showcasing its compact design and integrated carrying strap.

## Package Contents

---

- AXESS SPBT1074 Portable Bluetooth Speaker
- USB Charging Cable
- User Manual (this document)

## Controls and Ports

---

Familiarize yourself with the control panel and ports located on the speaker.

# SPBT1074

## Infographic

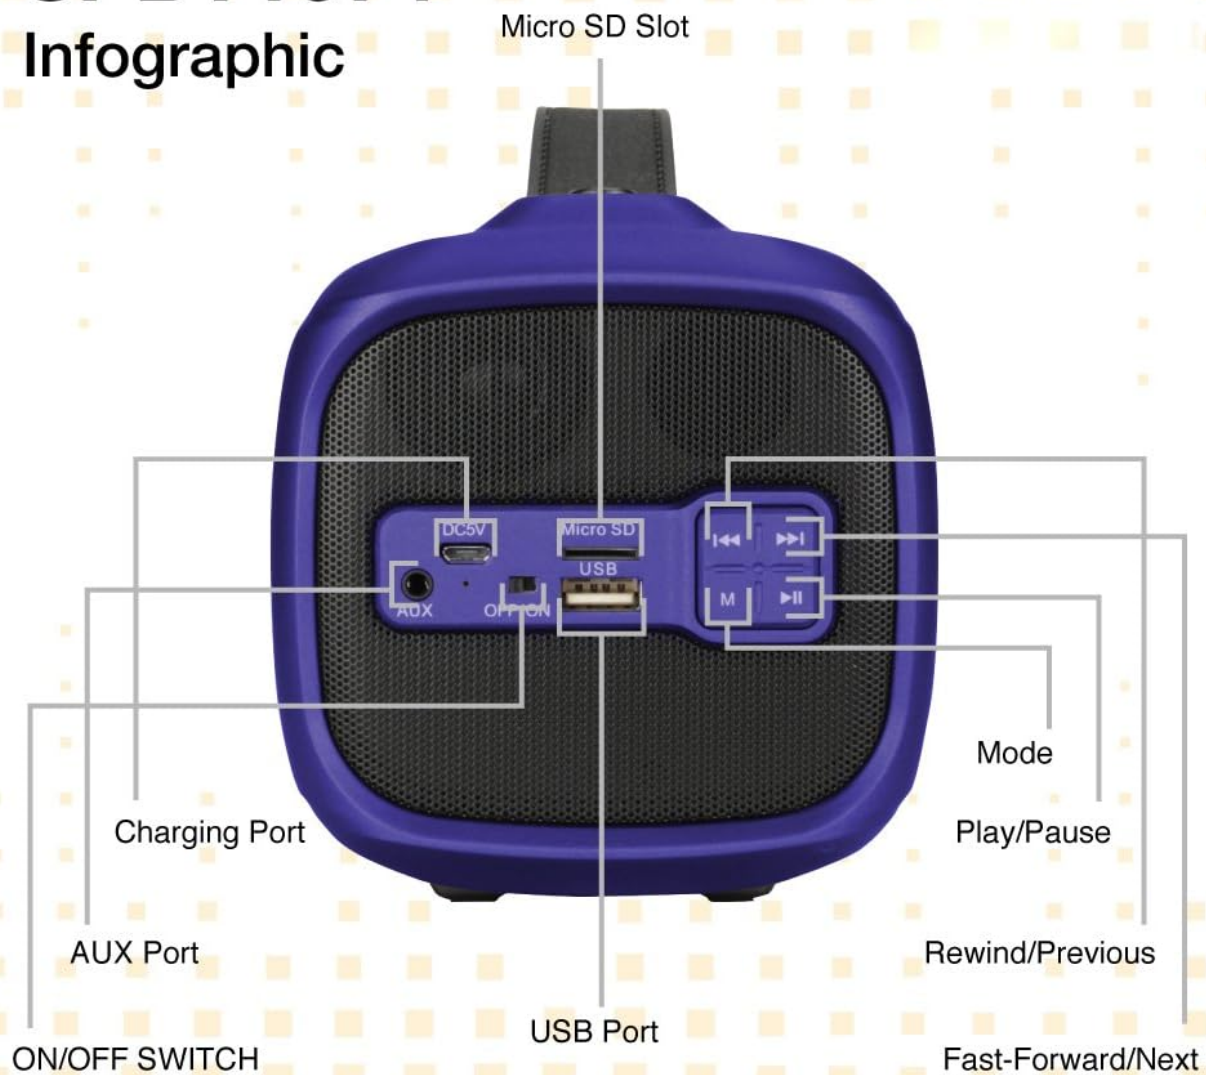


Image: Detailed infographic of the speaker's rear panel, highlighting the functions of each control and port.



Image: A close-up of the speaker's control panel, providing a clear view of the input ports and playback buttons.

1. **DC5V (Charging Port):** Connect the USB charging cable here to recharge the speaker's internal battery.
2. **Micro SD Slot:** Insert a Micro SD card (TF card) with MP3 audio files for direct playback.
3. **USB Port:** Insert a USB flash drive with MP3 audio files for direct playback.
4. **AUX Port:** Connect external audio devices (e.g., smartphones, MP3 players) using a 3.5mm audio cable.
5. **ON/OFF Switch:** Slide to power the speaker on or off.
6. **◀ ◀ (Previous/Rewind):** Short press to go to the previous track. Long press to rewind the current track (in USB/Micro SD mode) or decrease FM frequency (in FM mode).
7. **▶ ▶ (Play/Pause):** Press to play or pause audio playback. In FM mode, long press to auto-scan and save FM stations.
8. **▶ ▶ (Next/Fast-Forward):** Short press to go to the next track. Long press to fast-forward the current track (in USB/Micro SD mode) or increase FM frequency (in FM mode).
9. **M (Mode):** Press to switch between Bluetooth, FM Radio, USB, Micro SD, and AUX input modes.

## Setup

---

### 1. Initial Charging

Before first use, fully charge the speaker for approximately 3-4 hours. Connect the supplied USB charging cable to the DC5V port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate during charging and turn off when fully charged.

### 2. Powering On/Off

Slide the ON/OFF switch to the 'ON' position to power on the speaker. You will hear an audible prompt indicating the speaker is ready. Slide the switch to the 'OFF' position to power off the speaker.

## Operating Instructions

---

### Bluetooth Mode

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by an audible prompt.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for available Bluetooth devices and select 'SPBT1074' from the list.
4. Once paired, you will hear a confirmation tone. You can now stream audio wirelessly from your device to the speaker.
5. Use the speaker's Play/Pause, Previous/Rewind, and Next/Fast-Forward buttons, or your device's controls, to manage playback.

### FM Radio Mode

1. Power on the speaker and press the 'M' (Mode) button repeatedly until you hear the FM radio prompt.
2. Long press the Play/Pause (▶■ ■) button to initiate an automatic scan for FM stations. The speaker will scan and save all available stations.
3. Short press the Previous (◀◀) or Next (▶▶) buttons to navigate through the saved stations.
4. For manual tuning, long press the Previous (◀◀) or Next (▶▶) buttons to fine-tune the frequency.

### USB/Micro SD Card Mode

1. Power on the speaker.
2. Insert a USB flash drive or a Micro SD card (pre-loaded with MP3 audio files) into the respective port. The speaker will automatically switch to USB or Micro SD mode and begin playback.
3. If it does not switch automatically, press the 'M' (Mode) button to select the correct mode.
4. Use the Play/Pause, Previous/Rewind, and Next/Fast-Forward buttons to control playback.

### AUX Input Mode

1. Power on the speaker.
2. Connect one end of a 3.5mm audio cable (not included) to the AUX port on the speaker and the other end to the audio output jack of your external device.
3. Press the 'M' (Mode) button to switch to AUX mode.
4. Control audio playback directly from your connected external device.

## Charging the Battery

---

The AXESS SPBT1074 speaker is equipped with a built-in rechargeable lithium battery. When the battery is low, the speaker may emit an audible warning or the sound quality may degrade. To charge:

1. Connect the small end of the USB charging cable to the DC5V port on the speaker.
2. Connect the large end of the USB charging cable to a standard USB power source (e.g., a 5V USB wall adapter, computer USB port).
3. The charging indicator light will illuminate during charging.
4. Once fully charged, the indicator light will turn off. Disconnect the charging cable.

A full charge typically takes 3-4 hours and provides 4-6 hours of playback time, depending on volume level and usage.

## Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery periodically to maintain its lifespan.
- **Water Exposure:** This speaker is not waterproof. Avoid exposing it to rain, moisture, or splashing liquids.
- **Impact:** Avoid dropping the speaker or subjecting it to strong impacts, as this can damage internal components.

## Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker for at least 3-4 hours.
No sound.	Volume is too low; incorrect mode selected; device not connected properly.	Increase volume on speaker and connected device. Press 'M' to select correct mode. Reconnect Bluetooth device or AUX cable.
Bluetooth device cannot pair.	Speaker not in pairing mode; device too far; interference.	Ensure speaker is in Bluetooth mode. Move device closer to speaker (within 30 feet). Turn off other Bluetooth devices.
Poor FM radio reception.	Weak signal; environmental interference.	Reposition the speaker. Try auto-scanning again.
USB/Micro SD playback issues.	Unsupported file format; corrupted files; improper insertion.	Ensure files are MP3 format. Reinsert the USB drive/Micro SD card. Try a different USB drive/Micro SD card.

## Specifications

- **Model:** SPBT1074
- **Brand:** Axess
- **Speaker Type:** Subwoofer

- **Horn Size:** 1.4 inches
- **Horn Output:** 2W x 1
- **Subwoofer Size:** 3 inches
- **Subwoofer Output:** 8W
- **Total Wattage:** 8 watts
- **Bluetooth Range:** Up to 30 feet (10 meters)
- **Battery:** 1500 mAh Lithium Ion (rechargeable)
- **Play Time:** 4-6 hours (approx.)
- **Charging Time:** 3-4 hours (approx.)
- **Input Ports:** DC5V (charging), Micro SD, USB, AUX (3.5mm)
- **Audio Output Mode:** Stereo
- **Product Dimensions:** 26.04 x 9.53 x 8.89 cm
- **Item Weight:** 635 g

Safety Information


- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble, repair, or modify the unit. This will void the warranty and may cause damage or injury.
- Keep the speaker away from strong magnetic fields.
- Do not use the speaker while driving or operating heavy machinery.
- Dispose of the battery and speaker responsibly according to local regulations. Do not dispose of in household waste.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.






Warranty and Support

This product is covered by a standard manufacturer's warranty. For specific warranty terms, conditions, and support inquiries, please refer to the documentation provided with your purchase or contact Axess customer service. Keep your proof of purchase for warranty claims.

© 2023 Axess. All rights reserved.

Related Documents - SPBT1074

	<p><a href="#">AXESS SPBT1076 Bluetooth Media Speaker User Manual</a></p> <p>User manual for the AXESS SPBT1076 Bluetooth Media Speaker, detailing features, specifications, operation, and charging instructions.</p>
---	--

	<p><a href="#">Axess MPBT6506 Double 4" Subwoofer Media Player Speaker User Manual</a></p> <p>User manual for the Axess MPBT6506 Double 4" Subwoofer Media Player Speaker, detailing specifications, features, and operating instructions for Bluetooth, TF/MicroSD, USB, AUX, and MIC modes. Includes safety information and product details.</p>
	<p><a href="#">Axess SPBT1032 Portable Indoor/Outdoor Hi-Fi Cylinder Speaker User Manual</a></p> <p>User manual for the Axess SPBT1032, a portable indoor/outdoor Hi-Fi cylinder speaker with Bluetooth compatibility, 5.5-inch subwoofer, and various playback options including USB, SD card, and FM radio.</p>
	<p><a href="#">Axess 23.6" LED TV Operating Instructions Manual</a></p> <p>Comprehensive operating instructions for the Axess 23.6-inch LED Television, covering setup, features, remote control, and troubleshooting. Learn how to use your Axess LED TV safely and effectively.</p>
	<p><a href="#">Axess PR3206 AM/FM Radio with Media Player User Manual</a></p> <p>User manual for the Axess PR3206 AM/FM Radio with Media Player, detailing operation instructions, features, and specifications.</p>
	<p><a href="#">Axess PABT6020 Double 15" Woofer Bluetooth Speaker User Manual</a></p> <p>Comprehensive user manual for the Axess PABT6020 Double 15" Woofer Bluetooth Speaker. Provides detailed information on specifications, panel functions, operation of microphones, Bluetooth connectivity, FM radio, and recording features.</p>