



Manuals.plus /

› Spares2go /

› Spares2go Fagor Washing Machine Door Lock - Model 07-WDL-004 Instruction Manual

Spares2go 07-WDL-004

Spares2go Fagor Washing Machine Door Lock - Model 07-WDL-004

Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of the Spares2go replacement door lock for Fagor washing machines, model 07-WDL-004. Please read these instructions carefully before attempting any installation or repair to ensure safe and correct usage.

2. SAFETY INFORMATION

WARNING: Risk of Electric Shock. Always disconnect the washing machine from the main power supply before attempting any installation, maintenance, or repair.

- Ensure the appliance is completely unplugged or the circuit breaker is switched off before starting work.
- If you are unsure about any step, it is recommended to consult a qualified appliance repair technician.
- Wear appropriate personal protective equipment, such as gloves, if necessary.
- Handle the new part carefully to avoid damage.

3. PRODUCT OVERVIEW

This is a premium quality replacement door lock switch designed for various Fagor washing machine models. It ensures the washing machine door remains securely locked during operation and unlocks when the cycle is complete.



Image 1: Front view of the Spares2go Fagor Washing Machine Door Lock (Model 07-WDL-004).



Image 2: Side view of the Spares2go Fagor Washing Machine Door Lock, showing connection points.

Compatible Fagor Washing Machine Models:

This door lock is compatible with a wide range of Fagor washing machine models, including but not limited to:

- 1F-1148I, 1F-1148IN, 1F206, 1F2609PN, 1F-2611, 1F-3611IT, 1FE1047S, 1L-209R, 1L270R, 2F107CKD, 2F-2609, 2F3609CKD, 2F-3611IT, 2FS-3611IT, 2FU-3613LX, 3F1609, 3F-211, 3F3608IT, 3F-3612IT, CL-510T, F2710LX, F-3609LA, F6012, F-7210, F7210IT, FA-5382, FE-10599LA, V, FE-2010, FE205, FE2109, FE-417, FE-6010, FE-7014, FES-1148, FF-1105, FF-111X, FF-136, FF1750, FF-207, FF-2105X, FF-2306X, FF-3611, FF-5010
- FF-530, FF-6013/WR, FF60131, FF-6213, FF-6214, FF-623, FF-65, FF70141, FF-75, FI1750, FS-3611IT, FSE-6212IT, FU-3611IT, FU-3613X, FUM-6126LX, FU-6146X, FUS-3611IT, FWD612IT, L-192C, L-3082R, L4082P, L5110P, L7110S, L9081M, LD-1050, LD-2005, LD-2120, LD-550, LD-9081M, LF45, LF4530, LFA1000, LFB310, WFA-7110, WL1000, WM5003

4. INSTALLATION INSTRUCTIONS

This section outlines the general steps for replacing a washing machine door lock. Specific procedures may vary depending on your washing machine model. Always refer to your washing machine's service manual for detailed instructions if available.

1. **Disconnect Power:** Unplug the washing machine from the electrical outlet or switch off the circuit breaker for the appliance. Verify that there is no power to the machine.
2. **Access the Door Lock:** Depending on your washing machine model, you may need to remove the front panel, top panel, or the door seal to access the door lock mechanism. This often involves unscrewing retaining screws and carefully prying off panels.
3. **Remove the Old Door Lock:**
 - Locate the existing door lock. It is typically mounted to the front frame of the washing machine, near the door opening.
 - Disconnect the electrical wiring harness from the old lock. Note the position of the wires or take a photo for reference.
 - Unscrew any mounting screws or release any clips holding the old lock in place. Carefully remove the old lock.
4. **Install the New Door Lock:**
 - Position the new Spares2go door lock (Model 07-WDL-004) into the opening, ensuring it aligns correctly with the mounting points.
 - Secure the new lock with the mounting screws or clips that were removed earlier. Ensure it is firmly in place.
 - Reconnect the electrical wiring harness to the new door lock. Ensure all connections are secure and correctly matched.
5. **Reassemble the Washing Machine:** Reattach any panels or the door seal that were removed to access the lock. Ensure all screws are tightened and panels are securely fitted.
6. **Test the Appliance:**
 - Reconnect the washing machine to the main power supply.
 - Close the washing machine door and select a short wash cycle.
 - Observe if the door locks correctly at the beginning of the cycle and unlocks at the end. Listen for any unusual noises.
 - If the door does not lock or unlock, or if any issues arise, refer to the troubleshooting section or seek professional assistance.

5. OPERATING INSTRUCTIONS

The door lock operates automatically as part of the washing machine's cycle. Once a wash program is selected and started, the door lock will engage to prevent the door from being opened during operation. At the end of the wash cycle, or after a safe period, the door lock will disengage, allowing the door to be opened.

- Ensure the washing machine door is fully closed before starting a cycle.
- Do not attempt to force the door open while the lock is engaged, as this can damage the lock mechanism or the door.
- Wait for the wash cycle to complete and the door to unlock automatically before opening.

6. MAINTENANCE

The Spares2go door lock is designed for durability and requires minimal maintenance. However, following these general guidelines can help prolong its lifespan:

- **Keep Clean:** Periodically inspect the area around the door lock and the door strike for any lint, debris,

or detergent residue. Clean with a soft, damp cloth if necessary.

- **Avoid Forcing:** Never force the washing machine door open or closed. If the door is stiff or not closing properly, investigate the cause rather than applying excessive force.
- **Regular Inspection:** If you notice any unusual sounds or difficulty with the door locking/unlocking, inspect the lock for visible damage or wear.

7. TROUBLESHOOTING

If you encounter issues with your washing machine door lock, consider the following common troubleshooting steps:

Problem	Possible Cause	Solution
Door does not lock.	<ul style="list-style-type: none">◦ Door not fully closed.◦ Obstruction preventing door closure.◦ Faulty door lock switch.◦ Wiring issue.	<ul style="list-style-type: none">◦ Ensure door is firmly shut.◦ Check for clothes or debris caught in the door seal.◦ Inspect the lock for damage. If faulty, replacement may be needed.◦ Check wiring connections (with power disconnected).
Door does not unlock after cycle.	<ul style="list-style-type: none">◦ Cycle not fully completed.◦ Residual water in the drum.◦ Faulty door lock switch.◦ Control board issue.	<ul style="list-style-type: none">◦ Wait a few minutes after the cycle ends.◦ Run a drain cycle if water is present.◦ If the lock remains stuck, disconnect power and wait. If problem persists, professional inspection is advised.
Unusual noise from door lock area.	<ul style="list-style-type: none">◦ Loose mounting.◦ Internal component wear.	<ul style="list-style-type: none">◦ Check mounting screws for tightness (with power disconnected).◦ If noise persists, the lock may be failing and require replacement.

For persistent issues, it is recommended to contact a qualified appliance repair technician.

8. SPECIFICATIONS

Item Model Number:	07-WDL-004
Manufacturer:	SPARES2GO
Item Weight:	30 g
Package Dimensions:	8 x 5 x 2 cm
Country of Origin:	China

9. WARRANTY INFORMATION

Specific warranty details for this replacement part are typically provided by the seller or manufacturer at the time of purchase. Please retain your proof of purchase for any warranty claims. For detailed warranty terms and conditions, please refer to the documentation provided with your purchase or contact Spares2go directly.

10. SUPPORT

If you require further assistance, have questions regarding installation, or need to report a defective part, please contact the seller from whom you purchased this product. You may also visit the official Spares2go website for general support and product information.

For direct support, please refer to the contact information provided on your purchase invoice or the Spares2go packaging.