



Manuals.plus /

- › Exost /
- › Exost 20143 RC 360 Mini Flip 1:34 Remote Control Car User Manual

Exost 20143

Exost 20143 RC 360 Mini Flip 1:34 Remote Control Car User Manual

Model: 20143 | Brand: Exost

INTRODUCTION

The Exost 360 Mini Flip is a compact and robust stunt car designed for dynamic play. This 1:34 scale remote control vehicle features two distinct body designs and is capable of performing impressive 360-degree spins and driving on both sides. Its intuitive remote control allows for full directional movement: forward, backward, left, and right. The car is conveniently rechargeable via the controller, ensuring continuous fun. The 360 Mini Flip is engineered to effortlessly overcome various obstacles, offering an approximate control range of 8 meters.



Image: The Exost 360 Mini Flip Remote Control Car in red, showcasing its compact design and large wheels.

SAFETY WARNINGS

Warning: This product contains toys. Adult supervision is recommended during use. Contains small parts which may pose a choking hazard for young children.

Always operate the car on a safe surface, away from hazards, and be mindful of other people and objects in the vicinity to prevent accidents.

SETUP

1. **Unpack the Car:** Carefully remove the Exost 360 Mini Flip car and its remote control from the packaging.
2. **Prepare the Car:** Place the car on a flat, stable surface.
3. **Install Controller Batteries:** The remote controller requires 4 x AA batteries (not included). Open the battery compartment on the controller, insert the batteries according to the polarity markings, and close the compartment securely.
4. **Power On and Connect:** Turn on the remote controller. Then, turn on the car. The controller and car should automatically connect. If they do not connect, refer to the troubleshooting section.



Image: Side view of the Exost 360 Mini Flip Remote Control Car, highlighting its robust wheel design.

OPERATING INSTRUCTIONS

Once the car and controller are connected, you can begin operating your Exost 360 Mini Flip.

- **Steering:** Use the joysticks or directional controls on the remote to steer the car.
- **Forward/Backward:** Push the appropriate control forward to move the car forward, and backward to move it in reverse.
- **Left/Right:** Use the directional controls to turn the car left or right.
- **360-Degree Spins:** The car is designed to perform 360-degree spins. Experiment with simultaneous left/right and forward/backward inputs to achieve this stunt.
- **Driving on Both Sides:** The unique design allows the car to continue driving even after flipping over. No need to manually right the car after a stunt.



Image: The Exost 360 Mini Flip Remote Control Car in red, captured mid-stunt with motion blur, demonstrating its agility.

Your browser does not support the video tag.

Video: An official product video demonstrating the features and stunts of a similar Exost 360 Mini Flip model (pink/white variant).

CHARGING THE CAR

The Exost 360 Mini Flip car is equipped with a rechargeable battery. To charge the car:

1. Ensure the remote controller has sufficient battery power (4 x AA batteries).
2. Locate the charging port on the car and the charging cable on the controller.
3. Connect the car to the controller using the integrated charging cable.
4. Allow the car to charge until the battery is full. Refer to the indicator light on the car or controller (if available) for charging status.
5. Once charged, disconnect the car from the controller.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the car and controller. Avoid using water or chemical cleaners, as they can damage electronic components.
- **Storage:** Store the car and controller in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** For optimal battery life, fully charge the car before first use and after each play session. Remove AA batteries from the controller if it will not be used for an extended period.
- **Inspection:** Periodically inspect the car for any loose parts, damage, or wear and tear. Do not operate if damaged.

TROUBLESHOOTING

- **Car Not Responding:**
 - Ensure both the car and controller are turned on.
 - Check if the car's battery is charged.
 - Replace the AA batteries in the remote controller.
 - Ensure the car and controller are within the operating range (approx. 8 meters).
- **Poor Performance:**
 - Charge the car's battery fully.
 - Ensure the play surface is suitable and free of excessive obstacles.
- **Car Not Charging:**
 - Verify that the charging cable is securely connected to both the car and the controller.
 - Ensure the controller has fresh AA batteries to provide power for charging.

SPECIFICATIONS

Feature	Detail
Brand	Exost
Model Number	20143
Scale	1:34
Color	Red
Material	Plastic
Product Dimensions	9.5 x 7.5 x 4 cm
Item Weight	249 g
Power Source	Battery (Rechargeable car battery included; 4x AA batteries for controller, not included)
Maximum Speed	8 Kilometers per hour
Manufacturer Recommended Age	5 - 75 years
Special Features	Electric, 360-degree spins, drives on two sides

WARRANTY AND SUPPORT

This Exost product comes with a **1-year manufacturer's warranty** covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For further assistance, technical support, or warranty inquiries, please refer to the contact information provided on the product packaging or visit the official Exost website. You may also contact the retailer where the product was purchased.