

UBay 8541712968

Universal Remote Control Instruction Manual

Model: 8541712968 | Brand: UBay

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your UBay Universal Remote Control. Designed as a high-quality replacement, this remote is pre-programmed for immediate use with a wide range of Insignia TVs, eliminating the need for complex programming.

PRODUCT OVERVIEW

The UBay Universal Remote Control offers 100% same functions as the original Insignia TV remote. It is compatible with almost all Insignia TV models, including LED LCD HDTVs. Please note that this remote does not work with Insignia Fire TVs.





Figure 1: Front view of the UBay Universal Remote Control.



Universal Insignia TV Remote

- Universal TV Remote Control Compatible with ALL Insignia LCD LED Plasma TVs
- No Set up or Programming Required
- 100% same functions as the original remote
- Only does Not work for Insignia fire TV

Figure 2: UBay Universal Remote Control highlighting key features.

SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period.
- Dispose of used batteries according to local regulations.

SETUP

Battery Installation

The UBay Universal Remote Control requires two AAA batteries (not included). Follow these steps for installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.

4. Close the battery cover by sliding it back into place until it clicks securely.



Figure 3: Battery compartment on the back of the remote control.

Once batteries are installed, the remote is pre-programmed and ready to use immediately with your Insignia TV. No additional programming or setup is required.

OPERATING THE REMOTE CONTROL

This remote provides full functionality for your Insignia TV. Below are common functions:

Button	Function
Power (Red Button)	Turns the TV on or off.
Input	Cycles through available input sources (HDMI, AV, etc.).
Number Pad (0-9)	Direct channel selection.
VOL +/-	Adjusts the volume level.
CH +/-	Changes the TV channel.
Mute	Mutes or unmutes the TV audio.
Menu	Accesses the TV's main menu.
Navigation Arrows (Up/Down/Left/Right)	Navigates through menus and options.
Enter	Confirms selections in menus.
Exit	Exits the current menu or function.
Info*	Displays program information.
Aspect	Adjusts the screen aspect ratio.
CCD	Activates Closed Captioning.
Sleep	Sets a sleep timer for the TV.
Favorite	Accesses favorite channels.
MTS/SAP	Selects Multi-channel Television Sound/Secondary Audio Program.
Picture	Adjusts picture settings.
Audio	Adjusts audio settings.
Media Playback Controls	Includes Play, Pause, Stop, Fast Forward, Rewind, Next Track, Previous Track.

MAINTENANCE

Cleaning the Remote

To maintain the remote control's performance and appearance, regularly wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with new AAA batteries.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor.
- **Remote Sensor:** Ensure the TV's remote sensor is clean and not blocked.
- **Compatibility:** Verify that your TV is an Insignia brand TV. This remote is specifically designed for Insignia TVs and does not work with Insignia Fire TVs.

SPECIFICATIONS

Feature	Detail
Brand	UBay
Model Number	8541712968
Product Dimensions	1.97 x 1.97 x 5.91 inches
Item Weight	1.76 ounces
Color	Black
Special Feature	Universal
Max Number of Supported Devices	1
Compatible Devices	Television (specifically Insignia TVs, excluding Fire TV models)
Batteries Required	2 x AAA (not included)

WARRANTY AND SUPPORT

For product support, please refer to the official Insignia products website or contact their support lines:

- **Website:** www.insigniaproducts.com

- **US & Canada Market:** 877-467-4289
- **Mexico Market:** 01.800.926.3000

This product is manufactured by UBay.

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for this product at this time.

© 2025 UBay. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07739GGK3>

More documents and user manuals: <https://manuals.plus/>