Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- beFree Sound /
- > beFree Sound 15 Inch Rechargeable Bluetooth PA Speaker System BFS-5700 User Manual

beFree Sound BFS-5700

beFree Sound 15 Inch Rechargeable Bluetooth PA Speaker System BFS-5700 User Manual

Model: BFS-5700 | Brand: beFree Sound

1. Introduction

This manual provides detailed instructions for the safe and efficient operation of your beFree Sound 15 Inch Rechargeable Bluetooth PA Speaker System, Model BFS-5700. Please read this manual thoroughly before using the product and retain it for future reference.

2. IMPORTANT SAFETY INFORMATION

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, visit www.P65Warnings.ca.gov.

- Do not open the speaker enclosure. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.
- Keep the speaker away from water or moisture to prevent electric shock.
- Ensure proper ventilation. Do not block any ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the speaker during lightning storms or when unused for long periods.
- Position the speaker on a stable surface to prevent falls.
- Do not expose the battery to excessive heat such as sunshine, fire, or the like.

3. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- beFree Sound 15 Inch PA Speaker System
- Wireless Microphone
- · Remote Control
- AC Power Cable



Image 3.1: The beFree Sound 15 Inch PA Speaker System shown with its retractable handle, wheels, and included accessories: a wireless microphone and remote control.





Image 3.2: The included wireless microphone, featuring an on/off switch for convenient use.





Image 3.3: The remote control, providing access to various functions such as volume, track control, and mode selection.

4. Product Overview			
4.1 Front Panel			



Image 4.1: Front view of the beFree Sound PA Speaker, highlighting the 15-inch woofer, control panel, and blue accents.

- 15-inch Woofer: Main audio output with sound-reactive lighting.
- Control Panel: Digital display and buttons for mode selection, playback, and volume.
- Blue Accents: Decorative elements on the speaker grille.

4.2 Rear Panel and Controls



Image 4.2: Detailed view of the rear control panel, showing various inputs, outputs, and adjustment knobs.

- 1. **USB Port:** For USB drive playback.
- 2. TF Card Slot (SD): For SD card playback.
- 3. AUX Input: For connecting external audio devices via a 3.5mm cable.
- 4. **MIC VOL:** Adjusts the volume of the microphone input.
- 5. **ECHO:** Adjusts the echo effect for the microphone.
- 6. BASS: Adjusts the bass level of the audio output.

- 7. **TREBLE:** Adjusts the treble level of the audio output.
- 8. **VOLUME:** Master volume control for the speaker.
- 9. POWER/LOW Indicator: Indicates power status and low battery.
- 10. **AC Input:** For connecting the speaker to a power outlet for charging and operation.
- 11. **DC 12V In:** For external 12V DC power source.
- 12. **ANT (Antenna):** Extend for improved FM radio reception.
- 13. **POWER Switch:** Turns the speaker on or off.
- 14. **LIGHT POWER Switch:** Turns the sound-reactive woofer light on or off.
- 15. **MIC IN:** 6.35mm input for wired microphones.
- 16. CHAR/FULL Indicator: Indicates charging status (Charging/Full).

4.3 Mobility Features



Image 4.3: Side view showing the retractable handle and integrated wheels for easy transport.

- Retractable Handle: For easy pulling and transport.
- Wheels: Integrated wheels for convenient mobility.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the speaker's internal battery. Connect the AC power cable to the speaker's AC input and then to a standard wall outlet. The CHAR/FULL indicator light will show the charging status.

5.2 Powering On/Off

Locate the POWER switch on the rear panel. Flip the switch to the "ON" position to power on the speaker. Flip it to "OFF" to power off.

5.3 Speaker Placement

Place the speaker on a stable, flat surface. For optimal sound dispersion, position it in an open area, away from obstructions.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Connection

- 1. Power on the speaker. The speaker will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon on the display.
- 2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
- 3. Select "beFree Sound" from the list of devices.
- 4. Once paired, the speaker will emit a confirmation tone, and the Bluetooth icon will stop flashing.
- 5. You can now play audio from your device through the speaker.

6.2 USB/SD Card Playback

- 1. Insert a USB drive into the USB port or an SD card into the TF card slot on the rear panel.
- 2. The speaker will automatically switch to USB/SD mode and begin playing audio files. If not, press the "MODE" button on the control panel or remote to select USB/SD mode.
- 3. Use the playback controls (Play/Pause, Next/Previous Track) on the speaker or remote to manage your music.

6.3 FM Radio

- 1. Extend the antenna on the rear panel for better reception.
- 2. Press the "MODE" button on the control panel or remote to select FM Radio mode.
- 3. Press the "SCAN" button (often combined with Play/Pause) to automatically scan and save available FM stations.
- 4. Use the "CH+" and "CH-" buttons to navigate through the saved stations.

6.4 Microphone Usage

- 1. For the wireless microphone, ensure it is powered on. It should automatically connect to the speaker.
- 2. For a wired microphone, connect it to the "MIC IN" jack on the rear panel.
- 3. Adjust the "MIC VOL" knob to control the microphone's volume.
- 4. Use the "ECHO" knob to add an echo effect to the microphone's output.

6.5 Audio Adjustments and Light Feature

• Volume Control: Use the main "VOLUME" knob on the rear panel or the "VOL+" / "VOL-" buttons on

the remote to adjust the overall speaker volume.

- Bass and Treble: Adjust the "BASS" and "TREBLE" knobs on the rear panel to fine-tune the audio's low and high frequencies.
- **Sound Reactive Light:** The woofer features an internal light that reacts to the music. Use the "LIGHT POWER" switch on the rear panel to turn this feature on or off.



Image 6.1: The 15-inch woofer with its sound-reactive light illuminated in red, demonstrating the visual effect.

7. MAINTENANCE

- **Cleaning:** Wipe the speaker's exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the speaker regularly, especially if it will be stored for an extended period.
- Storage: Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is discharged; Power switch is off; AC cable not connected.	Charge the battery; Turn the power switch ON; Ensure AC cable is securely connected.
No sound	Volume is too low; Incorrect input mode selected; Device not connected properly.	Increase volume; Select correct mode (Bluetooth, USB, SD, FM, AUX); Reconnect device.
Bluetooth not pairing	Speaker not in pairing mode; Device Bluetooth is off; Speaker too far from device.	Ensure speaker is in Bluetooth mode; Turn on device Bluetooth; Move device closer to speaker.
Wireless microphone not working	Microphone is off; Microphone battery is low; MIC VOL is too low.	Turn on microphone; Replace microphone batteries; Increase MIC VOL.
Wheels not rolling smoothly	Obstruction in wheels; Damaged wheels.	Check for and remove any debris; If damaged, contact support for assistance.

9. SPECIFICATIONS

Feature	Detail
Model Name	BFS-5700
Speaker Type	Portable PA Speaker
Woofer Diameter	15 Inches
Connectivity Technology	Bluetooth, USB, SD Card, AUX, FM Radio
Wireless Communication Technology	Bluetooth
Power Source	Battery Powered (Rechargeable)
Output Wattage	2500 Watts P.M.P.O.
Included Components	Wireless Microphone, Remote Control
Special Features	Sound Reactive Light, Retractable Handle, Wheels
Product Dimensions	14"D x 14"W x 27"H
Item Weight	32.9 pounds
Material	Metal, Plastic

10. WARRANTY AND SUPPORT

This beFree Sound product comes with a Limited Warranty. For specific details regarding warranty

coverage, duration, and terms, please refer to the warranty card included with your purchase or contact beFree Sound customer support.

For technical assistance, troubleshooting, or to inquire about replacement parts, please contact beFree Sound customer support through their official website or the contact information provided with your product documentation.

© 2025 beFree Sound. All rights reserved.

This manual is subject to change without notice.

Related Documents - BFS-5700



beFree BFS-K10 Portable Bluetooth Speaker System User Manual

User manual for the beFree BFS-K10 portable Bluetooth 10-inch double subwoofer speaker system. Includes package contents, control panel descriptions, microphone and remote details, safety precautions, and specifications.



BeFree Sound BFS-400 Blue 5.1 Channel Surround Sound BT Speaker System User Manual

This user manual provides instructions for setting up and using the BeFree Sound BFS-400 Blue 5.1 Channel Surround Sound BT Speaker System, including speaker connection, remote control operation, and speaker positioning.



BeFree Sound BFS-400 Blue 5.1 Channel Surround Sound BT Speaker System User Manual

User manual for the BeFree Sound BFS-400 Blue 5.1 Channel Surround Sound BT Speaker System, covering specifications, cautions, package contents, Bluetooth connectivity, system connection diagrams, front panel controls, remote control functions, and speaker positioning.



beFree Sound BFS-9160 Portable Bluetooth Speaker User Manual

User manual for the beFree Sound BFS-9160, a 12-inch portable Bluetooth double subwoofer speaker system. Includes setup, features, controls, and safety information.



BeFree BFS-6700 Bluetooth Portable Speaker with Party Lights - Instruction Manual

Comprehensive instruction manual for the BeFree BFS-6700 portable Bluetooth speaker. Learn how to pair devices, use front panel controls, rear panel ports, and the remote control for this 10-inch subwoofer speaker with FM radio and party lights.