#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- vidaXL /
- vidaXL Tempered Glass TV/Monitor Riser Instruction Manual (Model 244135)

#### vidaXL 244135

# vidaXL Tempered Glass TV/Monitor Riser Instruction Manual

Model: 244135 | Brand: vidaXL

# 1. Introduction

This instruction manual provides essential information for the safe and effective use of your vidaXL Tempered Glass TV/Monitor Riser. Please read this manual thoroughly before assembly and use, and retain it for future reference.

The vidaXL TV/Monitor Riser is designed to elevate your display, promoting a more ergonomic viewing angle and helping to reduce neck and back strain. Its durable tempered glass construction offers a sleek, modern aesthetic suitable for various environments.

# 2. SAFETY INFORMATION


WARNING: This product comes with a California Proposition 65 warning for potential exposure to certain chemicals. Always practice safety when using any multimedia device.

To prevent serious injury or death from furniture tip-over:

- NEVER allow children to stand, climb, or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall.

# **A WARNING**



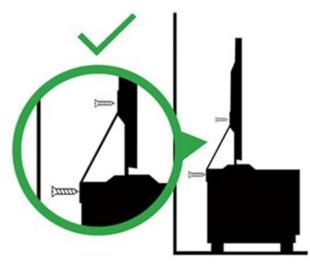

# Children have died from furniture tipover.

- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall.

Image: Safety warning regarding furniture tip-over, advising to secure televisions with an anchor device or wall mount.

### 3. PRODUCT FEATURES

- **Versatile Usage:** This stand can be used as a riser for desktop monitors, televisions, laptops, DVD players, game consoles, and other multimedia equipment.
- **Durable Material:** Constructed from tempered glass, ensuring long-term durability. The smooth black surface is easy to clean with a damp cloth.
- Enhanced Viewing: Elevates your display to a better angle, reducing neck and back strain for a

more comfortable experience.

 Stylish Design: Features a streamlined black design that adds a modern touch to any living or workspace.

# 4. PACKAGE CONTENTS

Upon unpacking, please ensure all the following components are present:

- vidaXL TV Stand (Tempered Glass Top)
- Support Pillars (Quantity: 4)
- · Screws and Washers for assembly

# 5. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the vidaXL Tempered Glass TV/Monitor Riser is straightforward. Follow these steps:

- 1. Carefully unbox all components and place them on a clean, flat surface.
- 2. Identify the tempered glass top and the four support pillars.
- 3. Attach each support pillar to the designated corners on the underside of the glass top using the provided screws and washers. Ensure they are securely fastened but do not overtighten.
- 4. Place the assembled riser on your desired surface.



Image: Front view of the vidaXL Tempered Glass TV/Monitor Riser.



 $Image: The \ vida XL \ monitor \ riser \ in \ use, \ elevating \ a \ computer \ monitor \ on \ a \ desk.$ 

# **Assembly Demonstration Video**

Your browser does not support the video tag.

Video: This video demonstrates the assembly process for a similar tempered glass monitor stand, showing how to attach the metal pillars to the glass top.

# 6. Usage Guidelines

- Place your monitor, TV, or laptop centrally on the glass surface to ensure even weight distribution.
- The riser has a weight load capacity of 17.75 pounds. Do not exceed this limit.
- Ensure the surface where the riser is placed is stable and level.

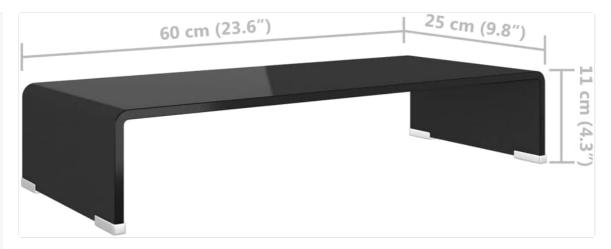


Image: Diagram showing the dimensions of the vidaXL Tempered Glass TV/Monitor Riser: 23.6 inches (60 cm) length, 9.8 inches (25 cm) width, and 4.3 inches (11 cm) height.

# 7. CARE AND MAINTENANCE

To maintain the appearance and longevity of your vidaXL TV/Monitor Riser:

- Clean the tempered glass surface with a damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- Regularly check the tightness of the support pillar screws to ensure stability.
- Avoid placing extremely hot or cold items directly on the glass surface without protection.

#### 8. TROUBLESHOOTING

If you encounter any issues with your vidaXL TV/Monitor Riser, consider the following:

- **Instability:** Ensure all support pillars are securely tightened. Verify the surface on which the riser is placed is flat and stable.
- Scratches on Glass: Tempered glass is durable but not scratch-proof. Avoid dragging sharp or heavy objects across the surface.

### 9. Specifications

Feature	Detail
Brand	vidaXL
Model Number	244135
Material	Tempered Glass

Color	Black
Product Dimensions	23.62 x 9.84 x 4.33 inches (60 x 25 x 11 cm)
Item Weight	12.34 pounds (5.61 kg)
Weight Load Capacity	17.75 pounds
Product Care Instructions	Wipe with Damp Cloth

# 10. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the retailer's policy or contact vidaXL directly through their official website or customer service channels. Keep your proof of purchase for any warranty claims.

 
© 2025 vidaXL. All rights reserved.

#### **Related Documents - 244135**




# VidaXL Extended Producer Responsibility (EPR) Guide

Learn about VidaXL's commitment to Extended Producer Responsibility (EPR) for EEE and textile waste. Discover recycling information, obligations, and partners.



#### vidaXL Garden Shed Assembly Instructions

 Comprehensive assembly instructions for the vidaXL Garden Shed, including a parts list and step-by-step visual guides. SKU: 46363.



# VidaXL Gabion Installation and Safety Guide

This comprehensive guide from vidaXL provides essential safety warnings and step-by-step assembly instructions for gabion structures, ensuring proper installation and use. Covers multiple languages.

