

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Victrola](#) /

> [Victrola VTA-750B+-MAH 7-in-1 Nostalgic Bluetooth Record Player User Manual](#)

Victrola VTA-750B+-MAH

Victrola VTA-750B+-MAH 7-in-1 Nostalgic Bluetooth Record Player

Model: VTA-750B+-MAH

Brand: Victrola

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Victrola VTA-750B+-MAH 7-in-1 Nostalgic Bluetooth Record Player. This versatile entertainment system integrates a 3-speed turntable, CD player, cassette player, AM/FM radio, Bluetooth connectivity, and an Aux-in port. Additionally, it features the capability to encode audio directly to a CD without requiring a computer. Please read this manual thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

PACKAGE CONTENTS

Please ensure all items are present before discarding packaging materials:

- Victrola VTA-750B+-MAH 7-in-1 Entertainment System
- Remote Control
- 45 RPM Adapter
- Power Adapter
- Instruction Manual

PRODUCT FEATURES

- **8-in-1 Entertainment Center:** Combines a 3-speed turntable, CD player, cassette player, FM radio, Bluetooth connectivity, and Aux & headphone jack.
- **Integrated System:** No external stereo system or additional equipment is required for operation.
- **Three-Speed Belt-Driven Turntable:** Supports 33 1/3, 45, and 78 RPM records with upgraded sound quality and minimal vibrations.
- **Comprehensive Controls:** Features a volume knob, FM tuner, and intuitive buttons for input selection, playback control, and CD encoding. Includes a full-function remote control.
- **Expanded Connection Options:** RCA Line outputs for connecting external speakers or an amplifier, and a headphone jack for private listening. Bluetooth out technology is also available.
- **High-Quality Design:** Crafted with a stylish retro real wood case, strong hinges, high-quality fabric grilles, and a gentle lifting mechanism.

COMPONENT IDENTIFICATION



Figure 1: Overall View of the Victrola VTA-750B+-MAH. This image displays the complete unit with the lid open, revealing the turntable. The front panel features the radio tuner, display, and various control buttons. The remote control is positioned to the right of the unit.



Figure 2: Turntable Mechanism. A detailed view of the turntable platter, spindle, and tonearm assembly. The stylus is visible at the end of the tonearm, ready to play a record. The 45 RPM adapter is not shown but would be placed on the spindle for larger hole records.

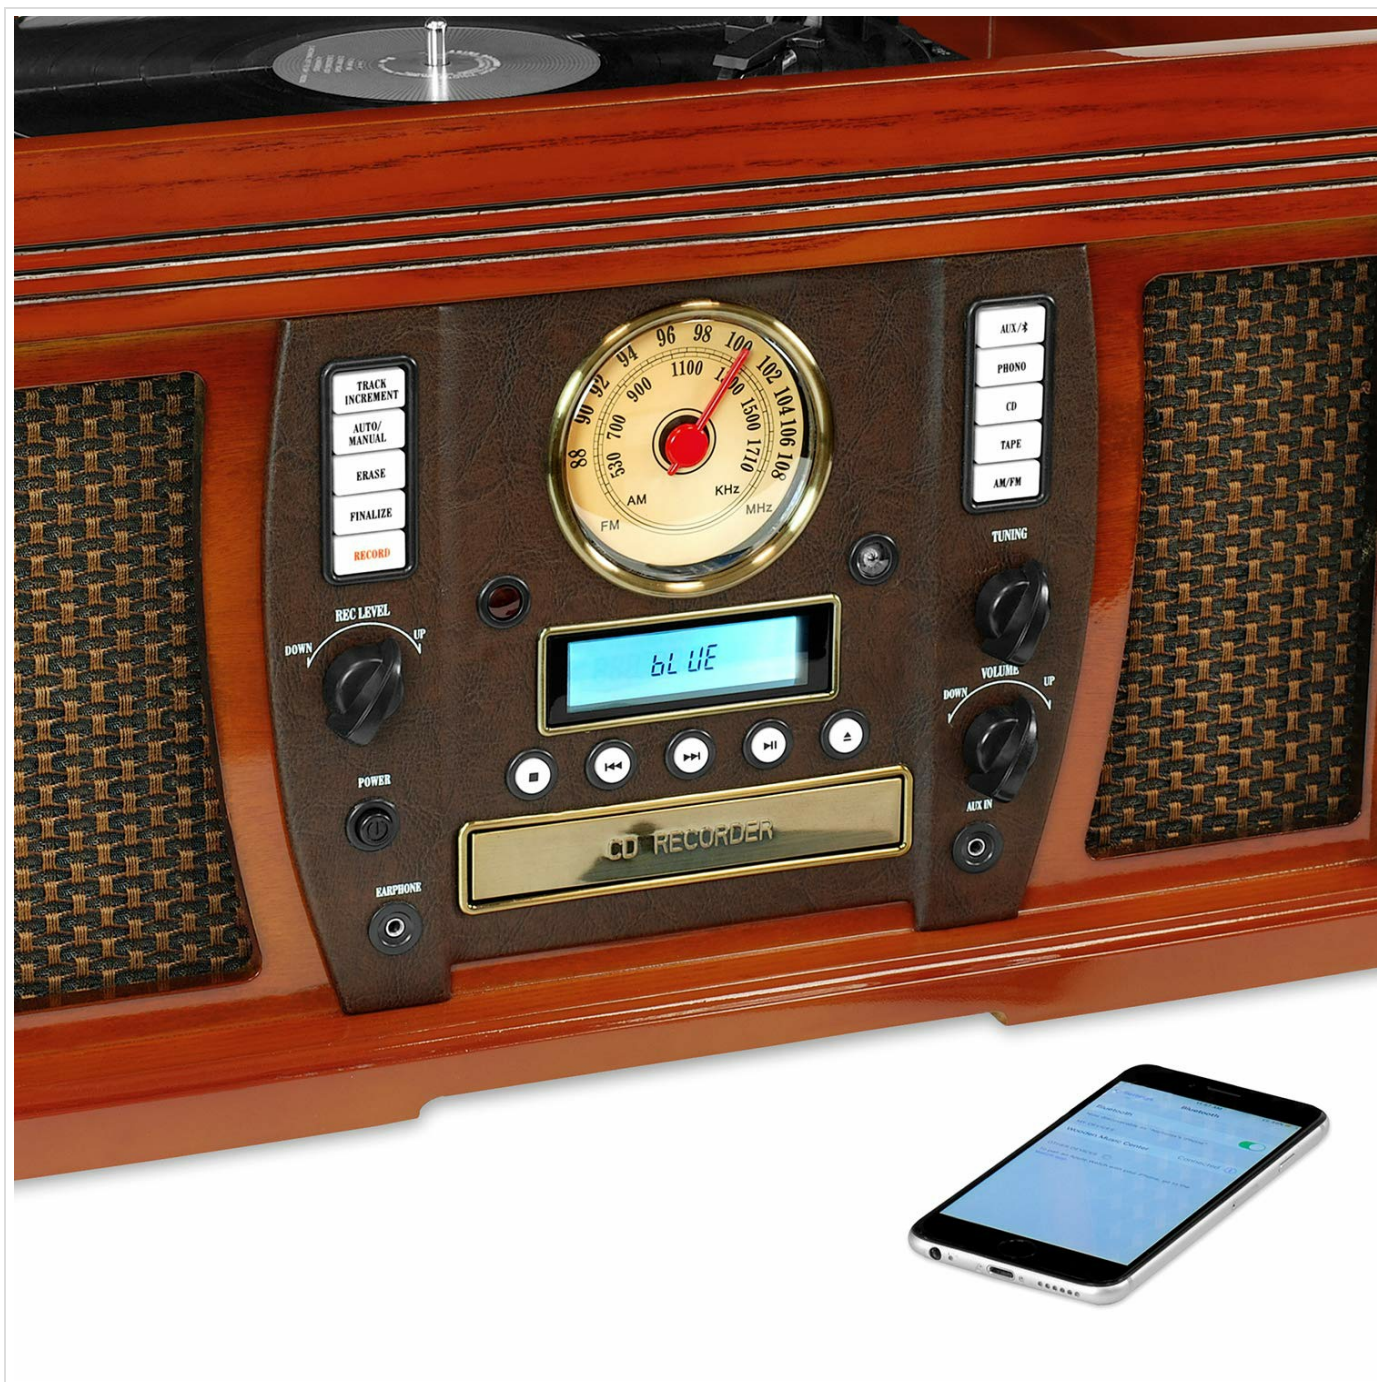


Figure 3: Front Control Panel and Connectivity. This image highlights the central control panel, including the radio dial, digital display (showing "BLUE" for Bluetooth mode), CD tray, and various buttons for mode selection, playback, and recording. An auxiliary input jack and headphone jack are visible. A smartphone is shown nearby, indicating Bluetooth connectivity.

SETUP

Unpacking

Carefully remove the unit from its packaging. Retain the packaging materials for future transport or storage. Remove any protective films or packing inserts from the unit, especially from the turntable and CD tray.

Placement

Place the unit on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.

Power Connection

Connect the supplied power adapter to the DC IN jack on the back of the unit, then plug the adapter into a standard wall outlet. The unit is now ready for operation.

OPERATING INSTRUCTIONS

General Controls

- **POWER Button:** Press to turn the unit ON or OFF.
- **VOLUME Knob:** Rotate clockwise to increase volume, counter-clockwise to decrease.
- **FUNCTION Button:** Press repeatedly to cycle through input modes: PHONO (Turntable), CD, CASSETTE, FM, AM, AUX, BLUETOOTH.

Turntable Operation (PHONO Mode)

1. Lift the dust cover.
2. Place a record on the turntable platter. If playing a 45 RPM single, place the included 45 RPM adapter on the center spindle.
3. Select the appropriate speed (33 1/3, 45, or 78 RPM) using the SPEED selector switch.
4. Move the FUNCTION button to PHONO mode.
5. Gently move the tonearm over the record. The turntable will begin to spin.
6. Carefully lower the tonearm onto the record's edge.
7. Adjust the volume as desired.
8. At the end of the record, the turntable may stop automatically (depending on the auto-stop switch setting). Manually return the tonearm to its rest.

CD Player Operation (CD Mode)

1. Press the FUNCTION button to select CD mode.
2. Press the EJECT button to open the CD tray.
3. Place a CD with the label side facing up into the tray.
4. Press the EJECT button again to close the tray. The unit will read the CD.
5. Press the PLAY/PAUSE button to start playback.
6. Use the SKIP FORWARD/BACKWARD buttons to navigate between tracks.
7. Press PLAY/PAUSE to pause playback, press again to resume.

Cassette Player Operation (TAPE Mode)

1. Press the FUNCTION button to select TAPE mode.
2. Insert a cassette tape into the cassette slot on the side of the unit.
3. Press the PLAY button to begin playback.
4. Use the FAST FORWARD and REWIND buttons to navigate the tape.
5. Press the STOP/EJECT button to stop playback and eject the tape.

AM/FM Radio Operation (AM/FM Mode)

1. Press the FUNCTION button to select FM or AM mode.
2. Rotate the TUNING knob to select your desired radio station.
3. Extend the FM wire antenna on the back of the unit for better FM reception. For AM, rotate the unit for optimal reception.

Bluetooth Operation (BLUETOOTH Mode)

1. Press the FUNCTION button to select BLUETOOTH mode. The display will show "BLUE" and flash, indicating it's in pairing mode.
2. Enable Bluetooth on your external device (smartphone, tablet, etc.) and search for "Victrola VTA-750B+-MAH".
3. Select the unit from your device's Bluetooth list to pair. Once paired, the "BLUE" indicator will stop flashing.
4. You can now stream audio from your device to the Victrola unit. Use your device's controls for playback.

Auxiliary Input Operation (AUX Mode)

1. Connect an external audio device (e.g., MP3 player) to the AUX IN jack on the front panel using a 3.5mm audio cable (not included).
2. Press the FUNCTION button to select AUX mode.
3. Play audio from your connected device. The sound will be output through the Victrola unit's speakers.

CD Encoding (Recording to CD)

This unit allows you to record audio from PHONO, CASSETTE, AUX, or BLUETOOTH directly to a blank CD-R/RW disc.

1. Insert a blank CD-R or CD-RW disc into the CD tray.
2. Select the desired source (PHONO, CASSETTE, AUX, or BLUETOOTH) using the FUNCTION button.
3. Press the RECORD button on the front panel. The display will show "REC".
4. Start playback on your chosen source (e.g., start playing a record, cassette, or audio from your AUX/Bluetooth device).
5. To create a new track during recording, press the TRACK INCREMENT button.
6. To stop recording, press the STOP button.
7. After recording, press the FINALIZE button to complete the CD. This step is crucial for the CD to be playable on other CD players.

MAINTENANCE

Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Keep the dust cover closed when not in use to protect the turntable from dust.

Stylus Care

- Handle the stylus (needle) with extreme care. Only touch the stylus guard.
- Clean the stylus periodically with a soft brush, brushing from back to front.
- Replace the stylus approximately every 200-300 hours of playback or if you notice a degradation in sound quality.

Record Care

- Always hold records by the edges or the label.
- Store records vertically in their sleeves in a cool, dry place.
- Clean records regularly with a dedicated record cleaning brush or solution to remove dust and debris.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No Power	Power cord not connected; Power outlet not active.	Ensure power cord is securely plugged in; Try a different outlet.
No Sound	Volume too low; Incorrect function mode selected; Stylus damaged/missing.	Increase volume; Select correct input mode; Check stylus, replace if necessary.
Turntable not spinning	Unit not in PHONO mode; Auto-stop engaged (for some records).	Ensure PHONO mode is selected; Manually place tonearm on record to activate.
Bluetooth not connecting	Unit not in BLUETOOTH mode; Device too far; Device already connected to another unit.	Select BLUETOOTH mode; Move device closer; Disconnect from other devices.
CD not playing/reading	CD inserted incorrectly; Disc is dirty or scratched; Incorrect disc type.	Reinsert CD label side up; Clean disc with soft cloth; Use standard audio CDs (CD-R/RW for recording).
Poor Radio Reception	Antenna not extended/positioned correctly.	Extend FM wire antenna; Rotate unit for better AM reception.

SPECIFICATIONS

Model Name	VTA-750B+
Item Model Number	VTA-750B+-MAH
Brand	Victrola
Product Dimensions	21 x 15 x 12.9 inches
Item Weight	24.1 pounds
Material	Plastic, Wood
Color	Glossy Dark Brown (Mahogany)
Connectivity Technology	Wired, Wireless (Bluetooth)
Maximum Rotational Speed	78 RPM (supports 33 1/3, 45, 78 RPM)
Included Components	CD Player, Aux-in, Cassette Player, Turntable, AM/FM Radio, Bluetooth

WARRANTY AND SUPPORT

Victrola products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Victrola website. Do not attempt to service the unit yourself.

For further assistance, please contact Victrola Customer Service.

