

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [XLEADER](#) /

› [XLEADER Mini Bluetooth Speaker SoundAngel A8 User Manual](#)

## XLEADER SoundAngel A8

# XLEADER Mini Bluetooth Speaker SoundAngel A8 User Manual

Model: SoundAngel A8 | Brand: XLEADER

## 1. INTRODUCTION

Thank you for choosing the XLEADER Mini Bluetooth Speaker SoundAngel A8. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read these instructions carefully before use.

### What's in the Box:

- 1 x SoundAngel A8 Bluetooth Speaker
- 1 x USB Charging Cable (Type-C)
- 1 x 3.5mm Audio Cable
- 1 x Portable Travel EVA Case
- 1 x User Manual
- 1 x Warranty Card
- 1 x Donation Card



Image: Contents of the XLEADER SoundAngel A8 package, including the speaker, travel case, and connecting cables.

## 2. PRODUCT OVERVIEW

The XLEADER SoundAngel A8 is a compact and portable Bluetooth speaker designed for high-quality audio playback. It features a smart touch interface and multiple connectivity options.

### Speaker Components:



Image: Side view of the XLEADER SoundAngel A8 speaker, highlighting the AUX port, Power On/Off/Mode button, MicroSD card slot, and DC5V charging port.

- **Smart Touch Screen:** Top panel for intuitive control.
- **AUX Port:** 3.5mm audio input for wired connections.
- **O/M Button:** Power On/Off and Mode switching.
- **TF (MicroSD) Card Slot:** For playing music directly from a MicroSD card.
- **DC5V Port:** USB Type-C input for charging.
- **Indicator Light:** Displays power and connection status.
- **Silicone Pad:** Located on the bottom for stability.



Image: Front view of the XLEADER SoundAngel A8 speaker in Rose Gold, showcasing its circular design and touch control panel.

### 3. SETUP

#### 3.1 Charging the Speaker

1. Connect the provided USB Type-C charging cable to the DC5V port on the speaker.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The indicator light will illuminate during charging and turn off when fully charged.

A full charge typically takes 2-3 hours. Ensure the speaker is fully charged before first use for optimal battery life.

#### 3.2 Power On/Off

- **To Power On:** Press and hold the 'O/M' button for approximately 3 seconds until you hear an audible prompt and the indicator light flashes.
- **To Power Off:** Press and hold the 'O/M' button for approximately 3 seconds until you hear an audible prompt and the indicator light turns off.

#### 3.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (the indicator light will be flashing blue, indicating it's ready for pairing).
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for available Bluetooth devices and select "SoundAngel A8" from the list.
4. Once successfully paired, you will hear a confirmation tone, and the indicator light will remain solid blue.

The speaker will automatically reconnect to the last paired device when powered on, if the device's Bluetooth is active and within range.



Image: A woman working on a laptop with the XLEADER SoundAngel A8 speaker placed on a nearby table, demonstrating Bluetooth connectivity.

### 3.4 Auxiliary Input (AUX)

For devices without Bluetooth, use the 3.5mm audio cable:

1. Connect one end of the 3.5mm audio cable to the AUX port on the speaker.
2. Connect the other end to the audio output jack of your device.
3. The speaker will automatically switch to AUX mode, or you can manually switch using the 'O/M' button.

### 3.5 Micro SD Card Playback

To play music directly from a Micro SD card:

1. Insert a Micro SD card (with music files) into the TF card slot on the speaker.
2. The speaker will automatically detect the card and begin playing music, or you can manually switch to Micro SD mode using the 'O/M' button.

## 4. OPERATING INSTRUCTIONS

### 4.1 Touch Controls



Image: Top view of the XLEADER SoundAngel A8 speaker, illustrating the touch-sensitive controls for volume, track navigation, and play/pause.

- **Play/Pause:** Tap the center button once.
- **Volume Up:** Tap the '+' button.
- **Volume Down:** Tap the '-' button.
- **Next Track:** Tap the '>>' button.
- **Previous Track:** Tap the '|<<' button.

### 4.2 Call Handling

The speaker has a built-in microphone for hands-free calling when connected via Bluetooth.

- **Answer/End Call:** Tap the center button once during an incoming call.
- **Reject Call:** Press and hold the center button for 2 seconds during an incoming call.

### 4.3 Mode Switching

Briefly press the 'O/M' button to cycle through available modes: Bluetooth, AUX, and Micro SD (if a card is inserted).

### 4.4 Power Saving Feature

To conserve battery, the speaker will automatically shut down if Bluetooth remains disconnected for 10 minutes.

## 5. MAINTENANCE

## 5.1 Cleaning

- Use a soft, dry cloth to clean the speaker's surface.
- Do not use liquid cleaners, aerosols, or solvents, as these may damage the finish or internal components.

## 5.2 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- When not in use for extended periods, store it in the provided portable travel EVA case for protection.

## 5.3 Battery Care

- Charge the speaker regularly, even if not in frequent use, to maintain battery health.
- Avoid completely draining the battery before recharging.
- Do not expose the battery to excessive heat or attempt to replace it yourself.

## 6. TROUBLESHOOTING

If you encounter issues with your XLEADER SoundAngel A8 speaker, please refer to the following common problems and solutions:

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is charged. Connect the charging cable and allow it to charge for at least 30 minutes before attempting to power on again. Try a different charging cable or power adapter.
Cannot pair with Bluetooth device.	Ensure the speaker is in Bluetooth pairing mode (flashing blue indicator light). Make sure Bluetooth is enabled on your device and it is within 10 meters of the speaker. Forget "SoundAngel A8" from your device's Bluetooth list and try pairing again. Ensure the speaker is not already connected to another device.
No sound or low volume.	Check the volume level on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, AUX, Micro SD) is selected. If using AUX, ensure the cable is fully inserted.
Short battery life.	Ensure the speaker is fully charged. Battery life can vary based on volume level and usage. Playing at maximum volume will reduce playtime.
Speaker automatically turns off.	This is a power-saving feature. If Bluetooth is disconnected for 10 minutes, the speaker will power off. Reconnect your device or switch modes to prevent this.

## 7. SPECIFICATIONS

Feature	Specification
Model Name	SoundAngel A8
Bluetooth Version	5.1

Feature	Specification
Output Power	5 Watts
Battery Capacity	1200 mAh Lithium Polymer
Playtime	12-15 hours (at 50% volume)
Charging Time	2-3 hours
Connectivity	Bluetooth, Auxiliary (3.5mm), MicroSD card
Control Method	Touch
Product Dimensions	3.2"D x 3.2"W x 1.4"H (8.1cm x 8.1cm x 3.6cm)
Item Weight	180 Grams (6.3 ounces)
Maximum Range	10 Meters (33 feet)
Signal-to-Noise Ratio	80 dB
Water Resistance Level	Not Water Resistant



Image: A hand holding the XLEADER SoundAngel A8 speaker, illustrating its compact size and dimensions (3.3 inches diameter, 1.2 inches height).

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

The XLEADER SoundAngel A8 Bluetooth Speaker comes with a **3-Year Warranty** for quality-related issues. Please retain your proof of purchase for warranty claims.

### 8.2 Customer Support

If you have any questions, concerns, or require technical assistance that is not covered in this manual, please contact XLEADER customer support through the retailer where you purchased the product or visit the official XLEADER website for contact details.

## 9. SAFETY INFORMATION

- This speaker is **NOT waterproof**. Avoid exposure to water or excessive moisture.
- Do not expose the speaker to extreme temperatures (hot or cold) or direct sunlight for prolonged periods.
- Do not disassemble, repair, or modify the speaker yourself. This may void the warranty and pose safety risks.
- Keep the speaker away from children and pets.
- Use only the provided charging cable or a certified equivalent.
- Dispose of the speaker and its battery responsibly according to local regulations.

---

© 2023 XLEADER. All rights reserved.