

## DICTROLUX 619818

# DICTROLUX 619818 Immersion Blender User Manual

Model: 619818 | Brand: DICTROLUX

## INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your DICTROLUX 619818 Immersion Blender. Please read all instructions carefully before operating the appliance and retain this manual for future reference. This immersion blender is designed for household use to blend, mix, and puree various food items.

## Important Safety Information

- Always unplug the appliance from the power outlet before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Do not operate the blender with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with moving parts. Blades are sharp; handle with care.

## PRODUCT COMPONENTS

The DICTROLUX 619818 Immersion Blender consists of the following main parts:

- **Motor Unit:** The main body containing the motor, control buttons (2 speeds and pulse option), and an ergonomic handle.

- **Blending Foot:** A detachable stainless steel shaft with integrated stainless steel blades at the bottom.
- **Power Cord:** For connecting the appliance to an electrical outlet.



This image displays the two main components of the DICTROLUX 619818 Immersion Blender: the white and grey motor unit with control buttons, and the separate stainless steel blending foot with blades.

## SETUP

Follow these steps to prepare your immersion blender for first use:

1. **Unpack:** Carefully remove all packaging materials and inspect the appliance for any damage.
2. **Clean Before First Use:** Before using the blender for the first time, wash the blending foot and blades in warm soapy water, then rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
3. **Assemble:** Align the blending foot with the motor unit and twist or push until it securely locks into place. Ensure it is firmly attached before plugging in.
4. **Position:** Place the ingredients you wish to blend into a suitable container, such as a deep pot or a blending beaker.



This image shows the DICTROLUX 619818 Immersion Blender fully assembled, with the stainless steel blending foot attached to the motor unit, illustrating its complete form.

## OPERATING INSTRUCTIONS

To operate your DICTROLUX 619818 Immersion Blender:

1. **Connect Power:** Plug the power cord into a suitable electrical outlet.
2. **Immerse:** Submerge the blending foot into the ingredients in your container. Ensure the blades are fully covered to prevent splashing.

3. **Select Speed:** Press and hold one of the speed buttons on the motor unit to start blending. The blender offers 2 speeds for different blending needs.
4. **Use Pulse Option:** For short bursts of power or to achieve a coarser texture, use the pulse button. Release the button to stop.
5. **Blend:** Move the blender gently up and down and in circular motions to ensure all ingredients are processed evenly.
6. **Stop:** Release the speed or pulse button to stop the blender.
7. **Unplug:** Always unplug the appliance from the power outlet immediately after use.

### Tips for Best Results:

- For best results when blending soups or sauces, use a deep pot to prevent splashing.
- Cut large ingredients into smaller pieces before blending.
- Do not operate the blender continuously for more than 1 minute to prevent overheating. Allow it to cool down before resuming.
- Do not blend extremely hot liquids immediately after boiling; allow them to cool slightly.

## MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your immersion blender.

1. **Unplug:** Always ensure the blender is unplugged from the power supply before cleaning.
2. **Detach Blending Foot:** Carefully detach the stainless steel blending foot from the motor unit.
3. **Clean Blending Foot:** Wash the blending foot and blades under running water with a mild detergent. Use a brush if necessary to remove food residue. Be extremely careful as the blades are sharp. The blending foot is also suitable for dishwasher cleaning.
4. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid. Do not use abrasive cleaners or scouring pads.
5. **Dry:** Ensure all parts are thoroughly dry before reassembling or storing.
6. **Storage:** Store the assembled or disassembled blender in a dry place, away from direct sunlight and out of reach of children.

## TROUBLESHOOTING

If you encounter issues with your immersion blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in correctly. No power from outlet. Blending foot not attached securely.	Check power cord connection. Test outlet with another appliance. Ensure blending foot is locked into place.

Problem	Possible Cause	Solution
Poor blending performance.	Too little liquid. Ingredients too large or hard. Overfilling container.	Add more liquid. Cut ingredients into smaller pieces. Do not overfill the container.
Motor stops during operation.	Overheating due to prolonged use or heavy load.	Unplug the blender and allow it to cool down for at least 15-20 minutes before resuming use. Reduce blending time or load.
Splashing during blending.	Blades not fully immersed. Container too shallow.	Ensure the blending foot is fully submerged. Use a deeper container.

If the problem persists after attempting these solutions, please contact customer support or the retailer.

## SPECIFICATIONS

**Model:** 619818

**Brand:** DICTROLUX (Manufacturer) / Mediawave Store (Seller Brand)

**Power:** 200 Watts

**Voltage:** 220 Volts

**Number of Speeds:** 2

**Special Feature:** Pulse option

**Material:** Stainless steel (blending foot, blades)

**Color:** Metallic Silver

**Item Weight:** 900 grams

**Power Source:** Corded Electric

**Recommended Uses:** Smoothies, pureed soups, peanut butter, emulsifying sauces, iced drinks.

## WARRANTY AND SUPPORT

Warranty information for the DICTROLUX 619818 Immersion Blender is not provided within this manual. Please refer to the purchase documentation or contact your retailer (Mediawave Store) for details regarding warranty coverage and terms.

For technical support, spare parts, or service inquiries, please contact the retailer where the product was purchased or the manufacturer, DICTROLUX, through their official channels.