

Snakebyte SB911194

Snakebyte Gamepad S Pro Wireless Controller User Manual

Model: SB911194

1. INTRODUCTION

The Snakebyte Gamepad S Pro is a wireless controller designed for use with Nintendo Switch, Switch Lite, and Switch OLED consoles. It offers a console-style gaming experience with features such as dual precision analog sticks, dual rumble motors for immersive feedback, and a dedicated Capture button for recording gameplay moments. The controller connects via Bluetooth 3.0, aiming to provide a low-latency gaming experience. It also includes an assignable turbo feature and charges via an included USB-C cable.



Figure 1: Front view of the Snakebyte Gamepad S Pro Controller.

2. SETUP

2.1 Charging the Controller

Before initial use, fully charge the controller. Connect the included 5.9 ft (1.8 m) USB-C cable to the controller's charging port and the other end to a USB power source (e.g., Nintendo Switch dock, USB wall adapter, or computer USB port). The charging indicator lights on the controller will provide status feedback.

2.2 Pairing with Nintendo Switch

To pair the Snakebyte Gamepad S Pro with your Nintendo Switch console:

1. Ensure your Nintendo Switch console is powered on and updated to the latest system software.
2. From the HOME Menu, select **"Controllers"**, then **"Change Grip/Order"**.
3. On the Snakebyte Gamepad S Pro, press and hold the **Home button** (house icon) and the **Y button** simultaneously for

approximately 5 seconds. The indicator lights on the controller will begin to flash rapidly.

4. Once the controller is successfully paired, the player indicator light(s) on the bottom of the controller will illuminate solid.

The controller is compatible with Nintendo Switch, Switch OLED, and Switch Lite models.



Figure 2: The Gamepad S Pro is compatible with Nintendo Switch, Switch OLED, and Switch Lite.

WIRELESS GAMING WITHOUT LATENCY



Figure 3: The controller offers wireless connectivity for gaming without latency.

3. OPERATING THE CONTROLLER

3.1 Button Layout and Functions

- **A/B/X/Y Buttons:** Standard action buttons.
- **D-Pad:** Directional input.
- **Left/Right Analog Sticks:** For precise movement and camera control.
- **L/R Buttons:** Shoulder buttons.
- **ZL/ZR Buttons:** Trigger buttons.
- **Home Button:** Returns to the HOME Menu.
- **Capture Button:** Saves screenshots or video clips of gameplay.
- **Plus (+) / Minus (-) Buttons:** Equivalent to Start/Select or Menu buttons.

3.2 Dual Rumble Vibration

The controller features dual rumble motors that provide haptic feedback, enhancing immersion during gameplay. The intensity of the vibration is determined by the game.

3.3 Assignable Turbo Feature

The assignable turbo feature allows a button to be pressed repeatedly with a single hold. Consult the controller's specific instructions (often included in the packaging or on the manufacturer's website) for details on how to assign and activate the turbo function for desired buttons.



Figure 4: Key features including Turbo Button, Capture Button, and Vibration Feedback.

3.4 Audio Jack

The controller is equipped with an audio jack, allowing you to connect a compatible headset for in-game audio and communication (if supported by the game and console settings).



Figure 5: Detail of the controller's audio jack.

4. MAINTENANCE

4.1 Cleaning

To clean the controller, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the controller's surface and internal components.

4.2 Battery Care

The controller contains a rechargeable Lithium Metal battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Store the controller in a cool, dry place when not in use for extended periods.
- Do not expose the controller to extreme temperatures.

5. TROUBLESHOOTING

- **Controller not pairing or disconnecting frequently:**
 - Ensure the controller is fully charged.
 - Verify the pairing steps (Home + Y buttons) are followed correctly.
 - Move closer to the Nintendo Switch console to ensure a strong Bluetooth connection.
 - Check for any firmware updates for the controller on the official Snakebyte website, as updates can resolve connectivity issues.
 - Restart both the Nintendo Switch console and the controller.
- **Buttons or joysticks are unresponsive or sticking:**
 - Power off the controller and then power it back on.
 - Ensure no debris is lodged around the buttons or joysticks. Clean as per maintenance instructions.
- **Controller does not wake the Nintendo Switch from standby:**
 - This controller may not support waking the console from standby mode. Power on the console manually using the power button on the console itself.
- **No Gyro Sensor:**
 - Please note that this controller does not include a gyro sensor. Games requiring motion controls or fine aiming adjustments via tilting will not function as intended with this controller.

6. SPECIFICATIONS

Model Number	SB911194
Brand	Snakebyte
Connectivity	Bluetooth 3.0
Compatibility	Nintendo Switch, Switch Lite, Switch OLED
Dimensions (L x W x H)	3.94 x 2.36 x 5.51 inches
Item Weight	8.47 ounces (240 grams)
Battery Type	1 Lithium Metal battery (included)
Charging Cable Length	5.9 ft (1.8 m)
Special Features	Dual Motor Vibration, Assignable Turbo, Capture Button, Audio Jack

ABSOLUTE DURABILITY







Figure 6: The controller is designed for absolute durability.

7. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product packaging or visit the official Snakebyte website. For technical support, product registration, or further inquiries, please contact Snakebyte customer service through their official channels.

Official Snakebyte Website: www.snakebyte.com

	<p>Snakebyte GAMES: TOWER 5 for PS5 - Assembly and Safety Guide</p> <p>Comprehensive guide for assembling and safely using the Snakebyte GAMES: TOWER 5 storage and accessory solution for PlayStation 5. Includes product information, content list, assembly instructions, and safety precautions in multiple languages.</p>
	<p>snakebyte KEY:BOARD PRO™ Gaming Keyboard: Instruction Manual & Features</p> <p>Download the official instruction manual for the snakebyte KEY:BOARD PRO™ gaming keyboard. Learn about installation, media controls, RGB lighting effects, conflict-free gaming keys, safety guidelines, and technical support.</p>
	<p>Pebble Gear 7" Kids Tablet Quick Start Guide</p> <p>Quick start guide for the Pebble Gear 7" Kids Tablet, covering setup, home screen overview, accessories, and support information.</p>
	<p>SNAKEBYTE PG915420 Pebble Game Controller Quick Start Guide</p> <p>User manual and quick start guide for the SNAKEBYTE PG915420 Pebble game controller, detailing setup and usage instructions for optimal gaming.</p>