

## Teka HSB 630 P

# Teka HSB 630 P Electric Pyrolytic Oven User Manual

Model: HSB 630 P | Model Number: 41566052

## 1. INTRODUCTION

---

Thank you for choosing the Teka HSB 630 P Electric Pyrolytic Oven. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before using the oven and keep them for future reference.

The Teka HSB 630 P is a 70-liter capacity electric multifunction oven designed for modern kitchens, featuring pyrolytic self-cleaning technology for effortless maintenance.

## 2. SAFETY INSTRUCTIONS

---

Always adhere to the following safety guidelines to prevent personal injury or damage to the appliance.

- **Electrical Safety:** Ensure the oven is correctly earthed. Do not operate with a damaged power cord or plug. Disconnect from power before cleaning or maintenance.
- **Hot Surfaces:** The oven and its accessories become very hot during operation. Use oven mitts when handling hot items. Keep children and pets away from the appliance.
- **Ventilation:** Ensure adequate ventilation around the oven as specified in the installation section. Do not block ventilation openings.
- **Flammable Materials:** Do not store flammable materials inside or near the oven.
- **Supervision:** Never leave the oven unattended during operation, especially when using the grill function or pyrolytic cleaning.
- **Cleaning:** Use only recommended cleaning agents and methods. Refer to the cleaning and maintenance section.

## 3. SETUP AND INSTALLATION

---

Proper installation is crucial for the safe and efficient operation of your oven. Installation should be performed by a qualified technician.

### 3.1 Unpacking

- Carefully remove all packaging materials.

- Inspect the oven for any signs of damage. Do not install a damaged appliance.
- Retain packaging for potential future transport or recycling.

## 3.2 Placement and Ventilation

- Install the oven into a suitable cabinet opening, ensuring sufficient clearance for ventilation.
- The cabinet material must be heat-resistant.
- Ensure that the rear of the oven has adequate space for air circulation.

## 3.3 Electrical Connection

- The oven requires a 220 Volt electrical supply.
- The electrical connection must comply with local wiring regulations.
- Ensure the appliance is properly earthed.

## 3.4 First Use

- Before first use, clean the oven interior with a damp cloth.
- Heat the empty oven at maximum temperature for approximately 30 minutes to burn off any manufacturing residues. Ensure the kitchen is well-ventilated during this process.

# 4. OPERATING INSTRUCTIONS

---

The Teka HSB 630 P oven features a tactile control panel for easy operation.

## 4.1 Control Panel Overview

The control panel consists of touch-sensitive buttons and a digital display. Specific icons represent different functions such as temperature, time, cooking modes, and pyrolytic cleaning.

## 4.2 Setting the Time and Date

- Upon initial power-up or after a power outage, the display will flash, prompting you to set the time.
- Use the '+' and '-' touch buttons to adjust the hours and minutes.
- Confirm the setting by pressing the clock icon or waiting a few seconds.

## 4.3 Selecting a Cooking Function and Temperature

- Turn the function selector knob to choose the desired cooking mode (e.g., Conventional, Fan-assisted, Grill).
- Turn the temperature selector knob to set the desired cooking temperature. The display will show the selected temperature.
- The oven will begin preheating. An indicator light or display icon will show when the set temperature is reached.

## 4.4 Timer Functions

- **Minute Minder:** Set a countdown timer that sounds an alarm when finished, without affecting oven operation.
- **Cooking Duration:** Set the desired cooking time. The oven will switch off automatically when the time expires.
- **End Time:** Program the oven to switch off at a specific time of day.

# 5. COOKING FUNCTIONS

---

The Teka HSB 630 P offers various cooking functions to suit different culinary needs.

- **Conventional Heat:** Heat from top and bottom elements. Ideal for baking cakes, pastries, and roasting.
- **Fan-Assisted Heat:** Heat from top and bottom elements with a fan for even heat distribution. Suitable for cooking on multiple levels and for larger dishes.
- **Grill:** Intense heat from the top element. Perfect for browning, toasting, and grilling thinner cuts of meat.
- **Maxi Grill:** Utilizes the full grill element for larger grilling areas.
- **Eco Function:** Energy-saving mode for specific cooking tasks.
- **Defrost:** Circulates air at room temperature to gently defrost food.

## 5.1 Pyrolytic Cleaning Function

The pyrolytic function heats the oven to a very high temperature (around 500°C), turning food residues into ash that can be easily wiped away.

- **Preparation:** Remove all accessories (racks, trays, side supports) from the oven cavity. Wipe away any large food spills.
- **Activation:** Select the pyrolytic cleaning function from the control panel. The oven door will automatically lock for safety.
- **Duration:** The cycle typically lasts between 1 to 2 hours, depending on the selected intensity.
- **After Cleaning:** Once the cycle is complete and the oven has cooled down, wipe the interior with a damp cloth to remove the ash.

## 6. CLEANING AND MAINTENANCE

---

Regular cleaning and maintenance ensure the longevity and optimal performance of your oven.

### 6.1 General Cleaning

- **Exterior:** Clean the exterior surfaces with a soft cloth and mild detergent. Avoid abrasive cleaners.
- **Interior (Non-Pyrolytic):** For light soiling, clean the interior with warm soapy water and a soft sponge. For stubborn stains, use a specialized oven cleaner, following the product instructions.
- **Glass Door:** Clean the inner and outer glass panels with a glass cleaner or warm soapy water.

### 6.2 Replacing the Oven Light

- Ensure the oven is disconnected from the power supply.
- Allow the oven to cool completely.
- Unscrew the protective glass cover.
- Remove the old bulb and replace it with a new, heat-resistant oven bulb of the correct wattage (check specifications for details).
- Replace the protective glass cover.

## 7. TROUBLESHOOTING

---

Before contacting customer service, please refer to the following common issues and their solutions.

- **Oven Not Heating:** Check if the oven is properly plugged in and if the circuit breaker has tripped. Ensure a cooking function and temperature have been selected.
- **Oven Light Not Working:** The bulb may need replacement. Refer to section 6.2.

- **Uneven Cooking:** Ensure food is placed centrally and that the correct cooking function and temperature are selected. Avoid opening the door frequently.
- **Smoke During First Use:** This is normal due to manufacturing residues burning off. Ensure good ventilation.
- **Door Locked After Pyrolytic Cycle:** The door will remain locked until the oven has cooled down sufficiently.

If the problem persists after attempting these solutions, please contact Teka customer support.

## 8. SPECIFICATIONS

---



*Image: Front view of the Teka HSB 630 P Electric Pyrolytic Oven, showcasing its sleek design and control panel.*

<b>Brand</b>	Teka
<b>Model Name</b>	HSB 630 P
<b>Model Number</b>	41566052

<b>Type</b>	Electric Pyrolytic Multifunction Oven
<b>Capacity</b>	70 Litres
<b>Power</b>	220 Watts
<b>Voltage</b>	220 Volts
<b>Dimensions (L x W x H)</b>	59.5 x 55.9 x 59.5 cm
<b>Weight</b>	34 Kilograms
<b>Control Configuration</b>	Tactile (Touch)
<b>Grill Type</b>	Gril

## 9. WARRANTY AND SUPPORT

---

Your Teka HSB 630 P oven comes with a manufacturer's warranty. Please refer to the warranty card provided with your purchase for specific terms and conditions, including warranty duration and coverage.

For technical assistance, spare parts, or to schedule a service appointment, please contact Teka customer support. Have your model name (HSB 630 P) and model number (41566052) ready when you call.

Contact information can typically be found on the Teka official website or in the documentation included with your appliance.