

SKMEI Gmarks-1245

SKMEI Gmarks-1245 Digital Watch User Manual

Model: Gmarks-1245



1. INTRODUCTION

This manual provides comprehensive instructions for the proper use and maintenance of your SKMEI Gmarks-1245 Digital Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. Keep this manual for future reference.

2. PRODUCT OVERVIEW

The SKMEI Gmarks-1245 is a versatile digital watch designed for daily wear, featuring a robust construction and multiple functions. It includes a digital display, chronograph, alarm, date display, and luminous elements for visibility in low light.



Figure 2.1: Front view of the SKMEI Gmarks-1245 Digital Watch, showing the digital display and control buttons.

Key Features:

- Digital Time Display
- Date Display
- Water Resistant construction
- Luminous display for low-light conditions
- Chronograph (Stopwatch) function
- Alarm Clock function
- Durable Stainless Steel Back Case
- Reliable JAPAN Movement



Figure 2.2: Back view of the SKMEI Gmarks-1245 Digital Watch, showing the stainless steel case back with model number and water resistance markings.

3. SETUP

3.1 Button Functions:

- **LIGHT:** Activates the backlight.
- **MODE:** Cycles through display modes (Time, Alarm, Chronograph).
- **START:** Used to start/stop chronograph, adjust values in setting mode.
- **RESET:** Used to reset chronograph, select items in setting mode.

3.2 Initial Time Setting:

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds digits will begin to flash.
2. Press the **RESET** button to select the hour digits. The hour digits will flash.
3. Press the **START** button to adjust the hour.
4. Press the **RESET** button to select the minute digits. The minute digits will flash.
5. Press the **START** button to adjust the minutes.
6. Continue pressing **RESET** to cycle through year, month, and day settings, adjusting each with the **START** button.
7. Once all settings are correct, press the **MODE** button to exit time setting mode and return to the normal time display.

4. OPERATING INSTRUCTIONS

4.1 Using the Chronograph (Stopwatch):

1. From the normal time display, press the **MODE** button once to enter Chronograph mode. The display will show

"00:00:00".

2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button while paused to reset the chronograph to "00:00:00".
5. Press the **MODE** button to exit Chronograph mode.

4.2 Setting the Alarm:

1. From the normal time display, press the **MODE** button twice to enter Alarm setting mode. The hour digits of the alarm will flash.
2. Press the **START** button to adjust the alarm hour.
3. Press the **RESET** button to select the alarm minute digits. The minute digits will flash.
4. Press the **START** button to adjust the alarm minutes.
5. Press the **MODE** button to exit Alarm setting mode.
6. To turn the alarm ON/OFF, in normal time display, press and hold **START** and then press **RESET**. An alarm icon will appear/disappear.

4.3 Using the Backlight:

Press the **LIGHT** button at any time to illuminate the display for a few seconds, improving visibility in dark environments.

5. MAINTENANCE

5.1 Cleaning:

- Wipe the watch case and strap with a soft, damp cloth.
- Avoid using chemical cleaners, as they may damage the watch's finish or seals.

5.2 Water Resistance:

- This watch is water resistant. However, avoid pressing buttons underwater to prevent water ingress.
- Do not expose the watch to hot water or steam, as this can compromise the water-resistant seals.

5.3 Battery Replacement:

When the display becomes dim or functions become erratic, the battery may need replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and function.

6. TROUBLESHOOTING

Problem	Solution
Display is blank or dim.	The battery may be low or depleted. Replace the battery.
Buttons are unresponsive.	Ensure the watch is not in a locked mode (if applicable). If issue persists, battery may be low.

Problem	Solution
Time is incorrect after setting.	Re-enter time setting mode and carefully follow the instructions. Ensure the correct AM/PM is selected if applicable.
Water appears inside the watch.	Immediately take the watch to a qualified technician for inspection and repair. Avoid further water exposure.

7. SPECIFICATIONS

Feature	Detail
Model Number	Gmarks-1245
Movement Type	Quartz (JAPAN Movement)
Display Type	Digital
Case Diameter	55 Millimetres
Band Material Type	Rubber
Band Colour	Black
Case Back Material	Stainless Steel
Water Resistance	Yes (Specific ATM/Bar not provided, general statement based on "Water Resistant")
Item Weight	62 Grams

8. WARRANTY INFORMATION

This SKMEI Gmarks-1245 Digital Watch comes with a **6 Months Manufacturer Warranty**. For warranty claims or service, please contact the Seller of Record directly. Proof of purchase may be required.




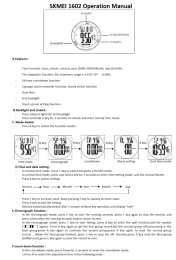

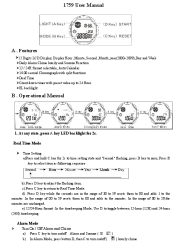
9. SUPPORT

For further assistance, technical support, or inquiries regarding your SKMEI Gmarks-1245 Digital Watch, please refer to the following:

- **Contact Seller:** For product-specific support and warranty claims, please contact the seller through your purchase platform.
- **SKMEI Official Store:** Visit the [SKMEI Store on Amazon](#) for additional product information and brand details.



Related Documents - Gmarks-1245

	<p>SKMEI BANGKOK Watch User Manual: Features and Operation</p> <p>Comprehensive user guide for the SKMEI BANGKOK watch, detailing button functions, time setting, alarms, stopwatch, prayer times (Azan), calendar, and other features. Learn how to operate your SKMEI watch.</p>
	<p>SKMEI Model 1123 Digital Watch User Manual</p> <p>User manual for the SKMEI Model 1123 digital watch, detailing its 12-digit LCD display, daily alarm, hourly chime, 12/24H format, auto calendar, 1/100 second chronograph with split time, and EL backlight. Includes instructions for operational modes, time setting, alarm, and chronograph functions.</p>
	<p>SKMEI 1251 Digital Wrist Watch User Manual - Features & Operation</p> <p>Comprehensive user manual for the SKMEI 1251 digital wrist watch, detailing features like dual time, chronograph, alarm, countdown timer, and EL backlight. Includes operational instructions and specifications.</p>
	<p>SKMEI 1602 Digital Watch Operation Manual Features & How-To Guide</p> <p>Comprehensive operation manual for the SKMEI 1602 digital watch. This guide details all features, including time and date setting, chronograph functions, countdown timer, alarm settings, and dual time display. Learn how to navigate modes, use backlight, and unlock the device.</p>
	<p>SKMEI MUNDIAL Watch: Operating Instructions and Features</p> <p>Comprehensive guide to the SKMEI MUNDIAL watch, covering its functions, time setting, alarm, stopwatch, timer, and water resistance. Learn how to use all features of your SKMEI digital-analog watch.</p>
	<p>Skmei 1759 User Manual: Features and Operation</p> <p>Comprehensive user manual for the Skmei 1759 digital watch, detailing features like alarm, chronograph, dual time, and countdown timer, along with step-by-step operational instructions.</p>