

Tissot 76788

Tissot Quickster 19mm Black Leather Watch Band Instruction Manual

Model: 76788

INTRODUCTION

This manual provides essential information for the proper installation, use, and maintenance of your Tissot Quickster 19mm Black Leather Watch Band. Please read these instructions carefully to ensure optimal performance and longevity of your watch band. This band is specifically designed for Tissot Men's Quickster watches with the back-case reference number **T095417A**.

PRODUCT OVERVIEW

The Tissot Quickster 19mm Black Leather Watch Band (Model 76788) is an original replacement strap crafted from high-quality black leather with white stitching. It features a durable stainless steel tang buckle for secure fastening. This band is designed to provide a comfortable fit and complement the aesthetic of your Tissot Quickster watch.

Key Features:

- Genuine Tissot product.
- Black leather with contrasting white stitching.
- Equipped with a stainless steel tang buckle.
- Designed for Tissot Quickster watches (T095417A).

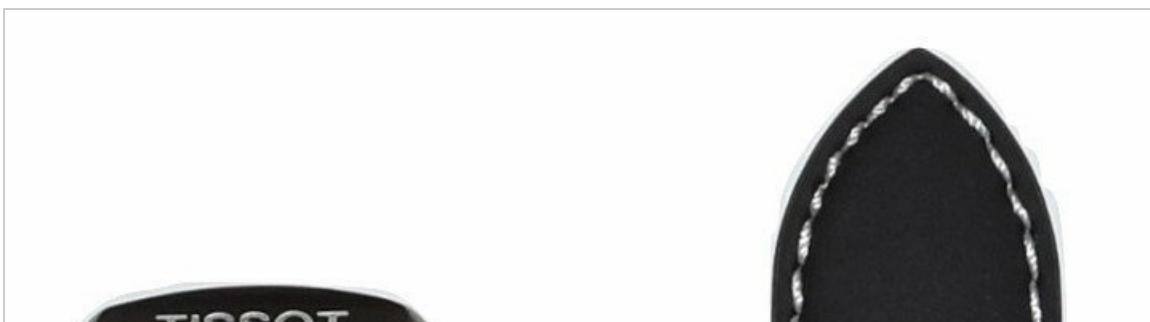




Image: This image displays the reverse side of the Tissot Quickster black leather watch band. Visible details include the 'TISSOT 1853' logo, band measurements (19-19, 120, 75), and the 'STAINLESS STEEL T640.54AB' marking on the buckle. These markings confirm the band's authenticity and specifications.

SPECIFICATIONS

Feature	Detail
Brand	Tissot
Model Number	76788
Compatible Watch Model	Tissot Quickster T095417A
Band Material	Leather
Band Color	Black
Band Width	19 millimeters
Clasp Type	Tang Buckle (Stainless Steel)
Package Dimensions	5 x 1.42 x 0.47 inches
Item Weight	0.32 ounces

SETUP: BAND INSTALLATION

To install your new Tissot Quickster watch band, you will typically need a spring bar tool. If you are unsure about the process, it is recommended to seek assistance from a professional watchmaker.

- 1. Remove Old Band (if applicable):** Use a spring bar tool to compress the spring bar on one side of the existing watch band, carefully detaching it from the watch lug. Repeat for the other side.
- 2. Prepare New Band:** Insert the spring bars into the ends of your new Tissot watch band. Ensure they are securely seated within the band's channels.
- 3. Attach First Side:** Place one end of a spring bar into one of the watch lugs. Using the spring bar tool, compress the other end of the spring bar and guide it into the opposite lug hole. Ensure the spring bar clicks into place securely. Gently pull on the band to confirm it is attached.
- 4. Attach Second Side:** Repeat the process for the other half of the watch band.
- 5. Verify Security:** After installation, gently tug on both sides of the band to ensure both spring bars are fully seated and the band is securely attached to the watch case.

Note: Exercise caution to avoid scratching your watch case during installation.

OPERATING: WEARING AND ADJUSTING

To wear your Tissot Quickster watch with the new band:

1. Place the watch on your wrist.
2. Thread the longer strap through the buckle.
3. Insert the tang (pin) of the buckle into the desired hole on the strap to achieve a comfortable and secure fit. The band should be snug but not too tight, allowing for slight movement without rotating freely on your wrist.
4. Secure the excess strap through the two leather loops (keepers) to prevent it from flapping.

MAINTENANCE

Proper care will extend the life and appearance of your leather watch band:

- **Avoid Water Exposure:** Leather bands are not designed for prolonged water exposure. Remove your watch before swimming, showering, or engaging in activities where the band may get wet. If it does get wet, gently pat it dry with a soft cloth and allow it to air dry completely away from direct heat.
- **Clean Gently:** To clean, wipe the band with a soft, slightly damp cloth. For deeper cleaning, use a specialized leather cleaner and conditioner, following the product's instructions.
- **Avoid Chemicals:** Do not expose the leather to harsh chemicals, solvents, or abrasive cleaners, as these can damage the material.
- **Storage:** When not in use, store your watch in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Regular Inspection:** Periodically check the band for signs of wear, especially around the spring bars and buckle, to ensure continued security.

TROUBLESHOOTING

- **Band Does Not Fit:**
 - Ensure your watch is a Tissot Quickster model with back-case reference T095417A.
 - Verify the lug width of your watch matches the 19mm width of this band.
 - Confirm the spring bars are correctly seated in the watch lugs.
- **Discomfort or Irritation:**
 - Ensure the band is not too tight. Adjust to a comfortable fit.
 - Clean the band regularly to prevent buildup of sweat or dirt.
 - Allow the leather to break in over time; new leather can sometimes feel stiff.
- **Buckle Issues:**
 - Ensure the tang is properly inserted into a strap hole.
 - Check for any debris or damage preventing the buckle from closing smoothly.

WARRANTY AND SUPPORT

For information regarding the warranty of your Tissot product or for further support, please refer to the official Tissot website or contact an authorized Tissot retailer. Keep your purchase receipt as proof of purchase.

Official Tissot Website: www.tissotwatches.com