

Aigostar 31JTI

Aigostar Mini Mint 31JTI Handheld Garment Steamer User Manual

Model: 31JTI

[Overview](#) [Setup](#) [Operation](#) [Safety Instructions](#) [Product](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Aigostar Mini Mint 31JTI Handheld Garment Steamer. Retain this manual for future reference.

- Always ensure the appliance is unplugged before filling or emptying the water tank, or when not in use.
- Use only clean tap water in the water tank. Do not add perfumes, vinegar, starch, or other chemicals, as this may damage the appliance or cause blockages.
- Never use the steamer on clothes while they are being worn or directly on skin. Steam is hot and can cause burns.
- Keep the appliance out of reach of children and pets.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- The appliance features an automatic shutdown function: it will turn off after 25-35 seconds if the water runs out, and after 8 minutes of inactivity to prevent incidents.
- Always hold the steamer upright during use to prevent water leakage.

2. PRODUCT OVERVIEW

The Aigostar Mini Mint 31JTI is a powerful and portable handheld garment steamer designed for quick wrinkle removal and fabric refreshing.

Components:

- Steam Nozzle
- Water Tank (230ml capacity)
- Handle
- Power Button / Steam Level Selector
- LED Display
- Power Cord

LED Display Indicators:

The integrated LED display provides clear status indications for easy operation.

Water shortage

8 mins automatic shutdown

High steam

Low steam



This image shows a close-up of the steamer's LED display, highlighting indicators for 'Water shortage', '8 mins automatic shutdown', 'High steam', and 'Low steam (ECO mode)'.

- **Water Shortage Indicator:** Illuminates when the water tank is low or empty.
- **8 Mins Automatic Shutdown Indicator:** Shows when the automatic safety shutdown is active due to inactivity.
- **High Steam Indicator:** Indicates the steamer is operating at the higher steam output level.
- **Low Steam (ECO) Indicator:** Indicates the steamer is operating at the lower, energy-saving steam output level.

Included Accessories:

- **Bristle Brush:** Designed to easily remove dust, lint, and debris from clothing.
- **Fabric Brush (Plush Soft Brush):** Ideal for delicate fabrics like wool, helping to eliminate odors and wrinkles without causing damage.




This image displays the Aigostar Mini Mint 31JTI steamer along with its two included brush attachments: a mesh brush for dust removal and a plush soft brush for delicate fabrics.

3. SETUP

Filling the Water Tank:

1. Ensure the steamer is unplugged from the power outlet.
2. Remove the water tank from the main unit. The tank is designed for easy removal in one step.
3. Open the rubber stopper on the water tank.
4. Fill the 230ml water tank with clean tap water. Do not overfill.
5. Securely close the rubber stopper and reattach the water tank to the steamer unit until it clicks into place.

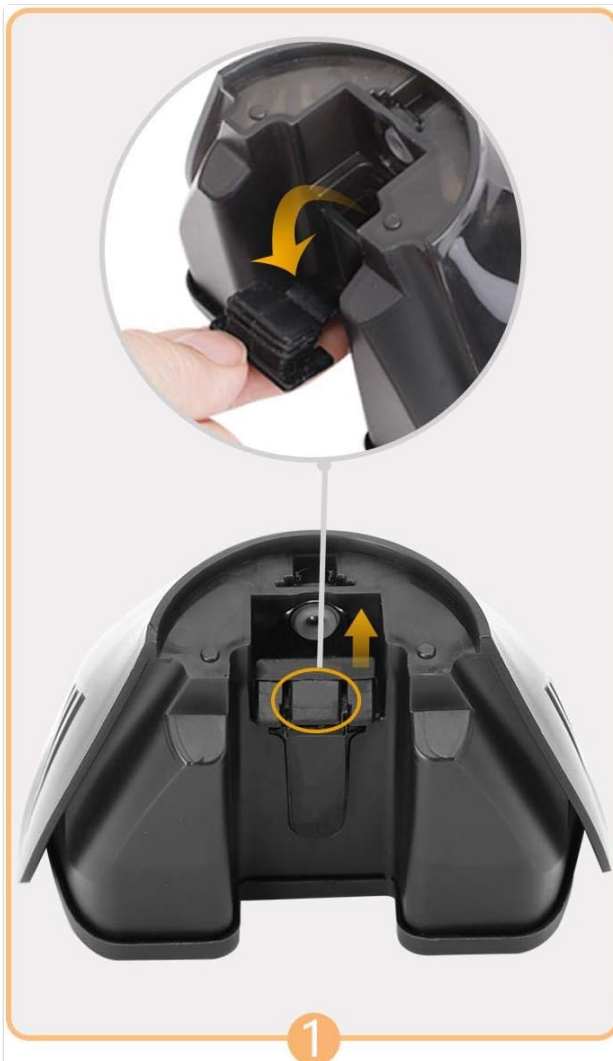

1
Open the water tank in
one step



2
230ml visible water tank

This image illustrates the process of opening the water tank and filling it with water. The tank has a 230ml capacity and is transparent for easy water level monitoring.

Attaching Accessories:

To attach a brush, align the brush with the steam nozzle and press firmly until it locks into place. To remove, pull the brush away from the nozzle.

4. OPERATING INSTRUCTIONS

Powering On and Preheating:

1. After filling the water tank, plug the steamer into a suitable power outlet (230V).
2. Press the power button. The steamer will begin to heat up.
3. The steamer will be ready for use in approximately 30-45 seconds, indicated by the steam level indicator



This image shows the Aigostar Mini Mint 31JTI steamer emitting steam, with overlaid text indicating key performance metrics: 30 seconds to be ready, 1500W power, 12-20 minutes of continuous steam, and a maximum temperature of 145°C.

Selecting Steam Levels:

The steamer offers two steam levels to suit different fabric types:

- Press the power button once to select the default steam level (usually High Steam).
- Press the power button again to switch to the ECO (Low Steam) mode for more delicate fabrics or lighter wrinkles.
- The corresponding indicator on the LED display will light up to show the selected steam level.

Steaming Garments:

Hold the steamer upright and press the steam trigger to release steam. For continuous steam, engage the lock on the steam trigger.

- **Hanging Ironing:** Hang the garment on a hanger. Hold the fabric taut with one hand and move the steamer nozzle downwards over the wrinkles with the other hand.
- **Flat Ironing:** Place the garment on a clean, heat-resistant flat surface. Gently glide the steamer over the

fabric.



This image illustrates the versatility of the Agostar Mini Mint 31JT1 steamer, showing it being used for both hanging garments and flat ironing on a surface.

Using the Brushes:

- Attach the appropriate brush for your needs.
- Use the **Bristle Brush** to remove dust and lint while steaming.
- Use the **Fabric Brush** for delicate materials to gently refresh and remove odors without direct contact with the steam panel.



This image demonstrates the wide range of applications for the Aigostar Mini Mint 31JT1 steamer, including garments, curtains, bed sheets, and sofas.

Corrugated Steam Panel:

The steamer features a corrugated steam panel with 7 steaming holes and 9 arc-shaped air slots. This design guides the steam deeply into the fabric fibers, increasing the contact surface between steam and fiber for more effective wrinkle removal.

CORRUGATED STEAM PANEL

Guide the steam go deeply into the fiber cloth, increase the contact surface between steam and the fiber



7 steaming holes in a horizontal line

9 arc-shaped air slots

This image provides a detailed view of the steamer's corrugated steam panel, highlighting its 7 steaming holes in a horizontal line and 9 arc-shaped air slots, designed for efficient steam distribution.

Powering Off:

To turn off the steamer, press and hold the power button until the indicators turn off. Unplug the appliance from the power outlet after use.

5. MAINTENANCE

Cleaning:

1. Ensure the steamer is unplugged and completely cooled down before cleaning.
2. Empty any remaining water from the water tank.
3. Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
4. Clean the steam nozzle and brushes as needed to remove any lint or residue.

Descaling:

Over time, mineral deposits from water can build up inside the steamer. To descale, fill the water tank with a mixture of 50% water and 50% white vinegar. Run the steamer until half the solution is used, then unplug and

let it cool. Repeat with clean water to rinse. Perform descaling every few months, depending on water hardness and usage frequency.

Storage:

Once the steamer is clean and dry, store it in a cool, dry place. Its compact size makes it ideal for storage in small spaces or for travel.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output	Water tank is empty or low. Steamer not heated sufficiently. Mineral buildup.	Refill water tank. Allow 30-45 seconds for preheating. Perform descaling.
Water leakage from nozzle	Steamer not fully heated. Overfilled water tank. Steamer tilted too much.	Allow full preheating. Do not overfill tank. Keep steamer upright during use.
Steamer automatically shuts off	Water tank is empty. 8 minutes of inactivity.	Refill water tank. Press power button to restart if due to inactivity.
Steamer not turning on	Not plugged in. Power outlet issue.	Ensure power cord is securely plugged in. Test outlet with another appliance.

7. SPECIFICATIONS

- **Model:** 31JTI
- **Voltage:** 230 V
- **Power:** 1500 W
- **Continuous Steam Output:** 25 g/min
- **Water Tank Capacity:** 230 ml
- **Heat-up Time:** Approximately 30-45 seconds
- **Dimensions (L x W x H):** 12.7 x 12.4 x 29.6 cm
- **Weight:** 1.33 kg (packaged)
- **Safety Features:** Automatic shutdown after 8 minutes of inactivity, automatic shutdown when water runs out.
- **Accessories:** Bristle brush, Fabric brush

8. WARRANTY AND SUPPORT

For any questions regarding your Aigostar Mini Mint 31JTI Handheld Garment Steamer, please do not hesitate to contact Aigostar customer support. We are committed to providing assistance and ensuring your satisfaction with our products.

Please refer to your purchase documentation or the Aigostar official website for specific warranty terms and contact information.

