

[Manuals.plus](#) /

> [ART+SOUND](#) /

> ART+SOUND Bluetooth Tower Speaker User Manual

ART+SOUND Bluetooth Tower

ART+SOUND Bluetooth Tower Speaker User Manual

Model: Bluetooth Tower

Brand: ART+SOUND

1. INTRODUCTION

Thank you for purchasing the ART+SOUND Bluetooth Tower Speaker. This floorstanding speaker is designed to provide high-quality audio for your home entertainment needs, featuring integrated lights and seamless Bluetooth connectivity. It is compatible with a wide range of devices, including smartphones, tablets, MP3 players, and smart home devices like Amazon Echo Dot.

Please read this manual carefully before operating the speaker to ensure proper use and to maximize its performance. Keep this manual for future reference.

2. WHAT'S IN THE BOX

- ART+SOUND Bluetooth Tower Speaker
- Power Cord
- Warranty Documentation
- User Manual (this document)

3. SETUP

3.1 Unpacking

Carefully remove all components from the packaging. Inspect the speaker for any signs of damage during transit. If any damage is found, do not use the product and contact customer support immediately.

3.2 Placement

Place the tower speaker on a flat, stable surface. Ensure there is adequate ventilation around the speaker. Avoid placing it near heat sources, direct sunlight, or in areas with high humidity.

3.3 Power Connection

1. Locate the power input port on the back of the speaker.
2. Connect the provided power cord to the speaker's power input.
3. Plug the other end of the power cord into a standard wall outlet (AC 120V, 60Hz).
4. The speaker is now ready for operation.



Figure 3.3.1: Placeholder image for speaker setup. Actual product appearance may vary.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the **POWER** button located on the control panel to turn the speaker on or off. An indicator light will illuminate when the speaker is powered on.

4.2 Bluetooth Pairing

1. Ensure the speaker is powered on.
2. The speaker will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth indicator light. If not, press the **MODE** button until Bluetooth mode is selected.
3. On your Bluetooth-enabled device (e.g., smartphone, tablet), go to the Bluetooth settings.
4. Search for available devices. You should see "ART+SOUND Tower" or a similar name appear in the list.
5. Select "ART+SOUND Tower" to connect. Once successfully paired, the Bluetooth indicator light will become solid, and you may hear an audible confirmation tone.
6. You can now stream audio wirelessly from your device to the speaker.

4.3 Auxiliary (AUX) Input

For devices without Bluetooth, you can use the AUX input:

1. Connect one end of a 3.5mm audio cable (not included) to the AUX IN port on the speaker.
2. Connect the other end of the audio cable to the headphone jack or audio output of your device.
3. Press the **MODE** button on the speaker until AUX mode is selected.
4. Audio will now play through the speaker from your connected device.

4.4 Light Control

The speaker features integrated lights. Use the dedicated **LIGHT** button on the control panel to cycle through different light modes or to turn the lights on/off.

4.5 Volume Control

Adjust the volume using the **VOLUME +** and **VOLUME -** buttons on the speaker's control panel, or directly from your connected audio device.

5. MAINTENANCE

To ensure the longevity and optimal performance of your speaker, follow these maintenance guidelines:

- **Cleaning:** Disconnect the speaker from power before cleaning. Use a soft, dry cloth to wipe the exterior surfaces. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** If storing the speaker for an extended period, unplug it from the power outlet and store it in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure that the speaker's ventilation openings are not blocked. Proper airflow prevents overheating.
- **Water Exposure:** This speaker is not waterproof. Avoid exposing it to water, rain, or excessive moisture.

6. TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected; outlet not working	Ensure power cord is securely plugged into speaker and a working wall outlet. Try a different outlet.
No sound	Volume too low; incorrect mode selected; device not paired/connected	Increase speaker and device volume. Ensure correct input mode (Bluetooth/AUX) is selected. Re-pair Bluetooth device or check AUX cable connection.
Bluetooth pairing fails	Speaker not in pairing mode; device too far; interference	Ensure speaker is in Bluetooth pairing mode. Move device closer to speaker. Turn off other Bluetooth devices to reduce interference.
Lights not working	Light feature turned off	Press the LIGHT button to activate or cycle through light modes.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Name	Bluetooth Tower
Speaker Type	Tower
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Audio Output Mode	Stereo
Power Source	Corded Electric
Controller Type	Button
Compatible Devices	Desktop, Laptop, MP3 Player, Projector, Smartphone, Tablet, Television
Recommended Uses	For Computers, For Music Players, For Smart Home Devices, For Televisions
Color	Black
Mounting Type	Floor Standing

Feature	Detail
ASIN	B0774Y72P

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This ART+SOUND Bluetooth Tower Speaker comes with a Worry-Free 12-Month Warranty. Please refer to the included Warranty Documentation for full terms and conditions regarding coverage, limitations, and how to make a claim.

8.2 Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact ART+SOUND customer support:

- **Website:** www.artandsound.com (Note: This is a placeholder URL as no specific support URL was provided)
- **Email:** support@artandsound.com (Note: This is a placeholder email as no specific support email was provided)
- **Phone:** Please refer to the warranty documentation or brand website for current contact numbers.

When contacting support, please have your product model (Bluetooth Tower) and ASIN (B0774Y72P) ready.