

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Toshiba](#) /

› [Toshiba AW-6G6 W Fully Automatic Washing Machine 6kg User Manual](#)

## Toshiba AW-6G6

# Toshiba AW-6G6 W Fully Automatic Washing Machine 6kg User Manual

Model: AW-6G6 W

## 1. INTRODUCTION

---

Thank you for purchasing the Toshiba AW-6G6 W Fully Automatic Washing Machine. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before operating the washing machine and retain it for future reference.



Figure 1: Toshiba AW-6G6 W Washing Machine

This washing machine features a 6kg capacity, permeation powerful washing, and a wind drying function. It is designed for household use to clean various types of laundry.

## 2. SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the washing machine is properly grounded.
- Do not operate the machine if the power cord or plug is damaged.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Always unplug the machine before cleaning or performing any maintenance.
- Do not attempt to repair or replace any part of the appliance unless specifically recommended in this manual.

### 3. SETUP AND INSTALLATION

#### 3.1 Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage incurred during transit. Keep packaging materials away from children.

#### 3.2 Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and operation. Refer to the diagram below for recommended clearances.

## 商品寸法+10cm以上の幅が必要です。

### 《搬入における確認項目》


※段差やコーナー箇所があり、直線ではない場合、+10cm以上の幅が必要となります。  
※手すり・照明・装飾物などがある場合、そこから+10cmの幅が必要となります。

#### 《商品の寸法》




#### 《玄関の高さ》

商品寸法 +10cm

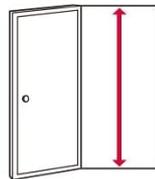


#### 《玄関の幅》

商品寸法 +10cm

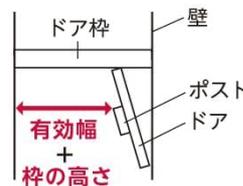


#### 《廊下の幅》

商品寸法 +10cm

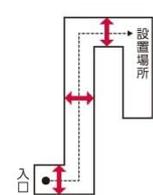


#### 《エレベータの幅》

商品寸法 +10cm

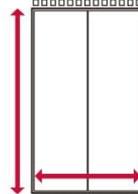


#### 《階段の幅》

商品寸法 +10cm

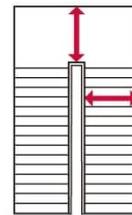


### 《設置における確認項目》

・必要なスペースは商品によって異なるため、詳細はメーカーページなどをご確認ください。  
・洗濯機の設置時にはドアを開閉するため上部のスペース確保が必要となります。

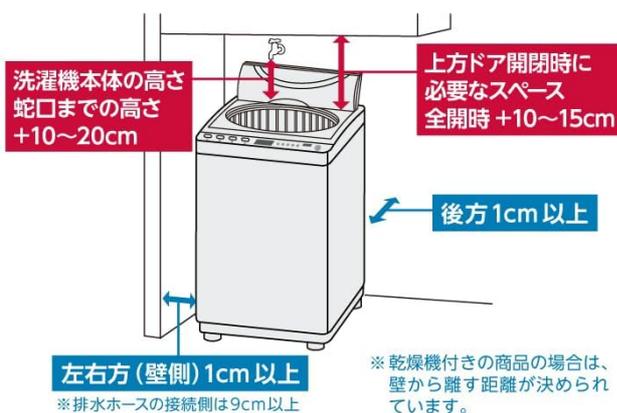

### 防水パンの有無と内側サイズをチェック

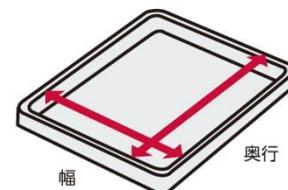

※排水エルボ・足台の有無と排水口位置によって、  
追加費用がかかることがあります。

Figure 2: Installation Dimensions and Clearances

- Ensure at least 10cm clearance from walls for product dimensions.
- For top-opening models, allow 10-15cm extra space above the machine for the lid to open fully.
- Check the width of entryways (e.g., entrance, elevator, stairs) to ensure the machine can be moved to its installation location.

#### 3.3 Water Supply Connection

Connect the water inlet hose to a cold water tap and to the water inlet valve on the back of the washing machine. Ensure all connections are tight to prevent leaks.

### 3.4 Drain Hose Connection

Attach the drain hose to the drain outlet on the machine and route it to a suitable drain. Ensure the hose is not kinked or blocked. Maintain a minimum of 1cm clearance from the wall on the left or right side where the drain hose connects.



Figure 3: Drain Hose Connection

### 3.5 Power Connection

Plug the power cord into a grounded electrical outlet. Do not use extension cords or adapters.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Control Panel Overview

Familiarize yourself with the control panel buttons and indicators.



Figure 4: Control Panel

- **Power** ( ): Turns the machine on/off.
- **Start/Pause** ( / ): Starts or pauses the selected cycle.
- **Course Selection** ( ): Selects washing programs (e.g., Standard, Soak, Tub Wash).
- **Water Level** ( ): Adjusts the water level.
- **Wash** ( ): Sets wash time.
- **Rinse** ( ): Sets rinse cycles.
- **Spin** ( ): Sets spin time.
- **Wind Dry** ( ): Activates the heaterless wind drying function.
- **Bath Water** ( ): Activates the bathwater pump for water reuse.
- **Reservation** ( ): Sets a delayed start time (6 or 9 hours).

## 4.2 Loading Laundry

Open the lid and place laundry loosely into the tub. Do not overload the machine. The maximum capacity is 6kg.



Figure 5: Inside the Washing Tub

### 4.3 Adding Detergent

Add the appropriate amount of detergent to the detergent dispenser according to the detergent manufacturer's instructions and the load size.

### 4.4 Selecting a Wash Course

Press the **Power** button. Use the **Course Selection** button to choose your desired program:

- **Permeation Powerful Wash:** For heavily soiled items, ensuring thorough cleaning.
- **Soak (1 hour) Course:** For items requiring pre-soaking to remove stubborn stains.
- **Wind Dry (Heaterless):** For drying small loads of synthetic blend fabrics (up to 1.3kg) using air circulation.
- **Tub Washing/Tub Drying Course:** For cleaning and drying the washing machine tub itself.

The machine also features temperature and load sensors to optimize water and energy usage.

### 4.5 Starting the Wash Cycle

After selecting the course and adjusting any settings (e.g., water level), press the **Start/Pause** button to begin the cycle. The

approximate washing time is 45 minutes for a standard cycle.

## 4.6 Using the Reservation Function

To delay the start of a wash cycle, select your desired course and then press the **Reservation** button to set a delay of 6 or 9 hours.

## 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

### 5.1 Cleaning the Tub

Use the dedicated **Tub Washing/Tub Drying Course** periodically to clean and dry the stainless steel tub, preventing mold and odors.

### 5.2 Cleaning the Lint Filter

Remove and clean the lint filter after every few washes or when you notice lint accumulation. Refer to the diagram in the full manual for filter location and removal instructions.

### 5.3 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

### 5.4 Winterization (Cold Climates)

In freezing temperatures, drain all water from the hoses and tub to prevent damage. Consult the full manual for detailed winterization procedures.

## 6. TROUBLESHOOTING

---

If you encounter issues with your washing machine, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; Water supply off.	Check power connection; Close lid securely; Turn on water supply.
No water filling	Water tap closed; Water inlet hose kinked; Water pressure too low.	Open water tap; Straighten hose; Check household water pressure.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Straighten or clear drain hose; Clean drain pump filter.
Excessive vibration/noise	Machine not level; Load unbalanced; Shipping bolts not removed.	Adjust leveling feet; Redistribute laundry; Ensure shipping bolts are removed (if applicable).

## 7. SPECIFICATIONS

---

Feature	Specification
Brand	Toshiba

Feature	Specification
Model Number	AW-6G6 W
Capacity	6 kg
Color	Grand White
Access Location	Top
Product Weight	28 kg
Washing Functions	Permeation Powerful Wash, Soak (1 hour) Course
Drying Functions	Wind Dry (Heaterless), 1.3kg (Synthetic Blend)
Cleaning Functions	Tub Washing/Tub Drying Course
Energy/Water Saving	Temperature Sensor, Load Sensor, Bathwater Pump, Stainless Steel Tub (Star Crystal Drum)
Reservation Function	6, 9 hours delayed start
Approx. Wash Time	45 minutes

## 8. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Toshiba website. Keep your purchase receipt as proof of purchase.