

EuropAce EIC 213P

Europace EIC 213P Electric Induction Cooker User Manual

Model: EIC 213P

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Europace EIC 213P Electric Induction Cooker. Please read this manual thoroughly before using the appliance and retain it for future reference.

The Europace EIC 213P is a multi-function induction cooker featuring a water-resistant structure, soft-touch controls, 10 levels of power and temperature control, a 24-hour preset timer, and an auto switch-off function. It is designed for cooking meals at home and preparing food in a kitchen setting.

SAFETY PRECAUTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Do not touch hot surfaces. Use handles or knobs.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- **CAUTION:** The glass-ceramic cooktop surface is hot after cooking. Do not touch it with your hand.

PRODUCT OVERVIEW



Figure 1: Top-down view of the Europace EIC 213P Induction Cooker, highlighting the control panel with various function buttons and the central cooking zone. A warning about the hot surface is visible at the top.

The Europace EIC 213P features a sleek black glass-ceramic surface with a user-friendly touch control panel. Key components include:

- **Induction Cooking Zone:** The central area where cookware is placed.
- **Control Panel:** Located at the front, featuring soft-touch buttons and a digital display.
- **Power Meter:** Indicates power consumption.
- **Watt/Temperature Display:** Shows current power level or temperature.
- **Time Setting:** For setting the timer.
- **Function Buttons:** Dedicated buttons for SOUP, COOK, BOIL, MILK, STEAM, HOT-POT, FRY, and ON/OFF.
- **Power/Temperature Adjustment:** '+' and '-' buttons for increasing or decreasing settings.



Figure 2: Angled view of the Europace EIC 213P Electric Induction Cooker, showcasing its compact design and integrated control panel.



Figure 3: Rear view of the Europace EIC 213P Induction Cooker, displaying the power cord with a 3-pin plug and the ventilation grille for heat dissipation.

SETUP

1. **Unpacking:** Carefully remove the induction cooker and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the induction cooker on a stable, flat, heat-resistant surface. Ensure there is adequate ventilation

around the appliance (at least 10 cm clearance on all sides). Do not place it near water sources or heat-sensitive materials.

3. **Power Connection:** Ensure the power supply matches the voltage specified on the appliance's rating label. Plug the power cord into a grounded electrical outlet.
4. **Cookware Compatibility:** The Europace EIC 213P requires induction-compatible cookware. This includes pots and pans made of magnetic materials such as cast iron, enameled iron, or stainless steel with a magnetic base. A free stainless steel pot is included with your purchase.



Figure 4: The stainless steel pot included with the Europace EIC 213P Induction Cooker, suitable for induction cooking.



Figure 5: The Europace EIC 213P Induction Cooker with the provided stainless steel pot correctly positioned on the cooking zone, ready for operation.

OPERATING INSTRUCTIONS

Basic Operation

1. Place induction-compatible cookware containing food or liquid onto the center of the cooking zone.
2. Plug the cooker into a power outlet. The unit will emit a beep, and the display will show "----".
3. Press the **ON/OFF** button to turn on the cooker. The display will show "0000".
4. Select a cooking function (e.g., SOUP, COOK, BOIL, MILK, STEAM, HOT-POT, FRY) or manually adjust power/temperature using the + and - buttons.
5. The cooker will begin heating. The display will show the current power level (Watt) or temperature (°C).
6. To turn off the cooker, press the **ON/OFF** button again.

Power and Temperature Control

The EIC 213P offers 10 levels of power and temperature control. After selecting a cooking function or turning on the unit, use the + and - buttons to adjust the desired power level or temperature setting.

Timer Function

The cooker features a 24-hour preset timer.

1. While the cooker is operating, press the **TIME SETTING** button.
2. Use the + and - buttons to set the desired cooking time.
3. The timer will count down, and the cooker will automatically switch off once the set time expires.

Automatic Shut-Off

For safety and energy efficiency, the cooker is equipped with an automatic shut-off function. If no cookware is detected or if the cookware is removed during operation, the unit will automatically turn off after a short period.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your induction cooker.

1. **Before Cleaning:** Always unplug the cooker from the power outlet and allow it to cool completely before cleaning.
2. **Surface Cleaning:** Wipe the glass-ceramic surface with a soft, damp cloth and a mild detergent. For stubborn stains, use a non-abrasive cleaner specifically designed for ceramic cooktops. Do not use abrasive pads, harsh chemicals, or steel wool.
3. **Control Panel:** Wipe the control panel with a soft, dry cloth. Avoid excessive moisture.
4. **Ventilation Openings:** Ensure the ventilation openings on the sides and bottom of the cooker are free from dust and debris. Use a soft brush or vacuum cleaner to gently clear them.
5. **Storage:** When not in use for extended periods, store the cooker in a dry, clean place.

The water-resistant structure helps protect internal components from minor spills, but it is not designed for immersion. Always wipe up spills immediately.

TROUBLESHOOTING

 
 
 
 
Before contacting customer support, please refer to the following troubleshooting guide for common issues.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Cooker does not turn on.	<ul style="list-style-type: none">• Not plugged in.• Power outage.• Faulty outlet.	<ul style="list-style-type: none">• Ensure the power cord is securely plugged into a working outlet.• Check household circuit breaker.• Try another outlet.
Cooker turns on but does not heat.	<ul style="list-style-type: none">• Cookware is not induction-compatible.• Cookware is too small or too large for the cooking zone.• No cookware detected.	<ul style="list-style-type: none">• Use only induction-compatible cookware.• Ensure cookware base covers at least 80% of the cooking zone.• Place cookware firmly on the cooking zone.
Display shows an error code.	<ul style="list-style-type: none">• Internal malfunction.• Overheating.	<ul style="list-style-type: none">• Unplug the unit, wait 10 minutes, then plug it back in.• Ensure ventilation is not blocked.• If the problem persists, contact customer support.
Cooker makes a humming noise.	<ul style="list-style-type: none">• Normal operation sound of induction technology.• Sound from cookware.	<ul style="list-style-type: none">• This is normal.• Some cookware may produce more noise than others. This is not a defect.

SPECIFICATIONS

Feature	Detail
Model	EIC 213P
Brand	EuropAce
Power Source	Electric
Heating Elements	1
Control Type	Touch
Burner Type	Sealed
Special Features	Temperature Control, Automatic Shut-Off, High Temperature Protection, Water Resistance
Included Components	Stainless steel pot
Color	Black
Material (Pot)	Stainless Steel
Package Dimensions	40 x 32 x 18 cm
Package Weight	3.4 kg

<div><div>EuropAce</div><div></div><div>4-IN-1 25L Smart Dehumidifier EDH5251BWH</div><div><small>Important Information that may impact your Manufacturer's Warranty Read the instructions carefully and follow them exactly. Failure to follow the instructions may void the warranty. The warranty is limited to the original purchaser and is non-transferable. The warranty does not cover damage caused by misuse, neglect, or accidents. The warranty is void if the product is used for purposes other than those intended. The warranty is also void if the product is repaired or modified by anyone other than an authorized service technician. For complete details, please refer to the warranty card.</small></div></div>	<p>EuropAce EDH5251BWH WIFI 4-in-1 Smart Dehumidifier & Air Purifier User Manual</p> <p>User manual for the EuropAce EDH5251BWH WIFI, a versatile 4-in-1 appliance featuring a 25L smart dehumidifier, HEPA13 air purifier, ioniser, and laundry dryer function. This guide provides detailed instructions on operation, safety precautions, maintenance, and troubleshooting.</p>
<div><div>otimmo</div><div></div><div>82L Digital Built-In Oven EBO8821D</div><div><small>Important Information that may impact your Manufacturer's Warranty Read the instructions carefully and follow them exactly. Failure to follow the instructions may void the warranty. The warranty is limited to the original purchaser and is non-transferable. The warranty does not cover damage caused by misuse, neglect, or accidents. The warranty is void if the product is used for purposes other than those intended. The warranty is also void if the product is repaired or modified by anyone other than an authorized service technician. For complete details, please refer to the warranty card.</small></div></div>	<p>EuropAce EBO 8821D Built-In Oven: Door Removal and Cleaning Guide</p> <p>Detailed instructions for removing and cleaning the glass door of the EuropAce EBO 8821D 60cm 82L Built-In Oven. Includes step-by-step guidance and component identification for easier maintenance.</p>
<div><div>EuropAce</div><div></div><div>HEPA Dry™ Series EDH3140DWH</div><div><small>Important Information that may impact your Manufacturer's Warranty Read the instructions carefully and follow them exactly. Failure to follow the instructions may void the warranty. The warranty is limited to the original purchaser and is non-transferable. The warranty does not cover damage caused by misuse, neglect, or accidents. The warranty is void if the product is used for purposes other than those intended. The warranty is also void if the product is repaired or modified by anyone other than an authorized service technician. For complete details, please refer to the warranty card.</small></div></div>	<p>EuropAce EDH3140DWH HEPA Dry Series Dehumidifier User Manual and Specifications</p> <p>Comprehensive user manual for the EuropAce EDH3140DWH HEPA Dry Series Dehumidifier, covering safety information, operation, maintenance, troubleshooting, specifications, and warranty details.</p>
<div><div>EuropAce</div><div></div><div>Deluxe 400L Top Mount Fridge ER 5371W</div><div><small>Important Information that may impact your Manufacturer's Warranty Read the instructions carefully and follow them exactly. Failure to follow the instructions may void the warranty. The warranty is limited to the original purchaser and is non-transferable. The warranty does not cover damage caused by misuse, neglect, or accidents. The warranty is void if the product is used for purposes other than those intended. The warranty is also void if the product is repaired or modified by anyone other than an authorized service technician. For complete details, please refer to the warranty card.</small></div></div>	<p>EuropAce Deluxe 400L Top Mount Fridge ER 5371W User Manual and Installation Guide</p> <p>Comprehensive user manual for the EuropAce Deluxe 400L Top Mount Fridge (Model ER 5371W), covering safety information, installation, operation, maintenance, troubleshooting, specifications, environmental protection, and warranty details.</p>