

IKONIC Pro 2100+

IKONIC Pro 2100+ Hair Dryer User Manual

Model: Pro 2100+

INTRODUCTION

Thank you for choosing the IKONIC Pro 2100+ Hair Dryer. This professional-grade hair dryer is designed to provide efficient and effective hair styling with its powerful 2000W motor, multiple heat and speed settings, and specialized features. Please read this manual thoroughly before use to ensure safe operation and optimal performance of your appliance. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **READ ALL INSTRUCTIONS BEFORE USING.**
- **DANGER:** Keep away from water. As with most electrical appliances, electrical parts are electrically live even when the switch is off.
- Always unplug the appliance immediately after use.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
 - An appliance should never be left unattended when plugged in.
 - Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
 - Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
 - Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.

- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air towards eyes or other heat-sensitive areas.
- Nozzles may be hot during use. Allow them to cool before handling.
- Always clean the air filter before every use to prevent overheating and maintain performance.
- The appliance features an overheat protection system that automatically shuts off the dryer if it detects excessive heat buildup. If this occurs, unplug the dryer and allow it to cool down before resuming use.

PRODUCT OVERVIEW

The IKONIC Pro 2100+ Hair Dryer is engineered for professional styling with user convenience in mind. It features a powerful motor and advanced settings for various hair types and styles.

Key Features:

- **2000W High Velocity Motor:** Provides fast drying and powerful performance.
- **Low Noise Function:** Ensures a quiet and peaceful styling experience.
- **Interchangeable Nozzles:** Includes two nozzles for focused airflow and precise styling.
- **3 Heat and 2 Speed Settings:** Customizable airflow and temperature to suit your hair type and desired style.
- **Cool Shot Feature:** Helps to set your hairstyle in place.
- **10ft (2.5m) Long Flexible Cord:** Offers ample length for maneuverability.
- **Overheat Protection System:** Automatically shuts off the dryer to prevent damage from excessive heat.
- **Removable Filter:** For easy cleaning and maintenance.
- **Ergonomic Design:** Aesthetic and comfortable to hold during use.

Included Components:

- 1 x IKONIC Pro 2100+ Hair Dryer
- 1 x User Manual (this document)
- 1 x Warranty Card
- 2 x Airflow Nozzles



Image: The IKONIC Pro 2100+ Hair Dryer in black, shown with its two interchangeable airflow nozzles.

STEP INTO SALON-STYLE PERFECTION

With 2000W High Velocity Motor



Image: The IKONIC Pro 2100+ Hair Dryer, emphasizing its 2000W high velocity motor for fast drying, powerful performance, and long life.



Image: Close-up view of the IKONIC Pro 2100+ Hair Dryer, illustrating its low noise function and overheat protection system.

SETUP

1. **Unpack:** Carefully remove the hair dryer and all accessories from the packaging.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Attach Nozzles:** Select the desired airflow nozzle. Align the nozzle with the front barrel of the hair dryer and push it firmly into place until it clicks securely. The nozzles are interchangeable and can be rotated to direct airflow as needed.
4. **Power Connection:** Ensure your hands are dry. Plug the power cord into a suitable electrical outlet. The appliance is designed for standard household electrical systems.

OPERATING INSTRUCTIONS

The IKONIC Pro 2100+ Hair Dryer offers flexible control over heat and speed settings to achieve your desired styling results.

Power On/Off and Speed Settings:

- Locate the speed switch on the handle.
- Slide the switch to the '0' position to turn the dryer off.
- Slide to the 'I' position for low speed airflow.
- Slide to the 'II' position for high speed airflow.

Heat Settings:

- Locate the heat switch on the handle.
- Slide the switch to select one of the three heat settings:
 - **Low Heat:** For gentle drying or styling.
 - **Medium Heat:** For normal drying.
 - **High Heat:** For fast drying or thick hair.

Cool Shot Function:

- Press and hold the 'Cool Shot' button (usually located on the front of the handle) to instantly deliver a burst of cool air.
- This function is ideal for setting your hairstyle after drying, helping to lock in shine and reduce frizz.



Image: A user demonstrating the use of the IKONIC Pro 2100+ Hair Dryer with an attached nozzle for styling.



Image: Detailed view of the IKONIC Pro 2100+ Hair Dryer's controls, highlighting the 3 heat and 2 speed settings, and the cool shot feature.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your hair dryer.

Cleaning the Air Filter:

1. **IMPORTANT:** Always unplug the hair dryer from the power outlet before cleaning.
2. The IKONIC Pro 2100+ features a removable rear filter. Gently twist or pull off the rear cap to access the filter.
3. Remove any accumulated lint, dust, or hair from the filter screen using a soft brush or cloth. You can also rinse it under cool water if necessary, ensuring it is completely dry before reattaching.
4. Reattach the filter cap securely.
5. **Recommendation:** Clean the air filter before every use to prevent overheating and maintain strong airflow.

General Cleaning:

- Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure the appliance is completely dry before storing or using again.

Storage:

- When not in use, unplug the appliance.
- Allow the dryer to cool down completely.
- Store it in a dry location, out of reach of children. Do not wrap the cord around the appliance, as this can cause premature wear and breakage.



Image: The IKONIC Pro 2100+ Hair Dryer, illustrating its 2.5m long flexible cord and removable filter for easy maintenance.

TROUBLESHOOTING

If you encounter issues with your IKONIC Pro 2100+ Hair Dryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer does not turn on.	Not plugged in; power outlet malfunction; internal fault.	Ensure the dryer is securely plugged into a working outlet. Check the power switch position. If the issue persists, contact customer support.

Problem	Possible Cause	Solution
Airflow is weak or inconsistent.	Blocked air intake filter; motor issue.	Unplug the dryer and clean the rear air filter as described in the Maintenance section. If the problem continues, contact customer support.
Dryer suddenly stops during use.	Overheat protection activated.	Unplug the dryer and allow it to cool down for at least 10-15 minutes. Clean the air filter. Resume use. If it repeatedly overheats, contact customer support.
Unusual noise or smell.	Internal component issue; foreign object in airflow.	Immediately unplug the dryer. Do not attempt to repair. Contact customer support.

SPECIFICATIONS

Feature	Detail
Model	Pro 2100+
Power (Wattage)	2000 Watts
Power Source	Corded Electric
Material	Metal
Color	Black
Dimensions (LxWxH)	21 x 9 x 29 cm
Item Weight	1.5 kg
Cord Length	10 ft (approximately 2.5 meters)
Heat Settings	3
Speed Settings	2
Special Features	Cool Shot, Low Noise Function, Overheat Protection, Removable Filter
Included Accessories	2 Airflow Nozzles
Manufacturer	SSIZ International
Country of Origin	China

WARRANTY AND SUPPORT

The IKONIC Pro 2100+ Hair Dryer comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical support, or any product-related inquiries, please refer to the Warranty Card included in your product packaging. You may also contact the manufacturer or authorized service center using the details

provided on the warranty card or the official IKONIC website.

Manufacturer Contact: SSIZ International Pvt Ltd, 323/3rd floor, Umrigar Building, opp Crawford market,
Mumbai-400003. Maharashtra INDIA; 18001209959

Please retain your proof of purchase for warranty validation.