

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Wahl Professional](#) /

› [Wahl Professional 5-Star Cord/Cordless Magic Clip #8148 Instruction Manual](#)

Wahl Professional 8148

Wahl Professional 5-Star Cord/Cordless Magic Clip #8148 Instruction Manual

Model: #8148 | Brand: Wahl Professional

PRODUCT OVERVIEW

The Wahl Professional 5-Star Cord/Cordless Magic Clip #8148 is a versatile hair clipper designed for professional use, offering both corded and cordless operation. It features a high-precision stagger-tooth 2161 blade with crunch technology, a convenient taper lever for easy fading and blending, and a lithium-ion battery providing up to 100 minutes of run time per charge. This model is engineered for superior speed and ease of use, making it suitable for various hair cutting needs.



Image: The Wahl Professional 5-Star Cord/Cordless Magic Clip #8148 shown with its packaging and included travel case.

SAFETY INFORMATION

Important Safety Precautions:

- Avoid use on infants or near water sources.
- Be cautious around the cutting blades to prevent eye injury or skin irritation.
- Follow recommended cleaning and maintenance procedures.

LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

WHAT'S INCLUDED

Your Wahl Professional 5-Star Cord/Cordless Magic Clip #8148 package includes the following items:

- Professional Cordless Magic Clip #8148
- Wahl Professional Travel Storage Case #90728
- 8 Cutting Guides (1/8" - 1")
- Styling Comb
- Power Supply/Charger
- Blade Oil
- Cleaning Brush
- Operating Instructions Manual
- Red Blade Guard

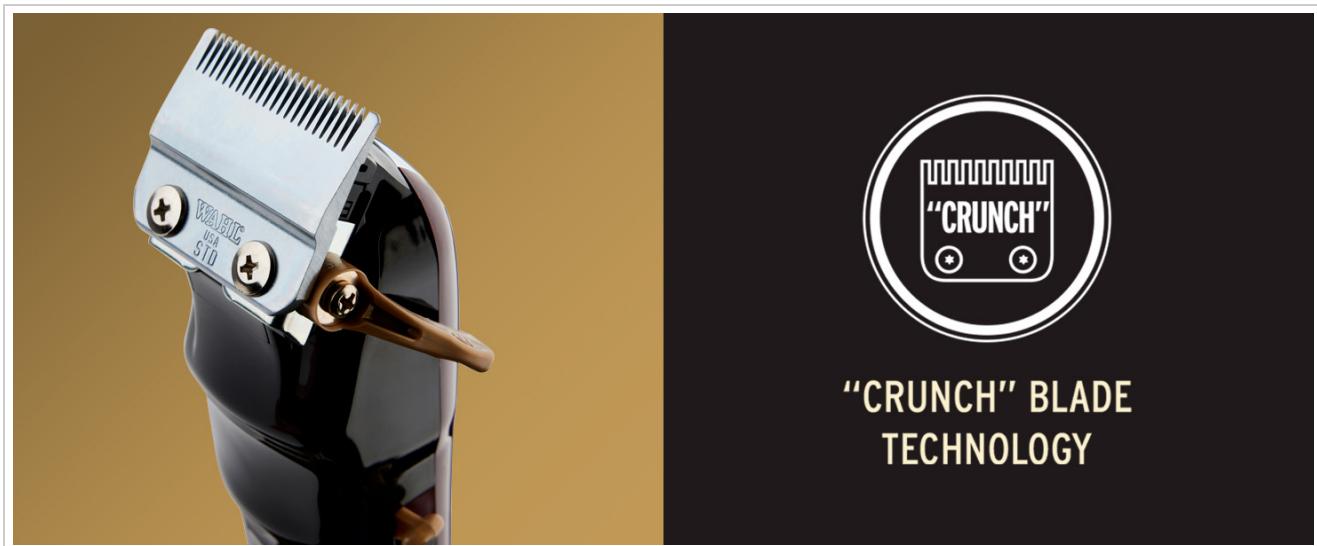


Image: A visual representation of the Wahl Professional 5-Star Cord/Cordless Magic Clip #8148 and its complete set of accessories, including various cutting guides, styling comb, power supply, oil, cleaning brush, and blade guard.

SETUP

1. **Initial Charge:** Before first use, fully charge your clipper. Connect the power supply to the clipper's charging port and plug it into a suitable electrical outlet. The indicator light will show charging status. A full charge provides approximately 100 minutes of cordless run time.

- Oiling Blades:** Apply a few drops of Wahl Clipper Oil to the blades before each use. Turn the clipper on to distribute the oil evenly, then wipe off any excess. This ensures smooth operation and extends blade life.
- Attaching Cutting Guides:** Select the desired cutting guide (comb attachment) for your preferred hair length. Align the guide with the clipper blade and snap it securely into place. Ensure it is firmly attached before operating.



Image: Close-up view of the Wahl Magic Clip's charging port, illustrating where the power cord connects to the device for charging or corded operation.

OPERATING INSTRUCTIONS

- Power On/Off:** To turn the clipper on, slide the power switch to the 'ON' position. To turn it off, slide the switch to the 'OFF' position.
- Corded/Cordless Operation:** The clipper can be used cordlessly after charging or directly plugged into an outlet for continuous power.
- Adjusting Taper Lever:** The adjustable taper lever allows for varying cutting lengths without changing the guide comb. Move the lever up for a closer cut and down for a longer cut. This is ideal for blending and fading.
- Cutting Techniques:** For best results, always cut against the direction of hair growth. Use smooth, overlapping strokes. Start with a longer guide comb and gradually switch to shorter ones if a closer cut is desired.

Video: A demonstration of the Wahl Magic Clip in use, showcasing its cutting capabilities and ease of handling during a haircut. This video highlights the product's performance for various styles.

Video: A brief demonstration of the WAHL 5-Star Magic Clip, illustrating its features and how it performs during a haircut. This clip provides a quick overview of the clipper's functionality.

Video: An official product video showcasing the Wahl Professional 5-Star Cord/Cordless Magic Clip #8148 with Travel Case #90728, detailing its features and benefits.

MAINTENANCE

- Cleaning Blades:** After each use, remove the guide comb and use the cleaning brush to brush away any loose hair from the blades. For thorough cleaning, the blades can be detached and rinsed under water, ensuring they are completely dry before reattaching.
- Oiling Blades:** Regularly oil the blades with Wahl Clipper Oil to maintain sharpness and prevent rust. Apply 2-3 drops across the top blade and 1 drop on each side of the bottom blade. Run the clipper for a few seconds to distribute the oil.
- Storage:** Store the clipper and its accessories in the provided travel case in a cool, dry place. Ensure the blade guard is in place to protect the blades when not in use.



Image: The essential maintenance accessories for the Wahl Magic Clip, including the power adapter, cleaning brush, and blade oil, crucial for keeping the clipper in optimal condition.

TROUBLESHOOTING

- Clipper Not Turning On:** Ensure the clipper is fully charged or properly plugged into a working power outlet. Check the power switch for proper engagement.
- Clipper Pulling Hair:** This often indicates dull blades or insufficient oiling. Clean and oil the blades. If the issue persists, consider replacing the blades.
- Poor Cutting Performance:** Ensure the blades are clean and oiled. Check that the cutting guide is correctly attached. If the blades are worn, replacement may be necessary.
- Battery Not Holding Charge:** Ensure the charger is functioning correctly and the charging port is clean. If the battery life has significantly diminished over time, it may indicate the end of the battery's lifespan.

SPECIFICATIONS

Model Number	8148-90728
Brand	Wahl Professional

Power Source	Battery Powered (Cord/Cordless)
Item Weight	10.2 Ounces
Product Dimensions	15.39 x 11.3 x 3.35 inches
Color	Maroon, White
Recommended Uses	Beard, Body, Hair
Manufacturer	Wahl Professional
First Available Date	August 22, 2017

WARRANTY AND SUPPORT

The Wahl Professional 5-Star Cord/Cordless Magic Clip #8148 typically comes with a 2-year warranty, covering manufacturing defects and ensuring product reliability. For warranty claims, technical support, or to purchase replacement parts, please contact Wahl Professional customer service or visit their official website.

For further assistance, please refer to the contact information provided in your product packaging or visit the [Wahl Professional Store](#).