

Fridja F-10

Fridja F10 Portable Garment Steamer Instruction Manual

Model: F-10 | Brand: Fridja

1. INTRODUCTION

Thank you for choosing the Fridja F10 Portable Garment Steamer. This powerful and compact steamer is designed to quickly and efficiently remove wrinkles from a variety of fabrics, making it ideal for both home use and travel. With its rapid heat-up time and continuous steam output, maintaining wrinkle-free garments has never been easier.

Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance. Keep this manual for future reference.



Remove wrinkles and refreshes clothes. Ideal for travelling.



Image: The Fridja F10 steamer is shown alongside travel items, highlighting its portability and suitability for travel.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Use the appliance only for its intended use.
- To avoid the risk of electric shock, do not immerse the appliance in water or other liquids.
- Never pull the cord to disconnect from the outlet; instead, grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let the appliance cool completely before putting away.
- Always disconnect appliance from electrical outlet when filling with water or emptying, and when not in use.
- Do not operate appliance with a damaged cord or if the appliance has been dropped or damaged. To avoid

the risk of electric shock, do not disassemble the appliance. Contact qualified service personnel for examination and repair. Incorrect reassembly can cause a risk of electric shock when the appliance is used.

- Close supervision is necessary for any appliance being used by or near children. Do not leave appliance unattended while connected.
- Burns could occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam appliance upside down – there may be hot water in the reservoir.
- This appliance is for household use only.

3. PACKAGE CONTENTS

Carefully unpack your Fridja F10 Portable Garment Steamer and check that all items are present and in good condition. The package should include:

- Fridja F10 Portable Garment Steamer Unit
- Water Bottle Adapter
- Delicate Fabric Guard
- Folding Hanger
- Collar Press
- Carry Bag
- Instruction Manual (this document)



Image: An overhead view displaying the Fridja F10 steamer and all its included accessories, such as the water bottle adapter, fabric guard, folding hanger, collar press, and carry bag.

Water bottle adapter:
Travel light, skip the tank.

Use the collar press:
Perfect collars and cuffs



Folding hanger, easy to steam
when on the go.

Carry bag included

Image: A visual guide to the included accessories: water bottle adapter for travel, collar press for crisp collars and cuffs, a folding hanger for convenience, and a carry bag for portability.

4. PRODUCT OVERVIEW

Familiarize yourself with the different parts of your Fridja F10 Portable Garment Steamer:

- **Steam Nozzle/Heated Plate:** Emits steam and provides a heated surface for pressing.
- **Water Tank:** Detachable tank for holding water. Features MIN and MAX fill lines.
- **Power Button:** Turns the steamer on/off.
- **Steam Trigger/Continuous Steam Button:** Activates steam. Can be locked for continuous steam.
- **Power Cord:** Connects the steamer to an electrical outlet.



Image: A detailed diagram illustrating the main components and features of the Fridja F10 steamer, including its steam output, heated plate, water tank, power modes, and steam control.



Image: An infographic summarizing the technical specifications and performance metrics of the Fridja F10 steamer, such as cord length, power, steam duration, heat-up time, and weight.

5. SETUP

1. Fill the Water Tank:

- Remove the water tank from the steamer unit.
- Open the water tank cap.
- Fill the tank with distilled or de-mineralized water up to the MAX fill line. Do not overfill. Using tap water may lead to mineral buildup over time.
- Close the cap securely and reattach the water tank to the steamer unit.

2. Attach Accessories (Optional):

- If using the delicate fabric guard, attach it to the steam nozzle.

- For collars or cuffs, use the collar press.
- The folding hanger can be used to hang garments while steaming.
- The water bottle adapter allows you to use a standard water bottle as a reservoir when traveling light.

3. **Plug In:** Insert the power plug into a suitable electrical outlet (230V).

6. OPERATING INSTRUCTIONS

1. **Power On:** Press the power button. The indicator light will illuminate, and the steamer will begin to heat up. It heats up in approximately 45 seconds.
2. **Select Steam Mode:** The Fridja F10 features dual modes: full power and eco mode. Select the desired mode based on your fabric and steaming needs.
3. **Start Steaming:**
 - Once the steamer is ready (indicator light may change or stop blinking), press the steam trigger to release steam.
 - For continuous steam, slide the continuous steam button into the locked position.
4. **Steaming Garments:**
 - Hold the garment taut with one hand.
 - Hold the steamer with the other hand, keeping the steam nozzle a few inches away from the fabric.
 - Move the steamer slowly up and down the fabric, allowing the steam to penetrate and relax the fibers.
 - For stubborn wrinkles, gently press the heated plate against the fabric while steaming.
 - The steamer is safe for all garments, including delicate fabrics like silk, velvet, wool, cotton, linen, nylon, suits, dresses, and wedding dresses. Use the delicate fabric guard for extra protection.
5. **Steaming Soft Furnishings:** The steamer can also be used to refresh curtains, bedding, sofas, and mattresses. Hold the steamer close to the fabric and move it slowly. The high temperature steam helps to kill bacteria and refresh fabrics.
6. **Power Off:** When finished, press the power button to turn off the steamer. Unplug the appliance from the electrical outlet.



Powerful handheld clothes steamer. Ready in 35 seconds.



Image: A user demonstrating the Fridja F10 steamer on a denim shirt, showing the effective steam output and ease of use.



Image: The steamer being used on a suit jacket, illustrating its versatility across different fabric types including delicate materials, ensuring safe and effective wrinkle removal.

7. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your steamer.

1. **Empty Water Tank:** After each use, always empty any remaining water from the tank. This prevents mineral buildup and bacterial growth.
2. **Cleaning the Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. **Descaling (if necessary):** If you notice reduced steam output or mineral residue, descaling may be required.
 - Mix a solution of 50% white vinegar and 50% distilled water.
 - Fill the water tank with this solution up to the MIN line.

- Plug in the steamer and allow it to heat up.
- Steam the solution until the tank is empty.
- Repeat the process with clean distilled water to rinse out any vinegar residue.

4. **Storage:** Store the steamer in its carry bag in a cool, dry place, away from direct sunlight and moisture. Ensure the steamer is completely cool before storing.

8. TROUBLESHOOTING

If you encounter issues with your Fridja F10 steamer, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
No steam or very little steam.	<ul style="list-style-type: none"> ◦ Water tank is empty or low. ◦ Steamer not heated sufficiently. ◦ Mineral buildup in the steamer. 	<ul style="list-style-type: none"> ◦ Refill water tank. ◦ Wait for 45 seconds for the steamer to heat up. ◦ Perform descaling procedure (see Maintenance section).
Water spitting or leaking.	<ul style="list-style-type: none"> ◦ Overfilling the water tank. ◦ Steamer not fully heated. ◦ Mineral buildup. 	<ul style="list-style-type: none"> ◦ Do not fill past the MAX line. ◦ Allow steamer to fully heat before use. ◦ Perform descaling procedure.
Steamer not turning on.	<ul style="list-style-type: none"> ◦ Not plugged in correctly. ◦ Power outlet issue. ◦ Appliance malfunction. 	<ul style="list-style-type: none"> ◦ Ensure plug is fully inserted. ◦ Test outlet with another appliance. ◦ Contact customer support.
Wrinkles not removing effectively.	<ul style="list-style-type: none"> ◦ Not holding garment taut. ◦ Moving steamer too quickly. ◦ Insufficient steam. 	<ul style="list-style-type: none"> ◦ Ensure fabric is pulled taut. ◦ Move steamer slower, allowing steam to penetrate. ◦ Check water level and ensure steamer is fully heated.

9. SPECIFICATIONS

Feature	Detail
Model Number	F-10
Power	1500 Watts
Voltage	230V
Water Tank Capacity	260 Millilitres
Heat-up Time	Approx. 45 seconds
Continuous Steam Time	Up to 14 minutes (from full tank)
Steam Flow Rate	25g / minute
Material	Stainless Steel, Plastic
Weight	900 Grams
Dimensions (L x W x H)	15 x 12 x 22 cm
Automatic Shut-off	Yes







10. WARRANTY AND SUPPORT

Fridja products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Fridja website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Fridja Customer Service:

- **Website:** www.fridja.com (Please check the official website for the most up-to-date contact information.)
- **Email:** Refer to website for contact email.
- **Phone:** Refer to website for contact phone number.

When contacting support, please have your product model number (F-10) and purchase details ready.

	<p>Fridja f900 Automatic Citrus Juicer Instruction Manual</p> <p>Detailed instruction manual for the Fridja f900 Automatic Citrus Juicer. Learn about safety precautions, assembly, operation, cleaning, troubleshooting common issues, plug safety, proper disposal, and warranty information for your Fridja juicer.</p>
	<p>Fridja f2500 Self Feeding Slow Juicer Instruction Manual</p> <p>Comprehensive instruction manual for the Fridja f2500 Self Feeding Slow Juicer, covering assembly, operation, cleaning, safety, troubleshooting, and warranty information.</p>
	<p>Fridja f1900 Whole Fruit Slow Juicer: Instruction Manual</p> <p>Comprehensive instruction manual for the Fridja f1900 Whole Fruit Slow Juicer. Learn how to assemble, operate, clean, and troubleshoot your juicer for optimal performance and healthy juice extraction.</p>
	<p>Fridja f77 Super Oven Pro Instruction Manual - Digital Air Fryer Oven</p> <p>Comprehensive instruction manual for the Fridja f77 Super Oven Pro, a 30L digital air fryer oven. Learn about its features, specifications, safety guidelines, operation, cleaning, and maintenance.</p>
	<p>Philips 1000 Series Handheld Steamer User Manual</p> <p>Comprehensive user manual for the Philips 1000 Series Handheld Steamer (STH1010/10), providing instructions on usage, maintenance, and troubleshooting in multiple languages.</p>
	<p>Philips STH7030/10 Garment Steamer: User Manual & Instructions</p> <p>Get the most out of your Philips STH7030/10 garment steamer with this official user manual. Find detailed instructions, usage tips, maintenance advice, and safety information for effortless garment care.</p>