

[Manuals.plus](#) /

› [Sun Joe](#) /

› Sun Joe HJ605CC-GRY 2-in-1 Electric Telescoping Grass Trimmer User Manual

Sun Joe HJ605CC-RED-RM

Sun Joe HJ605CC-GRY 2-in-1 Electric Telescoping Grass Trimmer User Manual

MODEL: HJ605CC-RED-RM | BRAND: SUN JOE

Introduction

Thank you for choosing the Sun Joe HJ605CC-GRY 2-in-1 Electric Telescoping Grass Trimmer. This versatile tool is engineered to simplify your yard maintenance tasks, offering both grass shearing and hedge trimming capabilities in one compact, cordless device. Its lightweight design and extension pole provide comfort and ease of use for various applications, from precise edging to reaching higher shrubs.

Important Safety Information

Always read and understand all instructions before operating this product. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

- Keep all body parts away from the blades. Do not attempt to remove cut material or hold material to be cut when blades are moving.
- Ensure the safety switch is engaged before handling the unit.
- Wear appropriate personal protective equipment, including safety glasses, gloves, and sturdy footwear.
- Do not operate the tool in wet conditions or near flammable liquids or gases.
- Store the tool indoors in a dry, secure location, out of reach of children.

Package Contents

- Main Unit (Grass Shear / Hedge Trimmer)
- Extension Pole
- 4-inch Grass Shear Blade
- 6-inch Hedge Trimmer Blade
- Battery Charger



Figure 1: All components included with the Sun Joe HJ605CC-GRY.

Setup

1. Charging the Battery

The unit is powered by a 7.2-volt lithium-ion battery. Before first use, fully charge the battery. Connect the charger to the charging port on the main unit. The indicator light on the charger will show charging status. Once fully charged, disconnect the charger.

2. Attaching the Extension Pole

For extended reach and reduced bending, attach the 3-foot extension pole. Align the main unit with the pole's connector and slide it into place until it clicks securely. Ensure the electrical cable from the main unit is properly connected to the pole's internal wiring.



Figure 2: The main unit attached to the extension pole for extended reach.

3. Changing Blades

The Sun Joe HJ605CC-GRY comes with two interchangeable blades: a 4-inch grass shear blade and a 6-inch hedge trimmer blade. To change blades, ensure the unit is off and disconnected from any power source. Remove the blade cover, then carefully slide out the current blade. Insert the desired blade, ensuring it aligns correctly with the internal mechanism, and replace the blade cover.

Video 1: This video demonstrates the assembly, charging process, and how to easily change between the grass shear and hedge trimmer blades.

Operating Instructions

1. Starting the Unit

To start the unit, press the safety switch located on the side of the handle, then squeeze the trigger. Release the trigger to stop the unit.

2. Grass Shearing

For grass shearing, attach the 4-inch grass shear blade. You can use the unit handheld for precise touch-ups or with the extension pole for edging along sidewalks and driveways. The extension pole features wheels for smooth gliding along surfaces.



Figure 3: Using the grass shear with the extension pole for clean edges.

3. Hedge Trimming

For hedge trimming, attach the 6-inch hedge trimmer blade. Use the unit handheld for shaping small shrubs or with the extension pole for reaching taller hedges without straining. The head of the unit can be rotated for optimal cutting angles by pressing a simple release button.



Figure 4: Handheld operation for precise hedge trimming.

Maintenance

1. Blade Care

After each use, clean the blades of any debris, sap, or grass clippings. Apply a light coat of machine oil to the blades to prevent rust and ensure smooth operation. Always handle blades with care and wear protective gloves.

2. Storage

Store the unit in a cool, dry place, away from direct sunlight and moisture. Ensure the battery is charged before storing for extended periods to maintain battery health. Keep the unit out of reach of children and pets.

Troubleshooting

- **Unit not starting:** Ensure the battery is fully charged and properly inserted. Check that both the safety switch and trigger are engaged simultaneously.
- **Blades not cutting effectively:** Clean the blades of any accumulated debris. Check if the blades are dull or damaged and replace if necessary.
- **Reduced battery life:** Ensure the battery is fully charged before each use. Avoid operating the unit in extremely cold temperatures, which can affect battery performance.

Specifications

Brand	Sun Joe
Model Number	HJ605CC-RED-RM
Power Source	Battery Powered
Battery Type	7.2V Lithium-Ion
Item Weight	2.5 Pounds
Grass Shear Cutting Width	4 Inches

Hedge Trimmer Blade Length	6 Inches
Extension Pole Length	3 Feet

Warranty and Support

Your new Sun Joe HJ605CC-GRY 2-in-1 Electric Telescoping Grass Trimmer is backed by the Snow Joe + Sun Joe customer promise. We warrant new, powered products for two years from the date of purchase. No questions asked. For further assistance, please contact Snow Joe + Sun Joe customer support at 1-866-766-9563.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question