

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [WLN](#) /

> [WLN KD-C1 Mini Walkie Talkie UHF 400-470Mhz Two Way Radio User Manual](#)

WLN KD-C1

WLN KD-C1 Mini Walkie Talkie User Manual

Model: KD-C1

UHF 400-470Mhz Two Way Radio

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your WLN KD-C1 Mini Walkie Talkie. Please read this manual thoroughly before using the device to ensure proper function and to prevent damage.

PRODUCT OVERVIEW

The WLN KD-C1 is a compact and professional UHF two-way radio designed for reliable communication. It features 16 channels, a large PTT button, and supports USB charging for convenience.



Figure 1: Labeled components of the KD-C1 Walkie Talkie, showing the antenna, power/voice volume knob, signal light, charger light, speaker, and microphone.



Figure 2: Side profile of the KD-C1, illustrating its ultra-thin design for easy portability.

WHAT'S IN THE BOX

Verify that all items are present in the package:

- WLN KD-C1 Mini Walkie Talkie (1 Pair)
- Rechargeable Lithium Ion Batteries (2)
- Desktop Chargers (2)
- USB Data Cables (2)
- Belt Clips (2)
- Charger Adapters (2)
- User Manual



Figure 3: All components included in the WLN KD-C1 package, laid out for inspection.

SETUP

1. Battery Installation

1. Ensure the walkie talkie is powered off.
2. Locate the battery compartment cover on the back of the radio.
3. Slide the cover downwards to remove it.
4. Insert the Lithium Ion battery into the compartment, aligning the contacts correctly.

5. Replace the battery compartment cover and slide it upwards until it clicks into place.



Figure 4: Disassembled view of the KD-C1 showing the battery, battery compartment, and back cover, illustrating battery installation.

2. Charging the Battery

1. Connect the charger adapter to a power outlet.
2. Connect the USB data cable to the charger adapter and the desktop charger.
3. Place the walkie talkie into the desktop charger. Ensure the charging contacts on the radio align with those in the charger.
4. The charger light on the radio will indicate charging status (e.g., red for charging, green for fully charged).
5. A full charge typically takes approximately 3-4 hours.

3. Attaching the Belt Clip

Align the belt clip with the screw holes on the back of the radio and secure it with the provided screws.

OPERATING INSTRUCTIONS

1. Power On/Off and Volume Control

- To power on the radio, rotate the Power/Voice Volume knob clockwise until you hear a click.
- Continue rotating the knob clockwise to increase the volume. Rotate counter-clockwise to decrease the volume.
- To power off, rotate the knob counter-clockwise until you hear a click.

2. Channel Selection

- The KD-C1 has 16 pre-programmed channels.
- Use the channel selector knob (located next to the Power/Voice Volume knob) to choose your desired channel.
- Ensure all radios in your group are set to the same channel for communication.

3. Transmitting and Receiving

- To transmit, press and hold the large Push-to-Talk (PTT) button located on the front of the radio. Speak clearly into the microphone.
- Release the PTT button to stop transmitting and to receive incoming messages.
- The signal light will illuminate when a signal is being received.

4. Channel Scan

The radio supports channel scan to check for activity across all 16 channels. Refer to the specific programming instructions if you wish to enable or disable this feature, as it may require specialized software.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the radio's exterior. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** To prolong battery life, avoid overcharging and completely discharging the battery. Store the radio and battery in a cool, dry place when not in use for extended periods.
- **Water Resistance:** The KD-C1 is designed to be waterproof. However, avoid submerging the radio in water or exposing it to extreme moisture for prolonged periods. Ensure the battery cover is securely closed to maintain water resistance.
- **Antenna:** The antenna is integrated. Do not attempt to remove or modify it.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Radio does not power on.	Battery is dead or not installed correctly.	Charge the battery. Ensure the battery is correctly inserted and the contacts are clean.
Cannot transmit or receive.	Incorrect channel selected. Out of range. Battery low.	Verify both radios are on the same channel. Move closer to the other radio. Charge the battery.
Poor audio quality or static.	Weak signal. Interference. Volume too low/high.	Move to an open area. Adjust volume. Check for sources of interference.
Battery life is short.	Battery is old or not fully charged.	Ensure battery is fully charged before use. Consider replacing the battery if it's old.

SPECIFICATIONS

Feature	Specification
Model Number	KD-C1

Feature	Specification
Frequency Range	400 - 470 MHz (UHF)
Number of Channels	16
Talking Range Maximum	5 Kilometers (approx. 3.1 miles)
Battery Type	Lithium Ion (1500mAh)
Voltage	3.7 Volts
Water Resistance Level	Waterproof
Item Weight	12.7 ounces (approx. 360g)
Package Dimensions	8.66 x 6.89 x 1.81 inches
Country of Origin	China

WARRANTY AND SUPPORT

The WLN KD-C1 Mini Walkie Talkie comes with a 1-year warranty from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For warranty claims, technical support, or any inquiries, please contact your retailer or the manufacturer directly. Keep your proof of purchase for warranty validation.