

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Bush Furniture](#) /

> [Bush Furniture Move 60 Electric Height Adjustable Desk \(72W x 30D, Mocha Cherry Silver Base\) User Manual](#)

Bush Furniture M6S7230MRSK

Bush Furniture Move 60 Electric Height Adjustable Desk User Manual

Model: M6S7230MRSK (72W x 30D, Mocha Cherry Silver Base)

1. PRODUCT OVERVIEW

The Bush Furniture Move 60 Series Electric Height Adjustable Standing Desk is designed to provide an ergonomic workspace solution for home and professional offices. This desk allows users to easily transition between sitting and standing positions, promoting a more dynamic work environment.



Image: The Bush Furniture Move 60 Electric Height Adjustable Desk, featuring a Mocha Cherry desktop and a Silver Base.

Key Features:

- **Height Adjustable Motorized Base:** Seamlessly adjust desk height to suit individual preferences.
- **Durable Work Surface:** Thermally fused laminate desktop offers superior resistance to scratches and

stains.

- **Wide Height Range:** Two-stage units provide a height range from 27 to 46.7 inches, operating at 0.78 inches per second.
- **Programmable Presets:** Four programmable height presets with quiet, soft-touch start and stop functionality.
- **Anti-Collision Sensor:** Automatically stops movement when an object is detected, enhancing safety.
- **Integrated Cable Management:** Includes wire management grommets for an organized workspace.



Image: A diagram highlighting the key features of the Move 60 desk, including its height range, anti-collision sensor, programmable presets, wire management grommet, durable laminate desktop, and welded steel base.

2. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before assembling and operating this product. Failure to follow these instructions may result in injury or damage to the product.

- The desk has been tested to meet ANSI/BIFMA safety standards.
- An anti-collision sensor is integrated to prevent damage or injury during height adjustments.
- The maximum weight capacity for the desktop is 200 pounds. Do not exceed this limit.
- Ensure proper assembly and use within the specified weight limits to avoid tipping or instability.

- Keep hands and objects clear of moving parts during operation.
- The power cord is 10 feet long and plugs into a standard wall outlet. Ensure the cord is not pinched or damaged.

3. ASSEMBLY INSTRUCTIONS

Detailed assembly instructions, including diagrams and a list of all components and hardware, are provided with your product packaging. Please refer to the enclosed manual for step-by-step guidance.

General Assembly Advice:

- Unpack all components and verify against the parts list before beginning assembly.
- Assemble the desk on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened.
- Two people are recommended for assembly due to the size and weight of the components.
- The desk includes two wire management grommets located in the back corners of the desktop. These have covers if not in use.



Image: A close-up view of one of the integrated wire management grommets on the desk surface, designed to help organize

4. OPERATING INSTRUCTIONS

The Move 60 Electric Height Adjustable Desk features an intuitive control panel for easy height adjustments and preset management.

Height Adjustment:

- To raise the desk, press and hold the 'Up' arrow button on the control panel.
- To lower the desk, press and hold the 'Down' arrow button on the control panel.
- The desk will move smoothly to the desired height within its operational range of 27 to 46.7 inches.

Programmable Presets:

The control panel includes four memory buttons to store your preferred seated and standing heights.

- **To Set a Preset:** Adjust the desk to your desired height. Press the 'M' button, then press one of the numbered preset buttons (1, 2, 3, or 4) within a few seconds. The display will confirm the setting.
- **To Use a Preset:** Press and **hold** the desired numbered preset button (1, 2, 3, or 4) until the desk reaches the stored height and stops. *Note: Unlike some other models, you must continue to hold the button for the desk to move to the preset height.*

Anti-Collision Sensor:

The desk is equipped with an anti-collision sensor. If the desk encounters an obstruction during upward or downward movement, it will automatically stop to prevent damage or injury.

Sedentary Alert:

You can set a custom alert to remind you when to change positions. Refer to the detailed product manual for specific instructions on setting and customizing this feature.



Image: A close-up of the desk's control panel, showing the digital display, up and down arrows, and four programmable preset buttons.

5. CARE AND MAINTENANCE

Proper care will ensure the longevity and appearance of your Bush Furniture Move 60 desk.

- **Cleaning:** Wipe the desk surface and base with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the laminate finish.
- **Spills:** Clean up spills immediately to prevent staining, especially on the laminate surface.
- **Inspection:** Periodically check all fasteners and connections to ensure they remain tight. Re-tighten if necessary.
- **Power Cord:** Ensure the power cord is not kinked, pinched, or placed under heavy objects.

6. TROUBLESHOOTING

If you encounter issues with your desk, refer to the following common solutions:

Problem	Possible Cause	Solution
Desk does not move.	Power cord disconnected; motor issue; control panel malfunction.	Check power connection. Ensure the power outlet is functional. If the issue persists, consult the full manual or contact customer support.
Desk stops unexpectedly during adjustment.	Anti-collision sensor activated; weight limit exceeded.	Check for obstructions under or above the desk. Reduce the load on the desk if it exceeds 200 lbs.
Preset button requires continuous holding.	This is a design feature of the Move 60 Series.	Continue to hold the preset button until the desk reaches the desired height. This is a safety mechanism.
Electronic devices experience interference.	Electromagnetic interference from the control unit.	If possible, reposition sensitive electronics away from the central underside of the desk where the control unit is located. Shielding with aluminum foil may help.

For further assistance, please refer to the complete product manual or contact Bush Furniture customer support.

7. PRODUCT SPECIFICATIONS

Brand:	Bush Furniture
Model Number:	M6S7230MRSK

Model Name:	Move 60
Product Dimensions (D x W x H):	29.37"D x 71.02"W x 47.69"H
Size:	72W x 30D
Color:	Mocha Cherry (Top), Silver Base
Top Material Type:	Engineered Wood (Thermally Fused Laminate)
Base Material:	Alloy Steel
Minimum Height:	27 Inches
Maximum Height:	46.7 Inches
Lifting Mechanism:	Electric
Maximum Weight Recommendation:	200 Pounds
Item Weight:	128 Pounds
UL Listed:	Yes
Required Assembly:	Yes

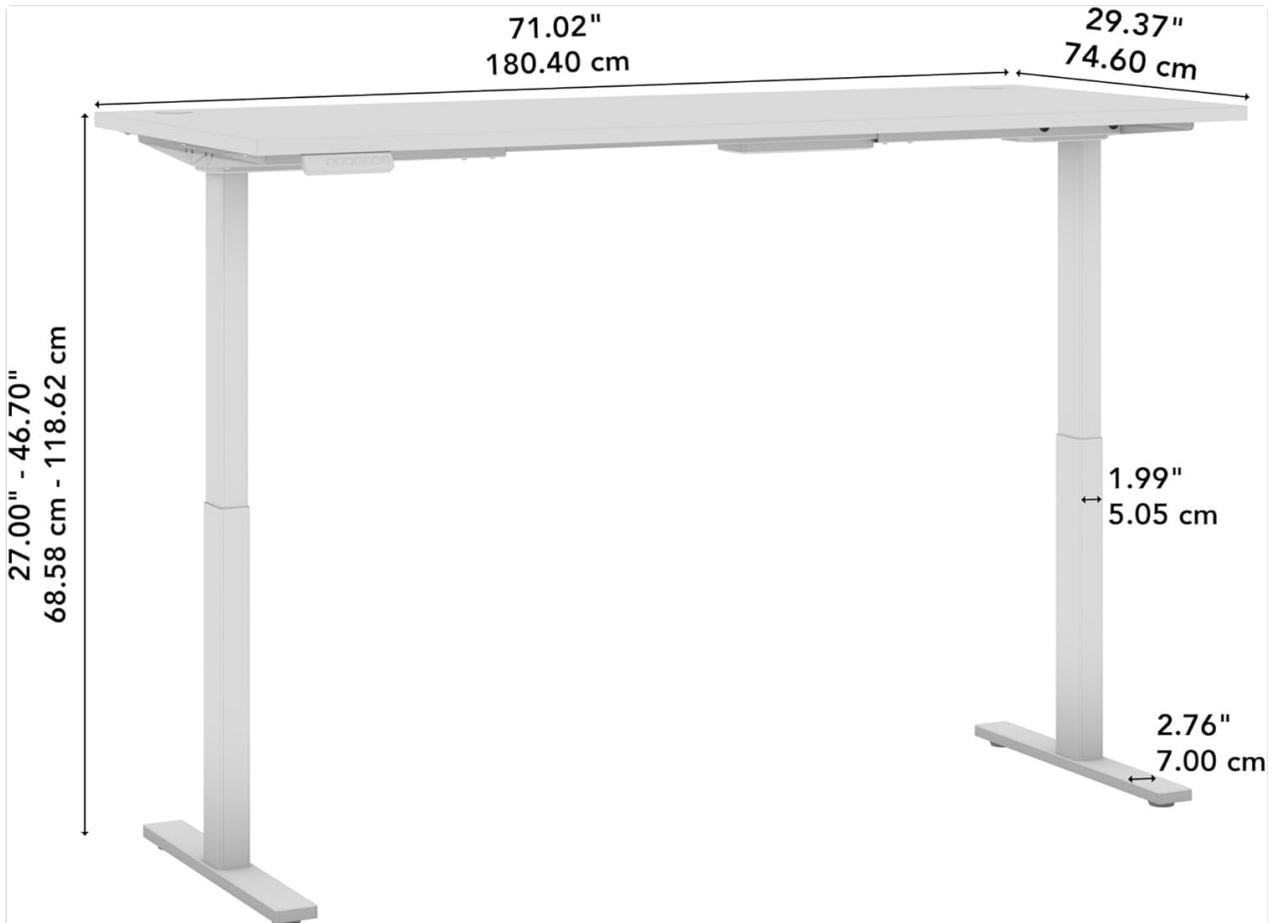


Image: A detailed diagram illustrating the dimensions of the desk, including its adjustable height range from 27.00" to 46.70" and desktop measurements of 71.02"W x 29.37"D.

8. WARRANTY INFORMATION

The Bush Furniture Move 60 Electric Height Adjustable Desk is backed by a **5 Year Manufacturer's Warranty**. This warranty covers defects in materials and workmanship under normal use.

For specific details regarding warranty coverage, claims, or to register your product, please refer to the warranty documentation included with your purchase or visit the official Bush Furniture website.