

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [GoWISE](#) /
- › [GoWISE USA 5.8-Quart Programmable 8-in-1 Air Fryer XL User Manual](#)

GoWISE GW22746

GoWISE USA 5.8-Quart Programmable 8-in-1 Air Fryer XL User Manual

INTRODUCTION

The GoWISE USA 5.8-Quart Programmable 8-in-1 Air Fryer XL is designed to provide a healthier and easier way to cook your favorite fried foods with little to no oil. Utilizing Rapid Air Circulation Technology, it ensures fast and even cooking by circulating hot air in all directions. This appliance features a user-friendly touchscreen interface with preset cooking programs and customizable temperature and time settings.



Figure 1: GoWISE USA 5.8-Quart Programmable 8-in-1 Air Fryer XL, showcasing its plum color and digital display.

SETUP

1. **Unpacking:** Carefully remove the air fryer and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the basket and crisper tray with warm, soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to

allow for proper air circulation. Ensure there is adequate space around the unit.

4. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Figure 2: Product dimensions for proper placement and storage. The unit measures approximately 13.5 inches in height, 12.5 inches in width, and 11.5 inches in depth.

OPERATING INSTRUCTIONS

The GoWISE USA Air Fryer features a digital touchscreen for easy operation. Follow these steps for cooking:

1. **Preparation:** Place food into the crisper tray and insert it into the air fryer basket. Ensure the basket is securely pushed into the main unit.

2. **Power On:** Press the power button on the touchscreen display to activate the unit.
3. **Select Preset or Manual Settings:**
 - **Preset Programs:** Choose from 8 built-in smart programs: Fries, Pork, Shrimp, Cake, Chicken, Steak, Fish, and Pizza. Select the appropriate icon on the display.
 - **Manual Adjustment:** Use the temperature (thermometer icon) and time (clock icon) arrows to adjust settings. Temperature can be set from 180°F to 400°F in 10-degree increments. The timer can be set for up to 30 minutes in 1-minute increments.
4. **Shake Reminder:** The air fryer includes a built-in alarm function that reminds you to shake or check your food at 5, 10, and 15-minute intervals during cooking. This ensures even crisping.
5. **Start Cooking:** Once settings are chosen, press the start/pause button to begin the cooking cycle.
6. **Monitoring:** You can pull out the basket at any time to check or shake food. The unit will pause and resume once the basket is reinserted.
7. **Completion:** The air fryer will beep when the cooking cycle is complete. Carefully remove the basket using the handle.



Figure 3: The spacious 5.8-quart basket, shown here containing cooked french fries, is designed for efficient air circulation.



Figure 4: The removable crisper tray inside the basket allows for easy separation of food from excess oil and simplifies cleaning.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your air fryer.

- **After Each Use:** Unplug the air fryer and allow it to cool completely before cleaning.
- **Basket and Crisper Tray:** These parts are non-stick and can be washed with warm, soapy water. Avoid using abrasive cleaning pads or metal utensils, as this can damage the non-stick coating. For easier cleanup, consider using parchment paper liners in the bottom of the basket.
- **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Interior:** Gently wipe the interior of the air fryer with a damp cloth to remove any food residue.

TROUBLESHOOTING

If you encounter any issues with your GoWISE USA Air Fryer, please refer to the following common solutions:

- **Appliance Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the basket is fully inserted into the main unit.
- **Food Not Cooked Evenly:** Ensure not to overfill the basket. Shake the basket or flip food halfway through the cooking process, especially for larger quantities or items like fries.
- **White Smoke from Appliance:** This may occur if there is excess oil or grease from food dripping into the bottom of the basket. Clean the basket and crisper tray thoroughly after each use.
- **Unusual Odor:** A slight odor may be present during the first few uses due to manufacturing residues. This should dissipate quickly. Ensure proper ventilation.

For more detailed troubleshooting or persistent issues, please consult the full PDF user manual or contact GoWISE USA customer support.

SPECIFICATIONS

Feature	Specification
Product Dimensions	13.5 x 12.5 x 11.5 inches
Item Weight	16.02 pounds
Manufacturer	GoWISE USA
ASIN	B0777TGG94
Item Model Number	GW22746
Temperature Range	180°F - 400°F
Timer	Up to 30 minutes

WARRANTY AND SUPPORT

GoWISE USA stands behind its products. All GoWISE USA products come with a 30-day money-back guarantee and 1-year of support from GoWISE customer care. Registered products receive an additional 60 days of coverage.

For comprehensive information, including detailed instructions, recipes, and safety guidelines, please refer to the official User Manual PDF available at: [GoWISE USA Air Fryer User Manual \(PDF\)](#).

For customer support inquiries, please visit the [GoWISE Store on Amazon](#) or contact their customer care directly.