

[manuals.plus](#) /› [Ematic](#) /› **Ematic AT103B Remote Control Instruction Manual for Digital Converter Boxes**

## Ematic AT103B

# Ematic AT103B Remote Control Instruction Manual


For Ematic Digital Converter Boxes

## 1. INTRODUCTION

This manual provides comprehensive instructions for the Ematic AT103B Remote Control. It covers setup, operation, and basic troubleshooting to ensure optimal use with your Ematic digital converter box. Please read this manual thoroughly before operating the remote control.

## 2. PRODUCT OVERVIEW

The Ematic AT103B is a dedicated remote control designed for Ematic digital converter boxes. It provides all necessary functions to navigate menus, change channels, adjust volume, and control media playback on your compatible device.

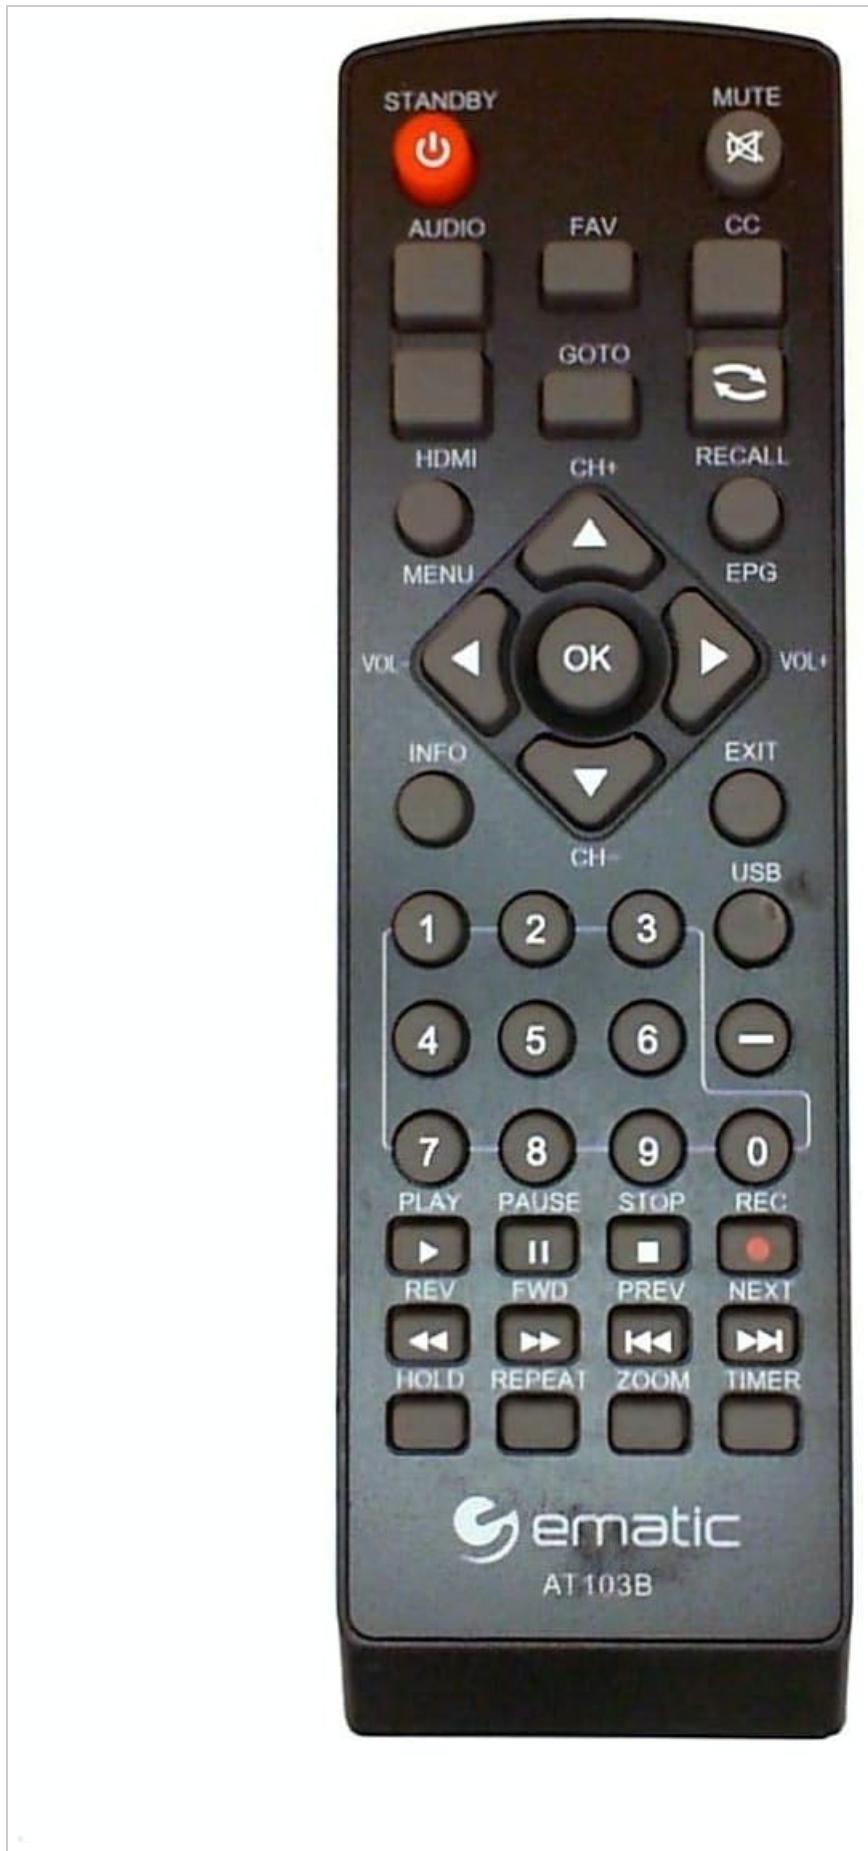

**Figure 2.1:** Ematic AT103B Remote Control. This image displays the full remote control, featuring a black body with gray buttons. Key buttons include Power (red), Mute, Audio, Channel Up/Down, Volume Up/Down, Numeric keypad, and media playback controls.

## 2.1 Button Layout and Functions

Familiarize yourself with the remote control's buttons and their primary functions:

- **STANDBY (Red Button):** Powers the converter box on or off.
- **MUTE:** Toggles audio mute on or off.
- **AUDIO:** Selects audio tracks or modes.
- **FAV:** Accesses favorite channels list.
- **CC (Closed Captioning):** Toggles closed captions on or off.
- **GOTO:** Jumps to a specific time in media playback.
- **RECALL:** Switches between the current and previously viewed channel.
- **HDMI:** Selects HDMI input (if applicable to the converter box).
- **CH+ / CH-:** Changes channels up or down.
- **MENU:** Opens the main menu of the converter box.
- **EPG (Electronic Program Guide):** Displays the program guide.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms selections or enters sub-menus.
- **VOL+ / VOL-:** Adjusts volume up or down.
- **INFO:** Displays program information.
- **EXIT:** Exits current menu or screen.
- **USB:** Accesses USB media playback functions.
- **Numeric Keypad (0-9):** Directly enters channel numbers.
- **PLAY, PAUSE, STOP, REC:** Media playback controls.
- **REV (Rewind), FWD (Fast Forward), PREV (Previous), NEXT (Next):** Media navigation controls.
- **HOLD, REPEAT, ZOOM, TIMER:** Additional function buttons for media or system settings.

## 3. SETUP

---

### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

**Note:** Always replace both batteries at the same time. Do not mix old and new batteries or different types of batteries. Remove batteries if the remote will not be used for an extended period.

## 4. OPERATING INSTRUCTIONS

---

To operate the Ematic AT103B remote control, point it directly at the infrared sensor on your Ematic digital converter box. Ensure there are no obstructions between the remote and the converter box.

### 4.1 Basic Functions

- **Power On/Off:** Press the **STANDBY** button once.
- **Channel Selection:** Use **CH+** or **CH-** to browse channels sequentially, or use the **Numeric Keypad (0-9)** to enter a specific channel number.
- **Volume Adjustment:** Press **VOL+** to increase volume and **VOL-** to decrease volume.
- **Mute Audio:** Press the **MUTE** button to temporarily silence the audio. Press again to restore.

## 4.2 Menu Navigation

- Press  **MENU** to access the main system menu.
- Use the **Navigation Buttons (Up, Down, Left, Right)** to move through menu options.
- Press **OK** to select a highlighted option or confirm a setting.
- Press  **EXIT** to leave the current menu or return to the previous screen.

## 4.3 Media Playback Controls

When viewing media from a USB device or recorded content:

- Press **PLAY** to start playback.
- Press **PAUSE** to temporarily stop playback. Press again to resume.
- Press **STOP** to end playback.
- Press **REC** to begin recording (if supported by the converter box and storage is available).
- Use **REV** (rewind) and **FWD** (fast forward) to navigate through media.
- Use **PREV** and **NEXT** to skip to previous or next tracks/chapters.

## 5. MAINTENANCE

### 5.1 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals, abrasive cleaners, or allow liquids to enter the remote control.

### 5.2 Battery Care

If the remote control becomes unresponsive or its range decreases, replace the batteries. Always dispose of used batteries according to local regulations. Do not expose batteries to excessive heat or direct sunlight.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and converter box. Remote out of range.	Replace batteries, ensuring correct polarity. Remove any objects blocking the signal path. Move closer to the converter box.
Buttons are sticky or unresponsive.	Dirt or debris under buttons.	Clean the remote control as described in the Maintenance section.
Remote controls other devices.	Infrared interference from other remotes.	Ensure you are pointing the remote directly at the Ematic converter box and not other devices.

## 7. SPECIFICATIONS

- **Model Number:** AT103B
- **Brand:** Ematic
- **Compatible Devices:** Ematic Digital Converter Box
- **Power Source:** 2 x AA Batteries (not included)

- **Color:** Black
- **Special Feature:** Lightweight design
- **Item Weight:** 1.3 pounds
- **Max Number of Supported Devices:** 1 (Dedicated to Ematic converter boxes)

## 8. WARRANTY AND SUPPORT

---

For warranty information or technical support regarding your Ematic AT103B Remote Control, please refer to the documentation provided with your Ematic digital converter box or visit the official Ematic website for customer service contact details.