

[Manuals.plus](#) /

› [VINABTY](#) /

› VINABTY XRT122 Remote Control Instruction Manual for VIZIO TVs

VINABTY XRT122

VINABTY XRT122 Remote Control Instruction Manual

Replacement Remote for VIZIO TVs

1. PRODUCT OVERVIEW

The VINABTY XRT122 is a replacement remote control designed for various VIZIO TV models. It provides full functionality without the need for complex programming.



Image 1.1: Front and back view of the VINABTY XRT122 remote control. The front shows various control buttons, while the back is smooth with a slight indentation for grip.

1.97inch

6.5inch



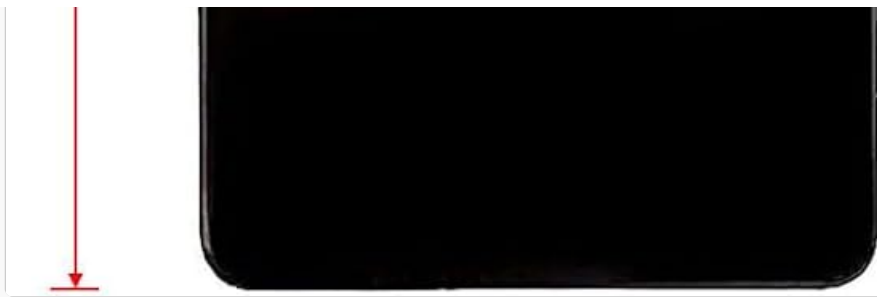


Image 1.2: The VINABTY XRT122 remote control displaying its approximate dimensions: 6.5 inches in length and 1.97 inches in width.

2. SETUP AND INSTALLATION

This remote control is designed for immediate use with compatible VIZIO TV models. No programming or pairing is required.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Once batteries are installed, the remote is ready for operation.

2.2 Compatible VIZIO TV Models

The XRT122 remote control is compatible with a wide range of VIZIO TV models, including but not limited to:

New XRT122 Replace Remote Control fit for VIZIO TV:

D24-D1	D24H-E1	D28H-D1	D32-D1	D32F-E1	D32H-D1
D40-D1	D40F-E1	D40U-D1	D43-D1	D43-D2	D43-E2
D48F-E0	D48F-EL	D50-D1	D50-E1	D50F-E1	D50U-D1
D55F-E2	D55U-D1	D58U-D3	D60-D3	D65-D2	D65-E0
E40-C2	E40X-C2	E43-C2	E48-C2	E50-C1	E55-C1
D32X-D1	D39F-E1	D39H-D0	E32H-C1	E65X-C2	E70-C3
D43F-E1	D43F-E2	D48-D0	D65U-D2	D70-D3	E32-C1
D55-D2	D55-E0	D55F-E0	E55-C2	E60-C3	E65-C3

Image 2.1: The XRT122 remote control displayed alongside a comprehensive list of compatible VIZIO TV models, including various D-series and E-series televisions.

- D24-D1, D24H-E1, D28H-D1, D32-D1, D32F-E1, D32H-D1, D32X-D1

- D39F-E1, D39H-D0, D40-D1, D40F-E1, D40U-D1, D43-D1, D43-D2, D43-E2, D43F-E1, D43F-E2
- D48-D0, D48F-E0, D48F-EL, D50-D1, D50-E1, D50F-E1, D50U-D1, D55-D2, D55-E0, D55F-E0, D55F-E2, D55U-D1
- D58U-D3, D60-D3, D65-D2, D65-E0, D65U-D2, D70-D3
- E32-C1, E32H-C1, E40-C2, E40X-C2, E43-C2, E48-C2, E50-C1, E55-C1, E55-C2, E60-C3, E65-C3, E65X-C2, E70-C3

3. OPERATING INSTRUCTIONS

The XRT122 remote control utilizes infrared technology to communicate with your VIZIO TV. Ensure a clear line of sight between the remote and the TV's infrared receiver for optimal performance. The maximum effective range is approximately 33 feet.

3.1 Button Functions

Refer to the image below for a visual guide to the remote's buttons and their general functions:



Image 3.1: The VINABTY XRT122 remote control shown in an operational context, positioned in front of a VIZIO television screen.

- **Power Button ():** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Xumo, NTFX, iHeartRadio Buttons:** Direct access buttons for specific streaming applications.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record):** Controls media playback.
- **CC (Closed Captioning):** Toggles closed captions on or off.
- **MENU:** Accesses the TV's main menu.
- **EXIT:** Exits current menu or application.
- **INFO:** Displays information about the current program or input.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **BACK:** Returns to the previous screen or menu.
- **GUIDE:** Opens the electronic program guide (if available).
- **VOL +/-:** Adjusts the volume level.

- **CH +/-:** Changes the channel.
- **Mute Button:** Mutes or unmutes the TV audio.
- **PIC (Picture Mode):** Cycles through picture modes.
- **Number Pad (0-9, ENTER, -):** Direct channel entry and other numerical inputs.

The remote is designed for a comfortable grip and responsive button presses, ensuring reliable operation.

Your browser does not support the video tag.

Video 3.1: A short demonstration video showcasing the VINABTY XRT122 remote control from various angles, highlighting its design and button layout.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes inconsistent or stops working. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries or different battery types.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, which can damage the remote's electronics.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh AAA batteries are correctly installed.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Verify that the remote is pointed directly at the TV.
 - Confirm your TV model is listed as compatible.
- **Specific buttons not working:**
 - Clean the remote surface and buttons to ensure no debris is interfering with button presses.
 - If only certain buttons fail, and batteries are new, the remote may be faulty and require replacement.

6. SPECIFICATIONS

Brand	VINABTY
Model Name	XRT122
Model Number	XRT122
Connectivity Technology	Infrared
Compatible Devices	Television (Various VIZIO models)
Battery Type	2 x AAA Alkaline batteries (not included)
Button Quantity	30

Maximum Range	33 feet (approx. 10 meters)
Item Weight	70 g (approx. 2.47 oz)
Item Dimensions (L x W x H)	5"L x 1.9"W x 0.5"H (approx. 12.7cm x 4.8cm x 1.3cm)

7. WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your purchase or contact the retailer. For further assistance or technical support, please reach out to the product manufacturer or seller.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question