

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Electrolux](#) /

› Electrolux ESPC71DB SilentPerformer Cyclonic Bagless Canister Vacuum Cleaner User Manual

Electrolux ESPC71DB

Electrolux ESPC71DB SilentPerformer Cyclonic Bagless Canister Vacuum Cleaner

User Manual

1. PRODUCT OVERVIEW

The Electrolux ESPC71DB SilentPerformer Cyclonic is a bagless canister vacuum cleaner designed for efficient cleaning on various surfaces, including hard floors and carpets. It features cyclonic technology for consistent suction power and a quiet operation.



An image showing the Electrolux ESPC71DB SilentPerformer Cyclonic Bagless Vacuum Cleaner in deep blue, featuring its transparent dustbin and ergonomic handle.

2. SAFETY INSTRUCTIONS

Before using the appliance, read all safety instructions carefully. Keep this manual for future reference.

- Ensure the voltage indicated on the vacuum cleaner matches your local mains voltage before connecting.
- Do not use the vacuum cleaner to pick up water, wet materials, hot ashes, or sharp objects.
- Always unplug the appliance from the power outlet before cleaning or performing maintenance.
- Do not operate the vacuum cleaner if the power cord is damaged. Contact authorized service personnel for repair.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- This appliance is for household use only.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Electrolux ESPC71DB Vacuum Cleaner Unit
- User Manual
- Operating Instructions
- Hose and attachments (specific attachments may vary by model)

4. SETUP

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Attaching the Hose:** Insert the hose end into the suction inlet on the main unit until it clicks securely into place.
3. **Connecting the Telescopic Tube and Nozzle:** Attach the telescopic tube to the hose handle. Then, connect the desired cleaning nozzle (e.g., floor nozzle) to the end of the telescopic tube.
4. **Power Cord:** Pull out the power cord to the desired length. The yellow mark indicates the maximum recommended length, and the red mark indicates the maximum length.

5. OPERATING INSTRUCTIONS

1. **Power On/Off:** Plug the power cord into a suitable electrical outlet. Press the On/Off button (often marked with **I/O**) on the main unit to start or stop the vacuum cleaner.
2. **Adjusting Suction Power:** The vacuum cleaner may feature a power control dial or buttons to adjust suction power. Select the appropriate power level for the surface you are cleaning. For delicate surfaces, use lower power; for carpets or heavily soiled areas, use higher power. This model has 3 power levels.
3. **Surface Recommendation:** Use on hard floors and carpets. Adjust the floor nozzle setting if applicable (e.g., brush up for hard floors, brush down for carpets).
4. **Using Attachments:** For specific cleaning tasks, detach the main floor nozzle and attach the appropriate accessory (e.g., crevice tool for narrow spaces, upholstery tool for furniture).
5. **Cord Rewind:** After use, unplug the vacuum cleaner. Press the cord rewind button (often marked with a cord symbol) to automatically retract the power cord.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

6.1. Emptying the Dustbin

1. **Disconnect Power:** Always unplug the vacuum cleaner before emptying the dustbin.
2. **Remove Dustbin:** Locate the dustbin release button or lever, usually on the top or side of the main unit. Press it to detach the dustbin.
3. **Empty Contents:** Hold the dustbin over a waste bin and open the bottom flap to empty the collected dirt and debris.
4. **Reattach Dustbin:** Close the flap and securely reattach the dustbin to the vacuum cleaner until it clicks into place.

6.2. Cleaning Filters

The ESPC71DB uses a cyclonic filter system. Refer to the specific instructions in your included operating instructions for detailed filter cleaning procedures. Generally, filters should be cleaned regularly (e.g., after every 5-10 uses) and replaced annually or as needed.

- **Pre-Motor Filter:** This filter protects the motor. It can usually be rinsed under cold running water. Ensure it is completely dry before reinserting.

- **Exhaust Filter (HEPA filter, if applicable):** This filter cleans the air expelled from the vacuum. Some are washable, others need replacement. Check your specific model's instructions.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not start.	No power supply.	Check if the plug is securely inserted into the outlet. Check the circuit breaker.
Low suction power.	Dustbin full, filters clogged, or blockage in hose/nozzle.	Empty the dustbin. Clean or replace filters. Check hose and nozzle for obstructions.
Unusual noise.	Blockage or foreign object in the brush roll/hose.	Turn off and unplug. Inspect brush roll and hose for obstructions and remove them.
Overheating.	Clogged filters or dustbin.	Turn off and unplug. Empty dustbin and clean filters. Allow to cool for 30 minutes before restarting.

8. SPECIFICATIONS

Model Number	ESPC71DB
Brand	Electrolux
Special Feature	Bagless, Cyclonic
Filter Type	Cyclon
Surface Recommendation	Hard Floor, Carpet
Power Source	Corded Electric
Voltage	220 Volts
Wattage	650 Watts
Noise Level	72 Decibels
Dimensions (L x W x H)	24 x 69 x 2.5 cm
Weight	8.02 kilograms
Number of Power Levels	3

Note: The product specifications indicate it is not wireless and provides voltage/wattage, suggesting it is a corded electric appliance.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Electrolux website. Keep your proof of purchase for any warranty claims.
For further assistance, contact Electrolux customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0778PY7WY>

More documents and user manuals: <https://manuals.plus/>