

[manuals.plus](#) /

› [Domo](#) /

› [DOMO DO9142EK Stainless Steel Egg Cooker User Manual](#)

**Domo DO9142EK**

# **DOMO DO9142EK Stainless Steel Egg Cooker User Manual**

Model: DO9142EK | Brand: DOMO

## **INTRODUCTION**

Thank you for purchasing the DOMO DO9142EK Stainless Steel Egg Cooker. This appliance is designed to cook up to 7 eggs simultaneously, offering various doneness levels from soft-boiled to hard-boiled. Please read this instruction manual carefully before using the appliance to ensure safe and efficient operation. Keep this manual for future reference.



Image: The DOMO DO9142EK Egg Cooker on a kitchen counter, surrounded by fresh eggs and spring onions, with deviled eggs on a cutting board.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before use.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Always ensure the lid is properly closed during operation.
- **Caution:** The heating plate and steam will be hot during and after operation. Avoid direct contact.

## PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your DOMO DO9142EK Egg Cooker:

1. Transparent Lid
2. Egg Holder (for up to 7 eggs)
3. Heating Plate
4. Base Unit with Control Knob and On/Off Switch
5. Measuring Cup with Integrated Egg Piercer



Image: All components of the DOMO DO9142EK Egg Cooker laid out, including the stainless steel base, black egg tray, transparent lid, and measuring cup with egg piercer.

## SETUP

1. **Unpack:** Carefully remove all packaging materials and ensure all components are present.
2. **Clean:** Before first use, wash the transparent lid, egg holder, and measuring cup in warm, soapy water. Rinse thoroughly and dry. Wipe the heating plate with a damp cloth. Do not immerse the base unit in water.
3. **Placement:** Place the egg cooker on a stable, flat, heat-resistant surface, away from water sources and other heat-generating appliances.

## OPERATING INSTRUCTIONS

Follow these steps for perfect eggs:

1. **Prepare Eggs:** Using the integrated egg piercer on the bottom of the measuring cup, carefully pierce a small hole in the larger end of each egg. This helps prevent cracking during cooking.
2. **Add Water:** Use the measuring cup to add the appropriate amount of water to the heating plate. The amount of water determines the doneness of the eggs (soft, medium, or hard). Refer to the markings on the measuring cup for guidance. The water reservoir capacity is 100 ml.
3. **Place Eggs:** Place the egg holder onto the heating plate. Position up to 7 pierced eggs into the egg holder.
4. **Cover:** Place the transparent lid securely over the egg holder and base unit.
5. **Select Doneness:** Turn the control knob to your desired doneness setting (soft, medium, or hard). The appliance features a timer for these settings.
6. **Start Cooking:** Plug the appliance into a suitable power outlet. Press the On/Off switch. The indicator light will illuminate, signaling that the cooking process has begun.
7. **Audible Signal:** Once the water has evaporated and the eggs are cooked to the selected doneness, an audible signal will sound, and the appliance will automatically shut off.
8. **Remove Eggs:** Carefully unplug the appliance. Using oven mitts or a cloth, remove the transparent lid. Be cautious of hot steam. Lift the egg holder by its handles and immediately rinse the eggs under cold water to stop the cooking process and make them easier to peel.



Image: A detailed view of the control knob and on/off switch on the DOMO DO9142EK Egg Cooker, used for selecting doneness and starting the cooking cycle.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the life of your egg cooker.

- 1. Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- 2. Lid, Egg Holder, Measuring Cup:** These parts can be washed in warm, soapy water. Rinse thoroughly and dry completely. They are not dishwasher safe.
- 3. Heating Plate:** Wipe the heating plate with a damp cloth. For stubborn residue or mineral deposits (limescale), you can use a small amount of white vinegar or a descaling solution specifically designed for kitchen appliances. After applying, wipe clean with a damp cloth and dry thoroughly. Do not use abrasive cleaners or scouring pads.
- 4. Base Unit:** Wipe the exterior of the base unit with a soft, damp cloth. Never immerse the base unit in water or any other liquid.
- 5. Storage:** Store the cleaned and dried appliance in a cool, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power switch not pressed.	Ensure the appliance is securely plugged into a working outlet and the On/Off switch is pressed.
Eggs are not cooked to desired doneness.	Incorrect water amount; incorrect doneness setting.	Refer to the measuring cup markings for the correct water level for your desired doneness. Ensure the control knob is set correctly.
Eggs crack during cooking.	Eggs not pierced; cold eggs used directly from refrigerator.	Always pierce a small hole in the larger end of each egg before cooking. Allow eggs to reach room temperature before cooking for best results.
Mineral deposits on heating plate.	Hard water usage.	Clean the heating plate with white vinegar or a descaling solution as described in the Maintenance section.

## SPECIFICATIONS

**Model:** DO9142EK

**Brand:** DOMO

**Material:** Stainless Steel Housing

**Color:** Black/White

**Power:** 400 W

**Capacity:** Up to 7 eggs

**Water Reservoir Capacity:** 100 ml

**Dimensions (L x W x H):** 19 x 19 x 17 cm (approx.)

**Weight:** 720 g (approx.)

**Cord Length:** 90 cm

**Features:** On/Off switch with indicator light, Audible signal, Automatic shut-off, Measuring cup with egg piercer.

## WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact DOMO customer service directly. Keep your proof of purchase for warranty claims.

**Manufacturer:** Linea2000

**Country of Origin:** China

