

[Manuals.plus](#) /

› [Multilaser](#) /

› Multilaser Air Fryer 4 Liters 1500W CE021 Instruction Manual

Multilaser CE021

Multilaser Air Fryer 4 Liters 1500W CE021 Instruction Manual

Model: CE021 | Brand: Multilaser

INTRODUCTION

Thank you for choosing the Multilaser Air Fryer CE021. This appliance is designed to prepare a variety of healthy and delicious meals using hot air circulation, reducing the need for oil. Please read this manual carefully before use to ensure safe and optimal operation.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance and its cord out of reach of children.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Always unplug the appliance after use and before cleaning.
- The outer surfaces may become hot during use. Do not touch hot surfaces directly. Use the cool-touch handle.
- This appliance is intended for household use only.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Multilaser Air Fryer.



Image 1: Front view of the Multilaser Air Fryer CE021, showcasing its sleek black design and silver control panel with temperature and timer knobs.

- **Temperature Control Knob:** Adjusts cooking temperature up to 200°C.
- **Timer Knob:** Sets cooking time up to 60 minutes with automatic shut-off and audible alert.
- **Power Indicator Light:** Illuminates when the appliance is powered on and heating.
- **Frying Basket:** 4-liter capacity, non-stick, and removable for easy cleaning.
- **Cool-Touch Handle:** Ensures safe handling of the frying basket.
- **Non-Slip Feet:** Provides stability during operation.

SETUP

1. **Unpacking:** Carefully remove the air fryer and all packaging materials.
2. **Cleaning:** Before first use, clean the frying basket and pan with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth.
3. **Placement:** Place the air fryer on a stable, horizontal, and level surface. Ensure there is at least 10 cm of free space

around the appliance for proper ventilation.

4. **Power Connection:** Plug the power cord into a grounded wall outlet. Ensure the voltage matches the appliance's requirements (110 Volts for this model).

OPERATING INSTRUCTIONS

Preheating

1. Pull the frying basket out of the appliance using the cool-touch handle.
2. Place food into the basket. Do not overfill.
3. Slide the frying basket back into the air fryer.
4. Turn the temperature control knob to the desired temperature (e.g., 180°C).
5. Turn the timer knob to 3-5 minutes for preheating. The power indicator light will illuminate.
6. Once preheating is complete, the timer will ring.

Cooking

1. After preheating, or if not preheating, place food in the basket.
2. Set the desired temperature using the temperature control knob (up to 200°C).
3. Set the desired cooking time using the timer knob (up to 60 minutes).
4. The power indicator light will turn on, indicating the appliance is heating.
5. For even cooking, shake the basket halfway through the cooking time for certain foods (e.g., fries). To do this, pull out the basket, shake it, and slide it back in. The air fryer will resume cooking.
6. When the set cooking time has elapsed, the timer will ring, and the appliance will automatically shut off.
7. Carefully pull out the basket and remove the cooked food.



Image 2: The Multilaser Air Fryer with its non-stick frying basket pulled out, ready for food placement or removal.



Image 3: The Multilaser Air Fryer with the frying basket containing golden, crispy food, demonstrating its cooking capability.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Unplug:** Always unplug the appliance and allow it to cool down completely before cleaning.
2. **Basket and Pan:** The frying basket and pan are non-stick and removable. They can be cleaned with hot water, dish soap, and a non-abrasive sponge. For stubborn food residues, soak them in hot water for about 10 minutes.
3. **Interior:** Wipe the interior of the appliance with a damp cloth. Do not use abrasive cleaners or steel wool.
4. **Exterior:** Clean the exterior with a damp cloth.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; Timer not set; Power outage.	Ensure the plug is securely in the outlet; Set the timer to the desired cooking time; Check your household's power supply.
Food is not cooked evenly.	Basket is overfilled; Food not shaken.	Do not overfill the basket; Shake the basket halfway through cooking for smaller items.
White smoke comes from the appliance.	Grease residue from previous use; Fatty food being cooked.	Clean the basket and pan thoroughly after each use; For very fatty foods, a small amount of smoke is normal.

Problem	Possible Cause	Solution
Food is not crispy.	Temperature too low; Cooking time too short; Food not suitable for air frying.	Increase temperature or cooking time; Ensure food is dry before cooking; Lightly brush with oil for extra crispiness.

SPECIFICATIONS

- **Model:** CE021
- **Brand:** Multilaser
- **Capacity:** 4 Liters
- **Power Output:** 1500 Watts
- **Voltage:** 110 Volts
- **Material:** Metal and Plastic
- **Color:** Black
- **Dimensions (P x L x A):** 32P x 32L x 30A centimeters (approx. 32cm Depth x 32cm Width x 30cm Height)
- **Item Weight:** 3860 Grams
- **Special Features:** Temperature Control (up to 200°C), 60-minute Timer with automatic shut-off, Non-stick coating, Cool-touch handle, Non-slip feet.



Image 4: Diagram illustrating the dimensions of the Multilaser Air Fryer CE021, showing its height, width, and depth.

WARRANTY AND SUPPORT

This Multilaser Air Fryer CE021 comes with a **6-month manufacturer's warranty**. For warranty claims, technical support, or service inquiries, please contact Multilaser customer service. Keep your purchase receipt as proof of purchase.

For more information, visit the official Multilaser website: www.multilaser.com.br

