

Manuals.plus /

› Smoby /

› Smoby Playhouse on Stilts with Slide - Model 7600810800 User Manual

## Smoby 7600810800

# Smoby Playhouse on Stilts with Slide

Model: 7600810800

## INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your Smoby Playhouse on Stilts with Slide. Please read these instructions carefully before assembly and retain them for future reference.

The Smoby Playhouse on Stilts is designed to provide a fun and imaginative play environment for children, featuring a raised platform, a slide, and a ladder.

## SAFETY INFORMATION

- **Age Recommendation:** Suitable for children aged 24 months and older.
- **Adult Supervision:** This product must be used under direct adult supervision at all times.
- **Outdoor Use Only:** Designed for outdoor use in a safe, level area.
- **Clearance:** Ensure adequate clear space around the playhouse and slide to prevent injuries.
- **Inspection:** Regularly inspect all components for wear, damage, or loose parts. Tighten fasteners as needed.
- **Weather Conditions:** Do not use the playhouse during strong winds, heavy rain, or other adverse weather conditions.

**Warning: To be used under the direct supervision of an adult.**

## PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged:

- 1 x Playhouse structure (walls, roof)
- 1 x Elevated platform (70 cm high)
- 1 x Slide

- 1 x Ladder
- 1 x Gate
- 1 x Porthole window
- 2 x Windows with sliding shutters
- All necessary fasteners and small parts



Image: Complete Smoby Playhouse on Stilts with Slide.

## ASSEMBLY INSTRUCTIONS

Assembly is required for this product. It is recommended that two adults perform the assembly. Please follow the detailed instructions provided in the separate assembly guide included with your product. The process typically takes a few hours.

### Recommended Tools (not included):

- Drill with a 5mm bit
- Electric screwdriver (for faster assembly)
- Coin (e.g., 2 Euro or 50 Cent coin) for certain fasteners
- Cutter (to remove any plastic burrs)

### General Steps:

1. Unpack all components and verify against the package contents list.
2. Assemble the base structure and elevated platform according to the diagrams.
3. Attach the playhouse walls and roof.
4. Install the ladder, slide, gate, and windows.
5. Ensure all screws and fasteners are securely tightened.

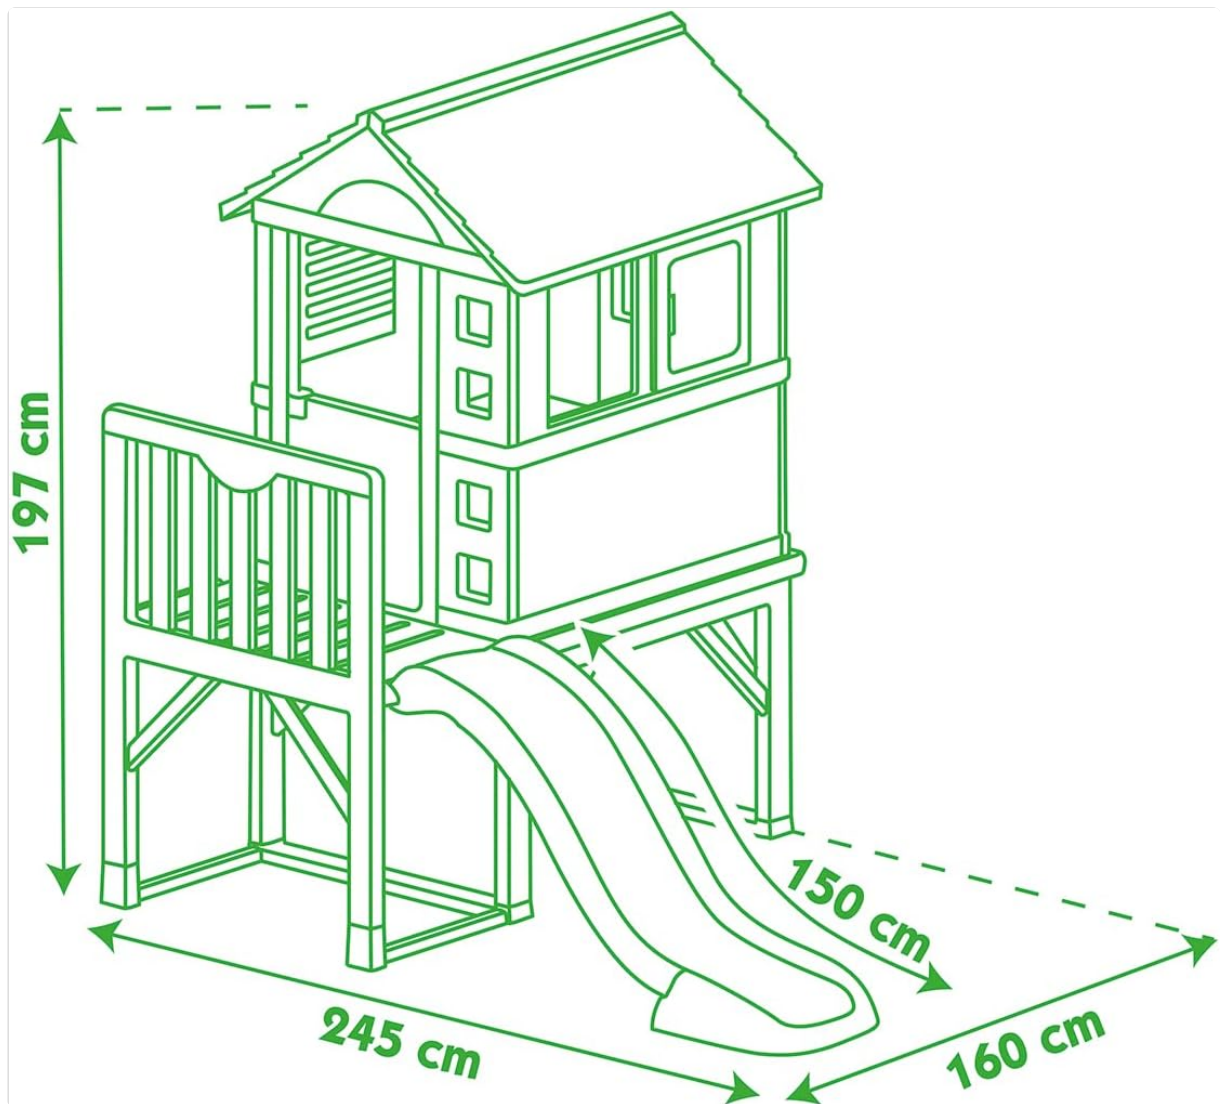


Image: Dimensional diagram of the playhouse.

## OPERATING INSTRUCTIONS

The Smoby Playhouse on Stilts offers various play opportunities:

- **Access:** Children can access the elevated playhouse via the sturdy ladder.
- **Slide Use:** The slide provides a fun exit from the platform. Ensure children slide feet first and one at a time.
- **Playhouse Features:** The playhouse includes a gate, a porthole, and two windows with sliding shutters for interactive play.
- **Underneath Area:** The space beneath the elevated platform can be used for shaded play, reading, or storage.
- **Water Feature (Optional):** The slide may include a connection point for a hose to create a water slide. Follow instructions for water connection if applicable.



Image: Children enjoying the playhouse and slide.



Image: Child using the slide.



Image: Detail of the slide with water connection point.

## MAINTENANCE

---

- **Cleaning:** Clean the playhouse regularly with mild soap and water. Avoid abrasive cleaners.
- **UV Treatment:** The plastic components are treated with anti-UV protection to preserve colors over time. However, prolonged exposure to direct sunlight may still cause some fading.
- **Seasonal Storage:** During winter months or periods of non-use, consider covering the playhouse or disassembling it for storage to extend its lifespan.
- **Fasteners:** Periodically check all screws and connections to ensure they remain tight and secure.

## TROUBLESHOOTING

---

- **Instability:** If the playhouse feels unstable, re-check all connections and ensure it is placed on a flat, level surface.
- **Parts Not Fitting:** Refer to the assembly guide diagrams. Ensure you are using the correct parts for each step and that they are oriented correctly. Do not force parts together.
- **Missing Parts:** If any parts are missing upon unpacking, contact Smoby customer support immediately.

## SPECIFICATIONS

---

<b>Brand</b>	Smoby
<b>Model Number</b>	7600810800
<b>Product Dimensions (L x W x H)</b>	245 x 160 x 197 cm
<b>Item Weight</b>	37.1 kg
<b>Material</b>	100% Plastic (with anti-UV treatment)
<b>Recommended Age</b>	24 months and up
<b>Assembly Required</b>	Yes

## WARRANTY AND SUPPORT

---

For warranty information, product support, or to order replacement parts, please refer to the contact details provided on the product packaging or visit the official Smoby website.

Keep your proof of purchase for any warranty claims.