

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Kichler](#) /

> [Kichler 4D Series Cabinet Puck \(Model 4D12V30WHT\) Instruction Manual](#)

Kichler 4D12V30WHT

Kichler 4D Series Cabinet Puck (Model 4D12V30WHT) Instruction Manual

1-Light LED 4 Watts, Textured White

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Kichler 4D Series Cabinet Puck, Model 4D12V30WHT. This compact, low-voltage LED light is designed to create accent lighting within glass-faced cabinets or above small niche spaces. Please read these instructions thoroughly before beginning installation or use.

IMPORTANT SAFETY INFORMATION

- Always disconnect power at the fuse or circuit breaker before installation or servicing.
- Consult a qualified electrician if you are unsure about the installation process.
- This product is designed for 12V DC systems only. Do not connect to 120V AC.
- Ensure all electrical connections are made in accordance with local codes and ordinances.
- Do not modify the fixture or its components.
- This fixture is Damp Rated, suitable for use in locations subject to moderate degrees of moisture, such as bathrooms or covered outdoor areas. However, it is not suitable for direct water exposure.

WHAT'S INCLUDED

Verify that all components are present before beginning installation.

- Kichler 4D Series Cabinet Puck (Model 4D12V30WHT)
- Mounting Hardware
- Instruction Manual (this document)



Image: The Kichler 4D Series Cabinet Puck in Textured White finish. This image shows the compact, circular design of the LED light fixture.

SETUP AND INSTALLATION

The Kichler 4D Series Cabinet Puck can be installed as either a recessed or surface-mounted fixture. It requires a Kichler 12V power supply (sold separately) for operation.

Tools Required (Not Included):

- Screwdriver
- Drill (for recessed mounting or pilot holes)
- Wire Strippers
- Measuring Tape

Installation Steps:

1. **Turn Off Power:** Before starting, ensure the power to the installation area is turned off at the circuit breaker or fuse box.
2. **Choose Mounting Method:**
 - **Surface Mount:** Position the fixture in the desired location. Mark the screw holes. Drill pilot holes if necessary. Secure the fixture using the provided mounting screws.
 - **Recessed Mount:** For recessed installation, a cutout of appropriate diameter (refer to specifications for exact dimensions) is required. Ensure there is sufficient clearance behind the mounting surface. Insert the fixture into the cutout and secure it according to the specific recessed mounting mechanism (e.g., spring clips, if included).
3. **Wire Connections:** Connect the fixture's low-voltage wires to your Kichler 12V power supply. Ensure polarity is correct (positive to positive, negative to negative). Use appropriate wire connectors.
4. **Secure Wiring:** Route and secure all wiring to prevent pinching or damage.
5. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker.



Image: An example of the Kichler 4D Series Cabinet Puck installed under a cabinet, demonstrating its low-profile design and integrated lighting.

OPERATING INSTRUCTIONS

The Kichler 4D Series Cabinet Puck operates as part of a 12V lighting system. Its operation is controlled by the connected Kichler 12V power supply and any associated switches or dimmers.

- **Power On/Off:** Use the switch connected to your 12V power supply to turn the puck light on or off.
- **Dimming:** This fixture is dimmable. If connected to a compatible Kichler 12V dimming power supply or dimmer switch, you can adjust the light intensity. Refer to your dimmer's instructions for specific operation.

CARE AND MAINTENANCE

The Kichler 4D Series Cabinet Puck requires minimal maintenance.

- **Cleaning:** To clean the fixture, ensure power is off. Wipe with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or electrical components.
- **LEDs:** The integrated LED light source is designed for long life and is not user-replaceable.
- **Inspection:** Periodically inspect the fixture and wiring for any signs of damage or wear. If damage is observed, disconnect power and consult a qualified electrician.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Loose wire connection. Faulty power supply or switch.	Check circuit breaker/fuse. Verify all wire connections are secure. Test power supply and switch with a multimeter or by connecting another known working 12V device.

Problem	Possible Cause	Solution
Light flickers or is dim.	Incompatible dimmer.	Ensure dimmer is compatible with 12V LED lighting.
	Insufficient power supply wattage.	Verify power supply wattage meets or exceeds the total wattage of connected fixtures.
	Loose connection.	Check all wire connections.
Fixture is hot to the touch.	Overloaded circuit.	Ensure total wattage of connected fixtures does not exceed power supply capacity.
	Improper ventilation.	Verify fixture is not covered or enclosed in a way that restricts airflow.

If troubleshooting steps do not resolve the issue, contact Kichler customer support or a qualified electrician.

PRODUCT SPECIFICATIONS

Model Number	4D12V30WHT
Brand	Kichler
Finish Color	Textured White
Material	Aluminum (Fixture Body), Polycarbonate (Lens)
Dimensions (L x W x H)	2.75" x 2.75" x 0.5"
Lamping Type	Integrated LED
Wattage	4 Watts
Voltage	12 Volts DC
Lumens	150 Lumens
Color Temperature	2700 Kelvin
CRI (Color Rendering Index)	90
Dimmable	Yes
Moisture Rating	Damp Rated
Installation Type	Flush Mount, Surface Mount
UPC	783927539166

WARRANTY INFORMATION

This Kichler product comes with a limited warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the official Kichler website or contact Kichler customer support. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, replacement parts, or further information, please contact Kichler customer support:

- **Website:** www.kichler.com (Please visit the official website for contact information and support resources.)

- **Phone:** Refer to the Kichler website for current customer service phone numbers.

When contacting support, please have your product model number (4D12V30WHT) and purchase date available.