



Manuals.plus /

› X-BULL /

› X-BULL Pressure Washer User Manual

X-BULL USAM-HPW002

X-BULL Pressure Washer User Manual

Model: USAM-HPW002

Brand: X-BULL

IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings and instructions before operating the pressure washer. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- **Electrical Safety:** Always connect the pressure washer to a grounded outlet. Do not operate in wet conditions or with damaged cords. Keep all connections dry and off the ground.
- **Water Pressure Safety:** The high-pressure stream can cause serious injury. Never direct the spray at people, pets, or electrical devices. Always wear appropriate eye protection.
- **Chemical Use:** Use only detergents approved for pressure washers. Follow detergent manufacturer's instructions for use and disposal.
- **General Operation:** Ensure all connections are secure before starting. Do not leave the pressure washer unattended while operating. Disconnect power and water supply when not in use.

PACKAGE CONTENTS

Verify that all items are present in the package before assembly.

- X-BULL Pressure Washer Main Unit
- High-Pressure Hose
- Spray Gun with Wand

- Adjustable Spray Nozzle
- Detergent Tank
- Power Cord with GFCI
- User Manual (this document)

ASSEMBLY INSTRUCTIONS

The main body of the X-BULL Pressure Washer is pre-assembled. Follow these steps to complete the setup.

1. **Attach the Handle:** Secure the handle to the main unit using the provided screws or clips.
2. **Connect High-Pressure Hose:** Connect one end of the high-pressure hose to the outlet on the pressure washer unit and the other end to the spray gun. Ensure connections are hand-tight and secure.
3. **Attach Spray Wand and Nozzle:** Insert the spray wand into the spray gun handle and twist to lock. Attach the adjustable spray nozzle to the end of the spray wand.
4. **Install Detergent Tank:** If applicable, slide the detergent tank into its designated slot on the unit.



Figure 1: Fully assembled X-BULL Pressure Washer, showing the main unit, hose reel, spray gun, and handle. The unit is red and black with a gold-colored handle bar.

OPERATING INSTRUCTIONS

Before First Use:

- Ensure the pressure washer is on a stable, level surface.
- Connect the garden hose to the water inlet on the pressure washer. Ensure the water supply is turned on fully.
- Squeeze the trigger on the spray gun to purge air from the system until a steady stream of water emerges. This protects the pump.

Starting the Pressure Washer:

1. Plug the power cord into a grounded electrical outlet. The GFCI (Ground Fault Circuit Interrupter) should be tested before each use.
2. Turn the power switch to the "ON" position. The motor will start.
3. Squeeze the spray gun trigger to begin spraying. Release the trigger to stop the flow and engage the automatic shut-off.

Using the Adjustable Spray Nozzle:

The adjustable spray nozzle allows you to change the spray pattern from a narrow, powerful stream to a wide, gentle fan. Rotate the head of the gun to select the desired spray pattern for your cleaning task.

Using the Detergent Tank:

1. Fill the detergent tank with pressure washer safe detergent. Do not use bleach or abrasive cleaners.
2. Ensure the adjustable nozzle is set to the low-pressure/detergent setting (usually a wide fan or specific soap nozzle).
3. Squeeze the trigger to apply detergent. The pressure washer will automatically mix the detergent with water.
4. After applying detergent, switch back to a high-pressure setting to rinse the surface.

Shutting Down:

1. Turn the power switch to the "OFF" position.
2. Unplug the power cord from the outlet.
3. Turn off the water supply.
4. Squeeze the spray gun trigger to release any remaining pressure in the system.
5. Disconnect the garden hose and high-pressure hose.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **Clean Nozzles:** Periodically clean the nozzle opening with the provided nozzle cleaning tool (if included) or a thin wire to remove any blockages.
- **Water Inlet Filter:** Check and clean the water inlet filter regularly to prevent debris from entering the pump.
- **Hose and Cord Inspection:** Inspect the high-pressure hose and power cord for any signs of damage before each use. Replace if damaged.
- **Winter Storage (if applicable):** If storing in freezing temperatures, drain all water from the pump, hose, and spray gun to prevent damage. Consider using a pump protector.
- **General Cleaning:** Wipe down the exterior of the unit with a damp cloth. Do not use harsh chemicals.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Motor does not start	No power, tripped GFCI, loose connection.	Check power outlet, reset GFCI, ensure all connections are secure.
Low or no pressure	Insufficient water supply, clogged nozzle, air in pump, kinked hose.	Ensure water supply is fully open, clean nozzle, purge air from system, straighten hose.
Pulsating pressure	Air in pump, restricted water flow, worn pump seals.	Purge air from system, check water inlet filter, ensure adequate water supply. If problem persists, contact support.
Detergent not dispensing	Nozzle not on detergent setting, detergent tank empty, clogged detergent line.	Set nozzle to detergent mode, refill tank, check for blockages in detergent line.

SPECIFICATIONS

Model Number	USAM-HPW002
Brand	X-BULL
Power Source	Corded Electric
Motor Power	2400 Watts
Maximum Pressure	3000 PSI
Flow Rate	1.6 GPM
Product Dimensions (L x W x H)	30.5 x 33 x 76.2 cm
Item Weight	11.7 kg
Color	Red

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product at the time of purchase or visit the official X-BULL website. Keep your purchase receipt as proof of purchase for warranty claims.

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact X-BULL customer support. Contact details are typically available on the product packaging or the manufacturer's official website.