

## Peakeep MHP-3129

# Peakeep Analog Alarm Clock MHP-3129 User Manual

Model: MHP-3129

## 1. INTRODUCTION

---

Thank you for choosing the Peakeep Analog Alarm Clock MHP-3129. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Please read this manual thoroughly before use to ensure proper function and longevity of the product.



Image 1.1: Front view of the Peakeep Analog Alarm Clock MHP-3129.

## 2. PRODUCT OVERVIEW

The Peakeep Analog Alarm Clock MHP-3129 is designed for reliable timekeeping and gentle wake-up experiences. Key features include:

- **Silent, Non-Ticking Movement:** Ensures a quiet sleeping environment.
- **7 Optional Wake-up Sounds:** Choose from various melodies, bird chirps, or a traditional beep.
- **Adjustable Alarm Volume:** Customize the alarm volume to your preference.
- **User-Friendly Nightlight:** Press the top bar for temporary illumination of the dial.
- **5-Minute Snooze Function:** Easily extend your sleep with a quick press.
- **Battery Operated:** Requires 3 AA batteries for operation.



*Image 2.1: The clock's silent, non-ticking movement ensures a peaceful sleep environment.*

### 3. SETUP

---

#### 3.1 Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery cover. The clock features a drop-down hinge battery cover to prevent loss.
3. Insert 3 AA batteries (included) according to the polarity indicators (+ and -) inside the compartment.
4. Close the battery cover securely.



*Image 3.1: The drop-down hinge battery cover for easy and secure battery installation.*



Image 3.2: Rear view showing the battery compartment and controls.

## 4. OPERATION

### 4.1 Setting the Time

1. Locate the 'TIME SET' knob on the back of the clock.
2. Rotate the knob in the direction of the arrow to set the current time. Ensure you set the correct AM/PM if applicable (the alarm hand will indicate this).

### 4.2 Setting the Alarm

1. Locate the 'ALARM SET' knob on the back of the clock.
2. Rotate the knob in the direction of the arrow to set your desired alarm time.
3. Ensure the alarm ON/OFF switch (located on the side) is in the 'ON' position.

### 4.3 Selecting Alarm Sounds

The clock offers 7 distinct wake-up sounds:

- 1. Jasmine Flower (Kenny G)
- 2. (Japanese Pop Music)

- 3. MARIAGE D'AMOUR (French Music)
- 4. Cannon
- 5. Jasmine (Chinese Folk Music)
- 6. Birdsong
- 7. Beep (Traditional)

To select an alarm sound, rotate the 'SOUNDS OPTIONS' knob on the front of the clock to your preferred number (1-7).



Image 4.1: Front view highlighting the Sound Options and Volume Control knobs.

#### 4.4 Adjusting Alarm Volume

To adjust the alarm volume, rotate the 'VOLUME' knob on the front of the clock. You can set the volume from 25dB to 85dB to suit your preference, whether you are a light or heavy sleeper.





*Image 4.2: Visual representation of alarm sound options and volume adjustment.*

#### **4.5 Snooze Function**

When the alarm sounds, press the large top bar of the clock to activate the snooze function. The alarm will be temporarily suspended for 5 minutes and will sound again after this period. This can be repeated for approximately 1 hour.



*Image 4.3: Activating the 5-minute snooze by pressing the top bar.*

#### **4.6 Nightlight Function**

To view the time in the dark, press the large top bar of the clock. The dial will illuminate temporarily for a few seconds, providing clear visibility without being overly bright.



*Image 4.4: The clock's nightlight function providing temporary illumination.*



*Image 4.5: The temporary light feature for checking time in low light conditions.*

#### **4.7 Alarm ON/OFF Switch**

A separate alarm ON/OFF switch is located on the side of the clock. Slide this switch to 'ON' to enable the alarm or 'OFF' to disable it completely.



Image 4.6: Side view illustrating the large top bar and the separate alarm switch.



Image 4.7: Detail of the separate alarm ON/OFF button for easy control.

## 5. MAINTENANCE

### 5.1 Cleaning



To clean the clock, gently wipe the surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the finish.

### 5.2 Battery Replacement

When the clock's performance diminishes or the display becomes dim, it is time to replace the batteries. Follow the battery installation steps in Section 3.1. Always use fresh AA batteries.

### 5.3 General Care

- Keep the clock away from damp environments.
- If the clock will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

## 6. TROUBLESHOOTING

- **Clock not working / Display is dim:**  
Check battery installation. Ensure batteries are inserted correctly with correct polarity. Replace with fresh batteries if necessary.
- **Alarm not sounding:**  
Verify that the alarm ON/OFF switch is in the 'ON' position. Check if the alarm time is set correctly. Ensure batteries are not depleted.
- **Alarm sound is too quiet/loud:**  
Adjust the 'VOLUME' knob on the front of the clock to your desired level.
- **Nightlight not working:**  
Ensure batteries are not depleted. Press the large top bar firmly.

## 7. SPECIFICATIONS

Brand	Peakeep
Model Number	MHP-3129
Display Type	Analog
Power Source	Battery Powered (3 AA batteries)
Special Features	7 Optional Alarm Sounds, Adjustable Volume, Nightlight, Snooze, Non-Ticking
Product Dimensions	4.5"W x 2.5"D x 5"H (11.43 cm W x 6.35 cm D x 12.7 cm H)
Material	Plastic
Item Weight	0.317 ounces (approximately 9 grams)



Image 7.1: Product dimensions of the Peakeep Analog Alarm Clock MHP-3129.

## 8. WARRANTY AND SUPPORT



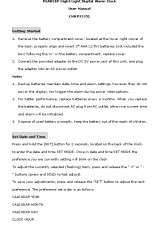

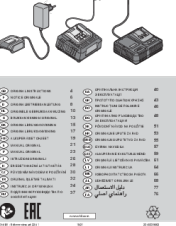
### 8.1 Warranty Information

This Peakeep Analog Alarm Clock MHP-3129 comes with a manufacturer's limited warranty for 90 days from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

### 8.2 Customer Support

For any questions, concerns, or technical assistance not covered in this manual, please contact Peakeep customer support through the retailer's platform or the official Peakeep website. Please have your model number (MHP-3129) and purchase date ready when contacting support.

## Related Documents - MHP-3129

<p><b>PEAKEEP</b></p> <p>Battery Operated Digital Clock, Alarm Clock (Model: MHP6010-B)</p>  <p>QUESTIONS? Contact: <a href="mailto:sales@myhome.com">sales@myhome.com</a></p>	<p><a href="#">Peakeep MHP6010-B Battery Operated Digital Alarm Clock User Manual</a></p> <p>This manual provides instructions for setting up and using the Peakeep MHP6010-B Battery Operated Digital Alarm Clock, including features like voice activation, adjustable brightness, and alarm volume.</p>
<p><b>PEAKEEP</b></p> <p>Digital Clock, Alarm Clock (Model: MHP6010-DC)</p>  <p>QUESTIONS? Contact: <a href="mailto:sales@myhome.com">sales@myhome.com</a></p>	<p><a href="#">Peakeep MHP6010-DC Digital Alarm Clock User Manual</a></p> <p>User manual for the Peakeep MHP6010-DC digital alarm clock. Covers setup, time/alarm setting, snooze, dimmer, USB port, troubleshooting, and warranty information. Features include a large display, adjustable alarm volume, and battery backup.</p>
<p><b>PEAKEEP Night Light Digital Alarm Clock</b> (Model: MHP3235)</p>  <p>QUESTIONS? Contact: <a href="mailto:sales@myhome.com">sales@myhome.com</a></p>	<p><a href="#">PEAKEEP Night Light Digital Alarm Clock User Manual MHP3235</a></p> <p>Comprehensive user manual for the PEAKEEP MHP3235 Night Light Digital Alarm Clock, covering setup, time/date setting, alarm functions, snooze, volume, DST, display dimmer, night light, USB charging, time format conversion, safety, maintenance, and troubleshooting.</p>
<p><b>Master Massage</b></p> <p>Important Instructions - Do Not Destroy</p>  <p>QUESTIONS? Contact: <a href="mailto:sales@myhome.com">sales@myhome.com</a></p>	<p><a href="#">Master Massage Table Warmer Pad: User Manual, Setup, and Safety Guide</a></p> <p>Detailed instructions for operating and maintaining the MHP Massage Table Warmer Pad by Master Massage Equipment. Includes setup, temperature control, auto-off timer, important cautions, and warranty information.</p>
<p><b>SKIL</b></p> <p>CHARGER</p>  <p>QUESTIONS? Contact: <a href="mailto:sales@myhome.com">sales@myhome.com</a></p>	<p><a href="#">SKIL Charger 3122/3123/3124/3129 User Manual</a></p> <p>Comprehensive user manual for SKIL battery chargers models 3122, 3123, 3124, and 3129. Includes introduction, technical data, safety instructions, usage guidelines, maintenance, and environmental information.</p>

