

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lasko](#) /

› [Lasko M16900 16-inch 3-Speed Oscillating Wall Mount Fan User Manual](#)

## Lasko M16900

# Lasko M16900 16-inch 3-Speed Oscillating Wall Mount Fan User Manual

Model: M16900

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this fan.
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- To reduce the risk of fire or electric shock, do not expose this fan to water or rain.
- This fan is intended for indoor use only. Do not use outdoors.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Always unplug fan before moving, servicing, or cleaning.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as it may cause an electric shock or fire, or damage the fan.
- Do not block air intakes or exhaust in any manner. Do not use on any soft surface, like a bed, where openings may become blocked.
- This fan is not intended for use in wet or damp locations.
- Always plug fans directly into a wall outlet/receptacle. Never use with an extension cord.
- Do not operate this fan near a window. Rain and moisture may create an electrical hazard.
- This fan is not suitable for use in agricultural facilities including areas where livestock, poultry or other animals are confined. Please refer to National Electric Code (NEC) Article 547-7 (2008) or applicable state or local codes or standards relating to electrical requirements for Agricultural Buildings.
- This fan is not suitable for use in hazardous locations. Please refer to National Electric Code (NEC) Article 500 or applicable state or local codes or standards relating to electrical requirements for Hazardous locations.


## PRODUCT OVERVIEW

The Lasko M16900 is a 16-inch wall mount fan designed for indoor use, offering efficient air circulation with its 3-speed settings and oscillating function. Its compact design makes it ideal for spaces where floor or desk space is limited.



**Figure 1:** Front view of the Lasko M16900 16-inch Wall Mount Fan, showcasing its grille and central Lasko logo.

Key features include a multi-position pivot for adjustable airflow direction, widespread oscillation for broader coverage, and convenient rotary and pull-cord controls for ease of use.

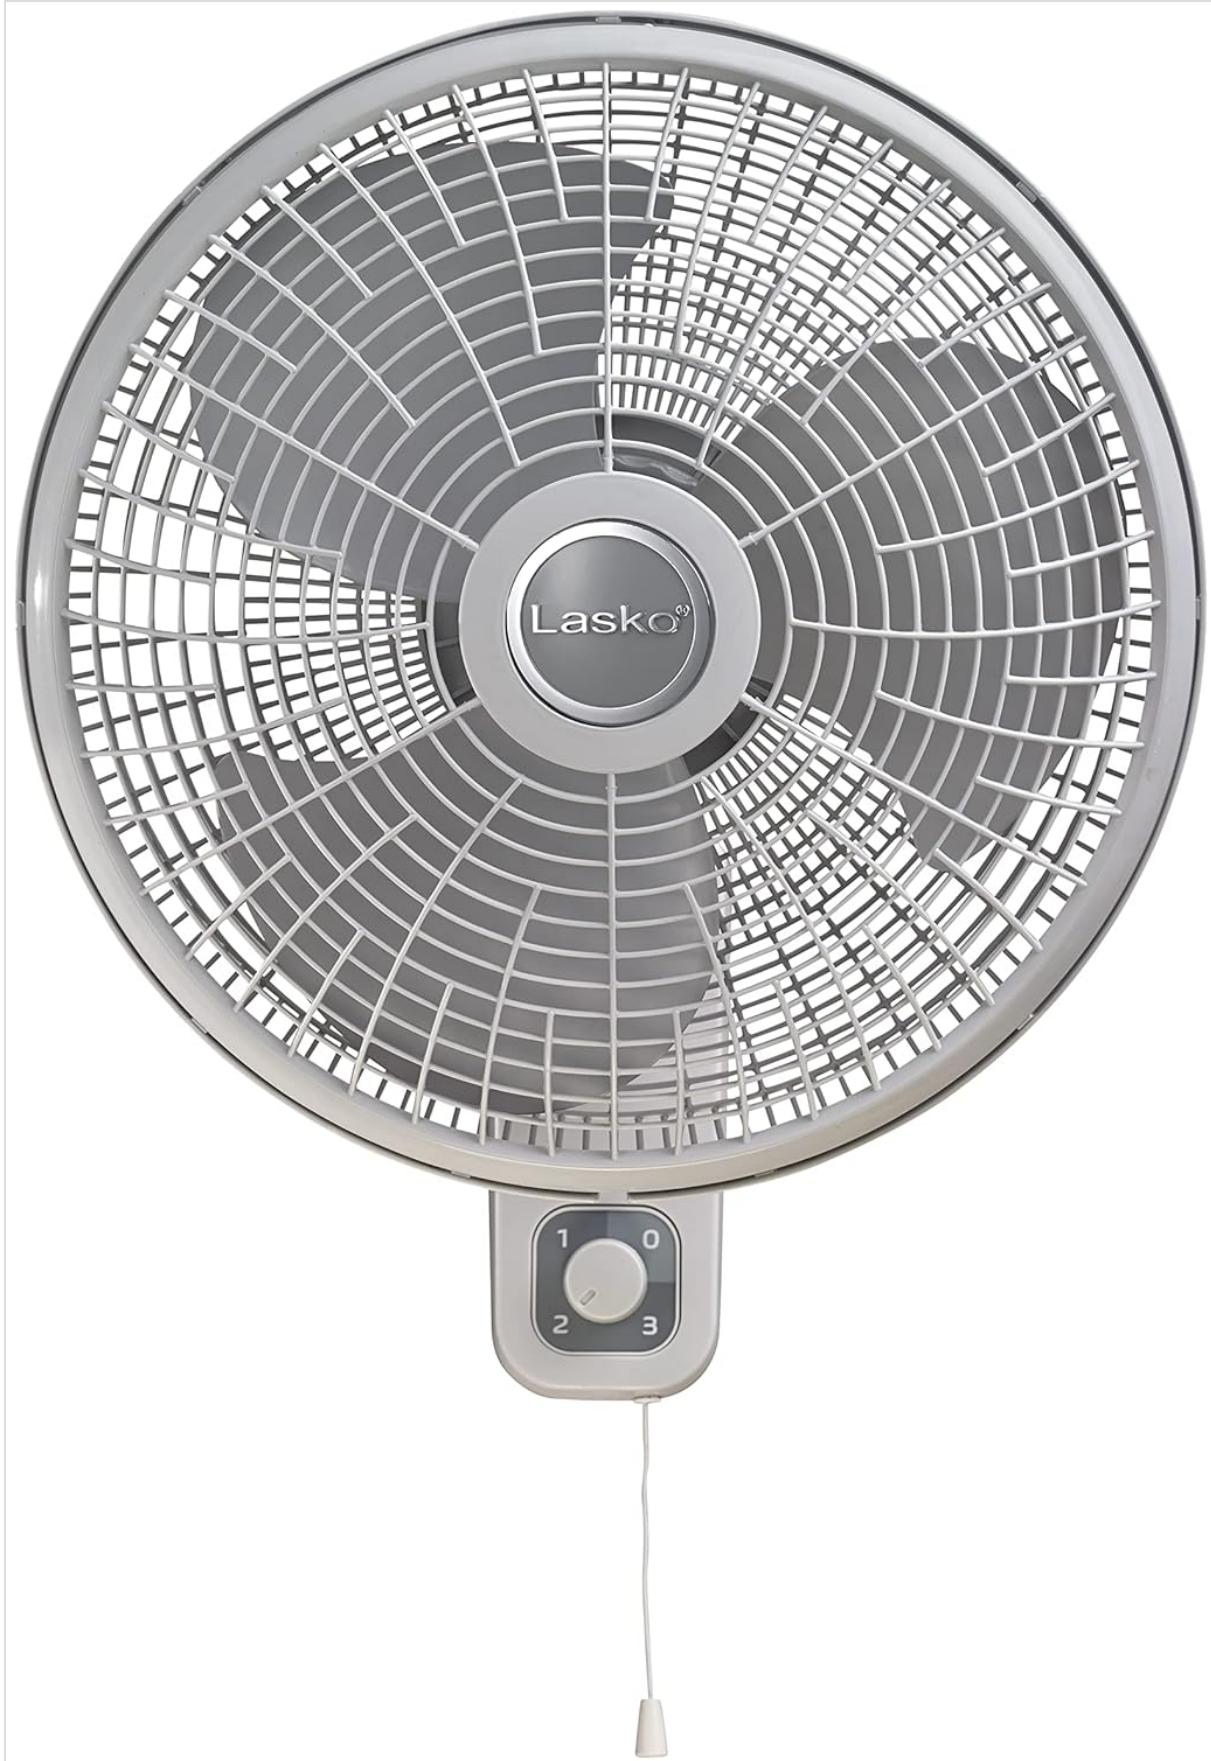

**Figure 2:** Diagram illustrating the fan's main features: 3 refreshing speeds, widespread oscillation, and a tilt-back head for directional airflow.

## SETUP AND INSTALLATION

The Lasko M16900 wall mount fan is designed for simple assembly and installation. Follow these steps to securely mount your fan.

1. **Unpack:** Carefully remove all components from the packaging. Ensure all parts are present before beginning assembly.
2. **Choose Location:** Select a suitable wall location, preferably near a wall stud for secure mounting. Ensure the location allows for proper air circulation and access to a power outlet.
3. **Mounting Bracket:** Fasten the mounting bracket securely to the wall using the supplied screws. It is recommended to screw into a wall stud for maximum stability.
4. **Attach Fan:** Once the bracket is secure, slide the fan unit onto the mounting bracket. Ensure it clicks into place or is firmly seated.
5. **Connect Power:** Plug the 5 ft. electric cord directly into a standard wall outlet. Avoid using extension cords.



**Figure 3:** The Lasko M16900 fan installed on a wall, demonstrating its space-saving design in a home environment.

## OPERATING INSTRUCTIONS

The Lasko M16900 fan features simple controls for adjusting speed and oscillation.



**Figure 4:** Detailed view of the fan's control panel, showing the rotary dial for speed selection and the pull cord for power.

- **Power On/Off:** The fan can be turned on or off using the pull cord located at the bottom of the control panel. Pull the cord once to turn on, and again to cycle through speeds or turn off.
- **Speed Selection:** Use the rotary dial on the control panel to select one of the three available speeds (1, 2, or 3). The pull cord can also cycle through these speeds.
- **Oscillation:** To activate or deactivate the oscillation feature, locate the lever on top of the fan head. Push it down to enable oscillation, and pull it up to stop the fan in a fixed position.
- **Adjusting Tilt:** The fan head can be tilted up or down to direct airflow as desired. Gently adjust the fan head to the desired angle.



**Figure 5:** The fan head shown at various tilt angles, highlighting its adjustable airflow direction capability.

## MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and longevity of your Lasko M16900 fan.

- **Cleaning:** Always unplug the fan before cleaning. Use a soft cloth to gently wipe the exterior surfaces. For the fan blades and interior, the front grille can be removed for easier access. Refer to

the assembly instructions for grille removal.

- **Storage:** When not in use for extended periods, store the fan in a cool, dry place. It is recommended to cover the fan to protect it from dust.
- **No Lubrication:** The fan motor is permanently lubricated and requires no further lubrication.

## TROUBLESHOOTING

If your fan is not operating as expected, consult the following common issues and solutions:

Problem	Possible Cause	Solution
Fan does not operate.	No power to the unit.	Ensure the fan is plugged into a live electrical outlet. Check household fuse/circuit breaker.
Fan is noisy.	Loose parts or debris.	Unplug the fan and check for any loose parts or obstructions in the grille or blades. Clean if necessary.
Oscillation not working.	Oscillation lever is not engaged.	Ensure the oscillation lever on top of the fan head is pushed down to engage the oscillation function.

If the problem cannot be resolved by the above steps, do not attempt to repair the fan yourself. Contact Lasko customer service for assistance.

## SPECIFICATIONS

- **Model:** M16900
- **Blade Length:** 16 Inches
- **Speeds:** 3
- **Power Source:** Corded Electric
- **Voltage:** 120 Volts
- **Wattage:** 67 watts
- **Noise Level:** 45 Decibels
- **Product Dimensions:** 14.5"D x 18"W x 22.63"H
- **Item Weight:** 7 Pounds
- **Control Method:** Rotary Dial, Pull Cord
- **Special Features:** 3 Speeds, Adjustable Tilt, Oscillating, Wallmount
- **Indoor/Outdoor Usage:** Indoor
- **UPC:** 046013461414

## WARRANTY AND SUPPORT

This Lasko M16900 fan comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use.

The warranty does not cover damage caused by misuse, accident, abuse, alteration, or improper installation. For warranty claims or technical support, please contact Lasko customer service.

### Customer Service:

- Refer to the contact information provided on the Lasko official website or product packaging.

- Have your model number (M16900) and proof of purchase ready when contacting support.

---

© 2026 Lasko Products. All rights reserved.

This manual is for informational purposes only. Lasko Products reserves the right to make changes without prior notice.